 
 


QUICK START GUIDE Read all warnings.
Full operation and training guide included.

 
Components

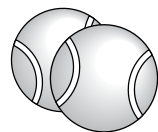


Tennis Balls

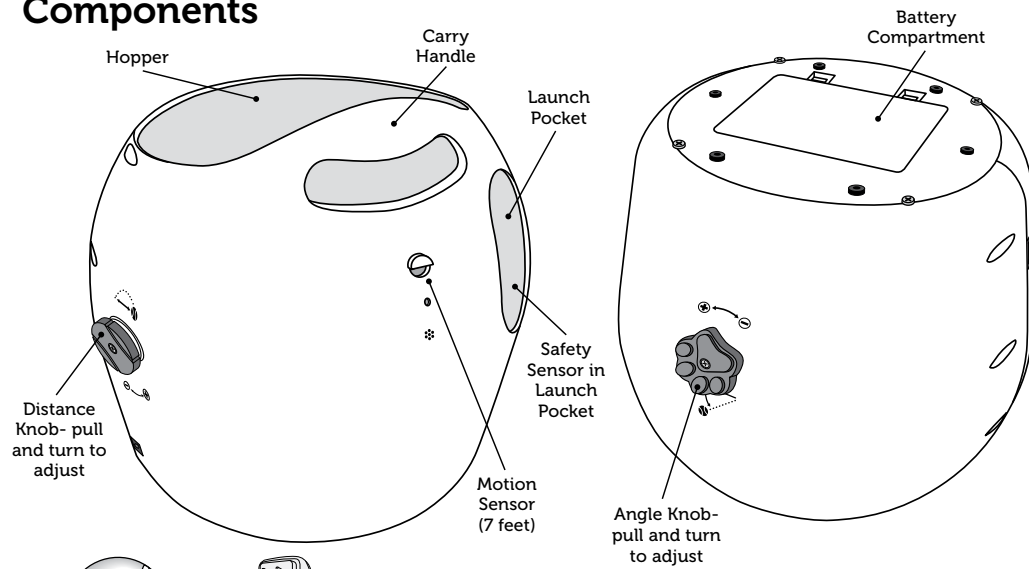

Power Cord and AC adapter




Distance Knob:
PULL AND TURN left (counter clockwise) to increase distance.

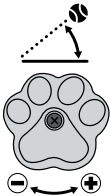

Angle Knob:
PULL AND TURN left (counter clockwise) for higher angle.



The motion sensor detects movement from up to 7 feet away. Your dog should be standing behind that distance. Motion detected will pause the machine for 5 seconds

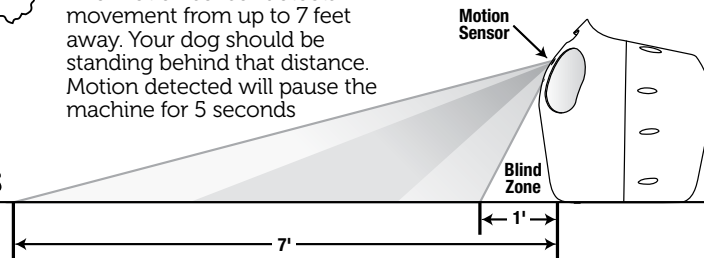

Customer Care Center 1-800-732-2677

For First Time Use

If your dog seems anxious or afraid (i.e. covers or moves away from the launcher, barks at the launcher etc.) of the sounds the launcher makes, you'll want to introduce it to him slowly. Grab some delicious treats and a clicker if you have it. Start by placing the machine in the play area with it turned off. Let your dog notice and approach the launcher by his own choice. When your dog looks at the machine, click your clicker or say "Yes!" and give him a treat. Do this multiple times. You should also click your clicker or say "Yes!" if he walks towards the launcher or interacts with it.

When your dog seems comfortable around the launcher when it is turned off, place the machine further away from him and turn it on without any balls in it. The launcher should beep a few times. When it beeps, click or say "Yes!" and give him a treat. Do this several times until he looks comfortable and seems relaxed. Repeat this when he moves closer to the launcher.


The final step is to get your dog comfortable with the unit launching the ball. Because the launching sound can be a little loud, this might be the part your dog is most anxious about. Keep the machine in the other room or further away in the yard. Have someone else place the ball in the machine and when the ball launches, click your clicker or say "Yes!" and deliver tasty treats. Do this several times. When he is comfortable with the unit launching a ball at a distance, bring the launcher closer to him and do this again.

When he is completely comfortable with the ball launching, you can begin playtime with your dog and the launcher!

How to Operate

- Install 6 D alkaline batteries (not included) (1) or use the power cord/16V-DC adapter.
- The distance and angle knobs will be at the lowest setting. To change the distance and/or angle, adjust paw and tennis ball knobs by pulling knob out and turning.
- Paw Knob – Angle (2) – to increase the angle, pull and turn the paw knob left.
- Tennis Ball Knob – Distance (3) - to increase the distance, pull and turn the tennis ball knob left.
- Place tennis ball in hopper, then fetch when launched. Return ball back to hopper to play again.
- Turn power off when not in use. Do not leave outdoors when not in use.

Indoor and outdoor use - Play responsibly
See Operating and Training Guide for full instructions

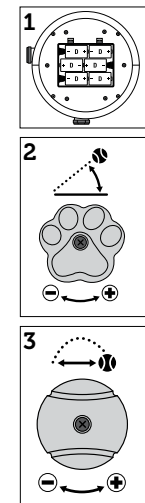


www.petsafe.net

<p>Radio Systems CORPORATION The world leader in pet training products</p>	RSC Part #: 400-1988
	Description: GUIDE QUICK START PTY00-14665
<p>Material: 80 grams Color: White Printing: Black Process: Offset Coating: None</p>	Created by: RWL
	Initial Creation Date: 7/1/2015
	Approved by: M. SWEETNAM
	Date Approved: 7/31/2015
	Program used: INDESIGN CC2014
	Revision: 000 ECO: INITIAL RELEASE
	Revision Description: RELEASE TO PRODUCTION
Revision Date: NA	

QUICK START GUIDE Read all warnings.
Full operation and training guide included.


⚠ WARNING

 - Monitor your pet's play.
- The Ball Launcher is NOT A CHILD'S TOY. Do not allow unsupervised use while in the presence of children.
- ALWAYS have yourself and your dog stand either to the side or 7 feet away from the front of the unit when the ball launcher is turned ON.
- NEVER touch the safety sensor in the launch pocket. This sensor is for your safety and if it is touched during operation or while the unit is ON it may cause serious injury.
- When loading the Ball Launcher, never reach your hands or body inside the working area of the device.
- Risk of electric shock. Do not use the device in wet conditions or on wet grass.
- The power cord should be used at the owner's discretion. Do not use power adapter outdoors.
- Balls can be considered a Choking Hazard. Do not allow unsupervised use.
- If the sensors become dirty in the launch pocket or there is an obstruction, turn power off and wipe the sensor with a cotton swab or use an old toothbrush to remove the obstruction. Do not place your hand inside the launch pocket.
- Do not use in extreme heat or cold. Always consider your pet's health.

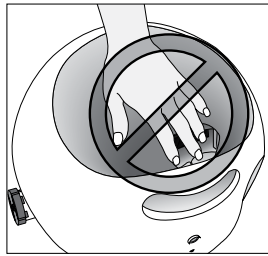

⚠ WARNING

 Do not place hand in hopper.

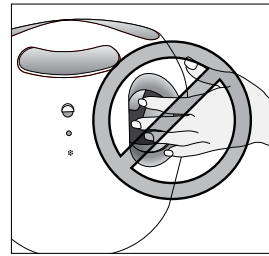

⚠ WARNING

Do not place hand in launch pocket.

⚠ CAUTION

- Only use the Ball Launcher as indicated in this operating guide.
- Launching indoors: For best use indoors, use the lowest angle and distance setting. Increase angle and distance at user's own risk.

CAUTION

- Do not drop, kick or throw the ball launcher.
- For your dog's safety, the Ball Launcher will only play for 15 minutes at a time, then rest for 15 minutes. The 15 minute play period will only begin once a ball has been dropped into the hopper.

Customer Care Center 1-800-732-2677

DO's & DON'Ts

- DO:** Adjust distance & angle settings accordingly for indoor vs. outdoor play.
- DO:** Monitor your dog's play.
- DO:** Help your dog to get used to the Ball Launcher before use.
- DO:** Teach your dog to drop the ball into the machine to launch.
- DO:** Place on a flat, level surface, NOT elevated.
- DON'T:** Put your hands into the launch area at any time.
- DON'T:** Use anything other than a tennis ball to launch.
- DON'T:** Launch a tennis ball at anyone.
- DON'T:** Submerge Ball Launcher in water or leave outside when not in use.

Frequently Asked Questions

How many balls can be loaded into the hopper at once?	• No more than three at a time. It is recommended to load one at a time for use during independent play, or when launching on higher settings.
How far does the launcher shoot the balls and at what angle?	• There are 9 distance settings and 6 angle settings. Depending on which settings you use, the Ball Launcher will shoot the balls up to 30 feet and between 20°-45°.
Can I use the Ball Launcher indoors and outdoors?	• Yes! The Ball Launcher is specifically designed to be used indoors and outdoors with multiple distance and angle settings.
How far should my dog stand back from the machine before the ball launches?	• The motion sensor detects movement from up to 7 feet away. Your dog should be standing behind that distance or to the side of the launch pocket area, out of view of the motion sensor.
Will the Ball Launcher turn off automatically?	• No, however, the Ball Launcher will go to sleep after 15 minutes of play. It will then rest for 15 minutes and cycle through another 15 minutes. This continues until the power button is turned off.
How do I teach my dog to use the machine on their own?	• Refer to Operating and Training Guide p. 6-9.



protect. teach. love.®

Radio Systems® Corporation
10427 PetSafe Way
Knoxville, TN 37932
1-800-732-2677
www.petsafe.net

©2015 Radio Systems Corporation
400-1988

www.petsafe.net

Radio Systems PetSafe Europe Ltd.
2nd Floor, Elgee Building, Market Square
Dundalk, Co. Louth, Ireland
+353 (0) 76 892 0427