


Operating Guide

操作指南 操作指南

MINI-CN MINI-TW

Mini Pet Fountain - 1.2 Litres 迷你型寵物噴泉飲水器 - 1.2 公升 迷你型宠物喷泉饮水器 - 1.2 公升

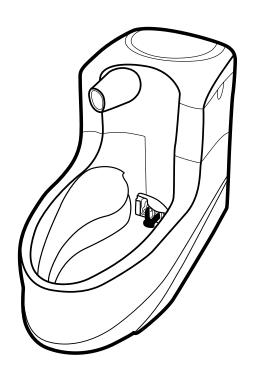



Please read this entire guide before beginning 請在開始使用產品前閱讀本指南全文 请在使用之前全面阅读本指南 Hereinafter Radio Systems Corporation and any other affiliate or Brand of Radio Systems Corporation may be referred to collectively as "We" or "Us".

IMPORTANT SAFETY INFORMATION

Explanation of Attention Words and Symbols used in this guide

▲WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

NOTICE

NOTICE is used to address safe use practices not related to personal injury.

▲WARNING

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- To reduce the risk of injury, close supervision is necessary when an appliance is used by or near children.
- To protect against electric shock, do not place Power Cord or plug in water or other liquids.
- Only use attachments recommended or sold by the manufacturer.
- Do not use outdoors. FOR INDOOR HOUSEHOLD USE ONLY.
- Do not unplug by pulling on Power Cord. To unplug, grasp the plug, not the Power Cord.
- Do not operate any appliance if it has a damaged Power Cord or plug, or if it is malfunctioning or has been damaged. Call Customer Care Centre immediately for further instructions.
- For a portable appliance To reduce the risk of electrical shock, do not place or store an appliance where it can fall or be pulled into a tub or sink.
- Always unplug any appliance when not in use, before putting on or taking off parts and before cleaning. Never pull on the electrical Power Cord to remove the plug from the wall outlet.
- Do not use an appliance for anything other than its intended use.
- If the plug of this device gets wet, turn off the electricity to that outlet. Do not attempt to unplug.
- Examine this appliance after installation. Do not plug in if there is water on the Power Cord or plug.

CAUTION

- Do not allow pets to chew on or swallow any parts. If you are concerned about the Power Cord, purchase a cord conduit (a hard plastic protector) at any hardware store to protect the Power Cord.
- The Pet Fountain parts are BPA-FREE. However, some animals
 have been known to be sensitive to plastic food and water
 containers. If your animal shows signs of an allergic reaction to the
 plastic, please discontinue use until you have consulted with your
 veterinarian.

NOTICE

- The Pet Fountain is intended to run continuously (always plugged into electricity), as long as the water level is maintained and the Pet Fountain is cleaned regularly. Be sure to check the Pet Fountain regularly to help prevent damage to the Pump, as the water may get consumed or evaporate causing the Pump to run dry.
- Do not attempt repairs on the Pump yourself.
- To avoid the possibility of the plug or outlet getting wet, the outlet should always be above the level of the Pet Fountain.
- If an extension cord is necessary, an extension cord with a proper rating should be used.
- The electrical use of this appliance is 2.5 watts.
- Do not use appliance for anything other than intended use. The use
 of attachments not recommended or sold by the manufacturer may
 cause an unsafe condition. Do not modify the unit.
- Do not install or store appliance where it will be exposed to weather or temperatures below 4.5° C.
- Read and observe all important notices listed on the appliance and in the packaging.

SAVE THESE INSTRUCTIONS

Thank you for choosing the PetSafe® Brand. You and your pet deserve a companionship that includes memorable moments and a shared understanding together. Our products and training tools enhance the relationship between pets and their owners. If you have any questions about our products or training your pet, please visit our website at www.petsafe.net or contact our Customer Care Center at +86 (0) 755 2671 5353.


To get the most protection out of your warranty, please register your product within 30 days at www.petsafe.net. By registering and keeping your receipt, you will enjoy the product's full warranty and should you ever need to call the Customer Care Center, we will be able to help you faster. Most importantly, your valuable information will never be given or sold to anyone. Complete warranty information is available online at www.petsafe.net.

Table of Contents


Components
eatures
Zey Definitions
Operating Instructions
ountain Disassembly & Cleaning
ountain Reassembly
ump Maintenance
he Fountain and Your Environment
ips On use
Varranty and Customer Care
Compliance
nportant Recycling Advice
erms of Use and Limitation of Liability

4

Components

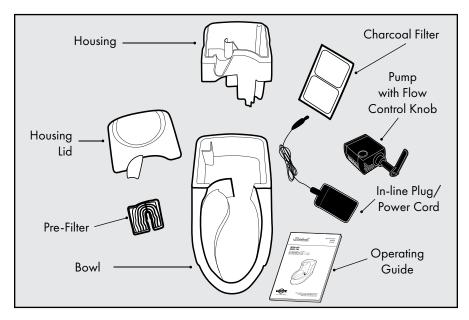

Features

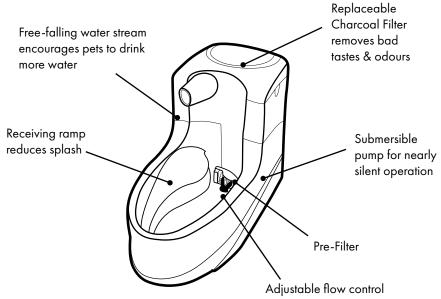

1.2 L Water Capacity

Low-Voltage (12V) System

Key Definitions

Housing: The water is pumped up through the Housing to cycle through the Charcoal Filter and out the spout to create a waterfall into the Bowl.

Housing Lid: The Housing Lid snaps in place over the Housing, keeping pets out of the Charcoal Filter.

Charcoal Filter: This 3-layer carbon filter is made with granulated carbon derived from coconut shells. The Charcoal Filter absorbs bad tastes and odours as the water passes through and helps keep the water tasting fresh and more appealing to pets.

Bowl: The Bowl is the foundation of the Pet Fountain. It houses the Pump and has a Power Cord "Pass-through" to hide the Power Cord from view.

Pre-Filter: The small intake grate catches large particles such as hair and kibble before they reach the Charcoal Filter. The Pre-Filter can be removed by pulling up on the lip at the top. To replace, slide back into place over the Flow Control Knob and push down until it clamps around the knob.

Flow Control Knob: The black knob attaches to the Faceplate and adjusts the rate of water flow. The Pre-Filter will snap around the neck of the Flow Control Knob which will lock it into place.


Pump (Motor): The small aquarium Pump can be partially dismantled for cleaning. **Important:** THE PUMP IS NOT DISHWASHER SAFE! Remove Pump from Pet Fountain before cleaning (See section "Pet Fountain Disassembly & Cleaning").

Operating Instructions


Important: DO NOT RUN DRY - FOR INDOOR USE ONLY. Pet Fountain will come fully assembled and ready for use.

- As with any electrical device, check the electrical Power Cord for any tears or damage before use.
- 2. Make sure the Inline Plug is fully connected (No silver showing).
- 3. Remove the Housing Lid by placing your index fingers into the inset grooves on either side of the Housing Lid. Lift up. Set the Housing Lid aside.
- 4. Insert the Charcoal Filter. The filter will fit into the two triangular slots located on the right side of the Housing. The filter fits narrow side down and the white side faces the front of the Pet Fountain (Fig. 1). The filter will slide easily into place, but make sure it is pushed all the way down.

Important: Rinse the Charcoal Filter thoroughly under cool water before placing in the Pet Fountain. This will remove any loose charcoal dust, which is harmless. A small amount of charcoal dust may shed for the life of the filter. This is normal and not harmful to your pet.

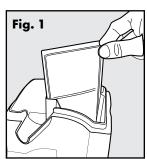

- 5. Place Pet Fountain in desired location. Do not pick up a full Pet Fountain by the Housing. Only pick up the Pet Fountain by placing both hands underneath the base of the Pet Fountain and grip the sidewalls for a sturdy hold. If placing on carpet, tile or wood flooring use a protective mat or other durable, water resistant surface to protect your floor from splashing or dripping from your pet.
- Fill the unit with water. This includes both the Bowl and the Filter Housing. This will prime the Pump. Replace the Housing Lid.
- 7. Before you plug the Pet Fountain in, make sure the Power Cord and your hands are dry. Plug the Pet Fountain into a standard electrical outlet.
- 8. Set your desired flow rate with the Flow Control Knob, located to the right of the splash ramp. In the 10 o'clock position for a smaller stream or in the 2 o'clock position for a strong stream (**Fig. 2**).
- Add water to the Bowl as needed. Do not let the
 water level fall below the Flow Control Knob or
 you may risk Pump failure. Replacement Pumps are
 sold separately by contacting the Customer Care
 Centre at asiacc@petsafe.net.

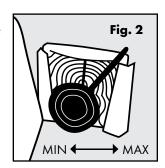

Pet Fountain Disassembly & Cleaning


Important: Pet Fountain must be cleaned to continue working normally.


CHARCOAL FILTERS: Change every 2 to 4 weeks.


- 1. Charcoal Filters should be changed every two to four weeks. Replace the filters more frequently when using the Pet Fountain for multiple pets or pets that produce a lot of saliva.
- 2. Charcoal Filters are an added feature of the Pet Fountain. Their use is not required for normal operation, but will keep the Pet Fountain water cleaner.
- 3. Charcoal Filters may be rinsed out when the Pet Fountain is cleaned. Never wash the filter with soapy water, you will not be able to remove the soap residue.

PET FOUNTAIN: Clean once a week.

- 1. Unplug Pet Fountain, remove Housing Lid, and remove the Charcoal Filter.
- 2. Empty the water out of the Pet Fountain.
- 3. Remove the Pre-Filter by gently pulling up on the top lip of the Pre-Filter and wash with soap and water (**Fig. 3**).
- Remove the Housing by gently pushing in on either side of the Pet Fountain where the curve meets the seam. Gently lift up (Fig. 4 & 5).

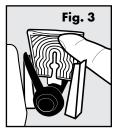


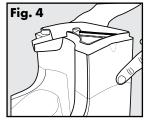


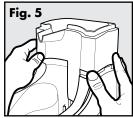

Important: You will notice the right side of the Housing will offer some resistance as the water Intake Tube pulls away from the Pump.

 Next, remove the Pump (Fig. 6) by first disconnecting the Inline Plug (Fig. 7), then lift it out of the Pet Fountain. Clean away any hair or kibble that may have accumulated around the Flow Control Knob and the Intake Plate of the Pump.

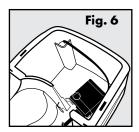

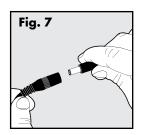

- 6. Once the Pet Fountain is completely disassembled you will have: 4 plastic parts and the Pump.
- 7. Clean the Pet Fountain parts with warm water and soap. You can also put the Pet Fountain in the top rack of the dishwasher. Remove the Pump before placing the Pet Fountain in the dishwasher. If possible, it is recommended that you turn down the heat of the water inside the dishwasher.
- 8. If you have trouble reaching certain spots or getting hard-to-reach corners, try using a cotton swab or puchase a Drinkwell* Cleaning Kit, a 3-Brush Kit. To purchase a Cleaning Kit, visit our website at www.petsafe.net to locate a retailer near you or contacting the Customer Care Centre at asiacc@petsafe.net.

Pet Fountain Reassembly

1. Replace the Pump into its location between the four (4) 12.7 mm posts on the right side of the Pet Fountain. Gently push down to engage the suction cups (**Fig. 8 & 9**).


Fig. 8





Fig. 9



 Thread the plug through the opening in the back left corner of the Bowl (Fig. 10). Next, thread the Power Cord along the back of the Pet Fountain to the Power Cord "Pass-through" (Fig. 11). Use this "Pass-through" to keep the Power Cord from showing.

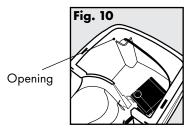


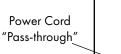

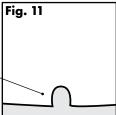


Line up the Filter Housing unit over the Pump and then the Bowl. You will want to line up the Intake Tube to fit directly into the Pump. Once in place, gently push down, locking the Filter Housing into place.

- Replace the Pre-Filter over the Flow Control Knob by sliding the narrow end in first. The lip on the top of the Pre-Filter will be facing the front of the Pet Fountain, push down to snap it into place over the Flow Control Knob (Fig. 12).
- 5. Replace the Charcoal Filter and Housing Lid.

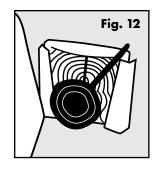

Pump Maintenance

Important: Cleaning the Pump is essential to the longevity of the Pet Fountain, as well as the cleanliness of the water. Clean the Pump every 2 weeks. Warranty may be voided if the Motor is not cleaned.

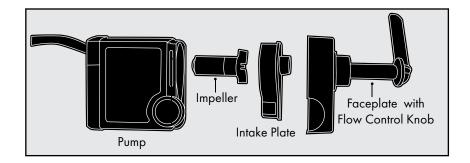


- Remove the Pre-Filter and Housing from the Bowl.
- 2. Gently lift the Pump out of its resting place. Suction cups on the bottom of the Pump will hold it in place. A small amount of force may be necessary.
- Once the Pump is out of the Pet Fountain, with your thumb and forefinger, gently
 squeeze on either side of the Faceplate, and pull it off. It may be necessary to
 insert a fingernail into the seam of the Faceplate to pry it off (Fig. 13-14).






10

4. Next, you will want to remove the Intake Plate by placing your fingernail underneath the small lip located on the narrow side of the tear drop shaped Intake Plate Pull-Tab and pull it out (**Fig. 15-16**).

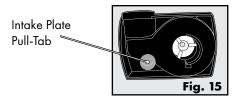



- 5. Once the Intake Plate is removed, you can also remove the Impeller (white, 3-bladed propeller) which is held in place magnetically. To remove the Impeller, use a fingernail to get underneath a blade and lift out (**Fig. 17**).
- 6. Once the Pump is disassembled you can clean the parts with warm soapy water. Use a cotton swab or the "motor" brush from the Drinkwell* Cleaning Kit to get into the Pump's motor cavity and remove any build-up. For added disinfecting and hard water removal, clean the Motor with white vinegar.

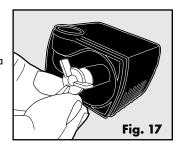

- 7. Once the parts are clean you can reassemble the Pump for use.
 - a) Replace the Impeller.
 - b) Replace the Intake Plate.
 - c) Replace the Faceplate with the Flow Control Knob attached to it.

The Pet Fountain and Your Environment

If you live in a humid environment and have problems with mold or algae, soak all Pet Fountain parts in a diluted vinegar solution (20% White Vinegar and 80% Water) for 10 minutes after regular cleaning. Also, pour the diluted vinegar solution into the Pump's motor cavity.

If you have hard water, small white mineral deposits may form on or inside the Pump. This can eventually prevent the Impeller from turning properly. To avoid replacement or damage to the Pump, please take the following precautions:

- Clean the Pump more frequently.
- Clean the Pump with a diluted vinegar solution weekly.
- Use bottled water instead of tap water.

General Tips

- When being introduced to the Pet Fountain, your pet may be cautious of this new
 and unusual object. After beginning operation of your Pet Fountain, simply allow
 your pet to adjust at his or her own pace. Some pets may take several days or
 longer to begin use, while others will start right away.
- Your pet may prefer that the Pet Fountain be placed away from their normal feeding area. Try placing it in another location, such as a different area of the kitchen or in a bathroom or utility room.
- · Add ice cubes to the bowl for refreshing, ice-cold running water!

Warranty and Customer Care

This product has the benefit of a 1 (one) year limited manufacturer's warranty. This warranty does not cover damage from accidents, misuse or abuse. It also specifically excludes incidental or consequential damages as allowed by law. Loss of function as a result of lack of cleaning, debris or mineralization from "hard water" does not qualify under this warranty (Refer to cleaning instructions and environmental notes).

Details of the warranty applicable to this product and its terms can be found at www.petsafe.net and/or are available by sending an email to: asiacc@petsafe.net.

Please contact your local Customer Care Centre with any set-up or technical difficulties you experience, and if necessary to assist in the replacement of your product. For a listing of Customer Care Centres in your area, visit our website at www.petsafe.net.

Compliance



This equipment complies with the EMC and Low Voltage Directives. Unauthorised changes or modifications to the product that are not approved by Radio Systems Corporation may violate EU regulations, could void the user's authority to operate the equipment, and will void the warranty.

The Declaration of Conformity can be found at: http://www.petsafe.net/customercare/eu_docs.php.

Important Recycling Advice



Please respect the Waste Electrical and Electonic Equipment regulations in your country. This equipment must be recycled. If you no longer require this equipment, do not place it in the normal municipal waste system. Please return it to where it was purchased in order that it can be placed in our recycling system. If this is not possible, please contact the Customer Care Centre for further information.

Terms of Use and Limitation of Liability

1. Terms of Use

Use of this Product is subject to your acceptance without modification of the terms, conditions, and notices contained herein. Use of this Product implies acceptance of all such terms, conditions, and notices. If you do not wish to accept these terms, conditions, and notices, do not use this Product.

2. Proper Use

If you are unsure whether this is appropriate for your pet, please consult your veterinarian or certified trainer, contact our Customer Care Center, or visit our Web Site at www.petsafe.net. Proper use includes reviewing the entire Operating Guide provided with your product and any specific caution statements.

3. No Unlawful or Prohibited Use

This product is designed for use with pets only. This device is not intended to harm, injure, or provoke. Using this Product in a way that is not intended could result in violation of Federal, State, or local laws.

4. Limitation of Liability

In no event shall Radio Systems Corporation or any of its associated companies be liable for (i) any indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the misuse of this Product. The Purchaser assumes all risks and liability from the use of this Product to the fullest extent permissible by law.

5. Modification of Terms and Conditions

Radio Systems Corporation reserves the right to change the terms, conditions, and notices under which this product is offered.

^{*} Registered in The U.S. Patent and Trademark Office

在下文中,Radio Systems Corporation 以及 Radio Systems Corporation 的其他任何聯屬公司或品牌可統稱為「我們」。

重要安全資訊

關於本指南中所用提醒文字與符號的說明

▲警告

警告表示存在危險狀況,若不予避免可能會導致死亡或嚴重傷害。

小心

小心不與安全提醒符號配合使用時,表示存在危險狀況,若不 予避免可能會對您的寵物造成傷害。

注意

注意用於說明與人身傷害無關的安全使用方法。

▲警告

當使用本電器時,應始終遵循下列基本安全預防措施,以避免 火災、觸電和/或人身傷害的危險:

- 為避免人身傷害的危險,當兒童使用本電器或在其附近活動時,務必仔細看護。
- 為防止觸電,請勿將電源線或插頭置於水或其他液體中。
- 僅可使用由製造商推薦或出售的附件。
- 不要在室外使用。僅可在室內作為家庭用途。
- 不要透過拉拽電源線而將其拔下。若要拔下電源線,請握住 插頭,而不是電源線。
- 若某一部電器隨附的電源線或插頭已損壞,或是該電器發生故障或已損壞,請勿操作。應立即致電客戶服務中心以取得進一步的說明。
- 對於可攜式電器 為避免觸電的危險,請勿將本電器放置或 貯存於可能會落入或拖入浴缸或水槽中的位置。
- 當不使用某一部電器時,或是在裝上或拆下部件之前,或在 進行清潔之前,務必拔下該電器的插頭。切勿拉拽電源線而 從牆上電源插座中拔下插頭。
- 不要將本電器用於除預期用途之外的其他任何用途。
- 若本電器的插頭被弄濕,請切斷供應給此電源插座的電力。
 而不要試圖拔下該插頭。
- 在本電器安裝完畢之後,應進行檢查。若電源線或插頭上沾水,請勿接通電源。

小心

- 不要讓寵物咀嚼或吞下任何部件。若您擔心電源線可能會受損,請在任何一間五金店購買一根防護線管(硬質塑膠防護管)來保護電源線。
- 飲水器部件不含雙酚 A。而據瞭解某些動物對塑膠制食物和水容器過敏。若您的寵物出現針對這種塑膠容器產生的過敏性反應症狀,則在找獸醫看病之前,請停止使用本電器。

注意

- 只要保持合適的水位並定期清潔飲水器,飲水器便可連續地運轉(始終接通電源)。務必定期檢查飲水器以防止水泵損壞,原因是水可能會耗盡或蒸發而使水泵空轉。
- 不要試圖自行修理馬達。
- 為避免插頭或電源插座被弄濕,電源插座應總是位於飲水器上方。
- 若有必要使用延長線,應採用具有適當額定值的延長線。
- 本電器的耗電量為 2.5 瓦特。
- 不要將本電器用於除預期用途之外的其他任何用途。若使用 非由製造商推薦或出售的附件,可能會導致不安全狀況。請 勿改動本電器。
- 不要安裝或存儲設備,它會接觸到天氣或溫度低於4.5℃。
- 請閱讀並遵守本電器及包裝上載列的所有重要注意事項。

請保存使用說明書以備用


感謝您選擇 PetSafe® 品牌。您和您的寵物應享有一種包含難忘時刻和共同理解的友愛關係。我們的產品和訓練工具可增強寵物與其主人之間的關係。若您對於我們的產品或是訓練寵物有任何疑問,請造訪我們的網站 www.petsafe.net,或是撥打電話 +86 (0) 755 2671 5353 連絡我們的客戶服務中心。

為透過產品保固獲得最大的保護,請於 30 天內造訪www.petsafe.net 註冊您的產品。您透過註冊並保管好您的收據,將享受產品的完整保固,而且如需打電話給客戶服務中心,我們將能夠為您提供更快捷的幫助。最重要的是,您的寶貴資訊決不會披露或出售給任何人。請造訪 www.petsafe.net 線上取得完整保固資訊。


目錄

部件17
特點17
重要定義18
操作說明19
飲水器拆卸與清潔20
飲水器重新組裝 21
水泵日常保養22
飲水器與您的環境23
使用時重要提示24
保固與客戶服務24
合規性24
重要的回收利用建議25
使用條款和責任限制25

部件

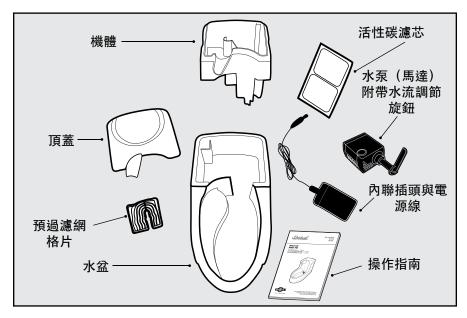

特點

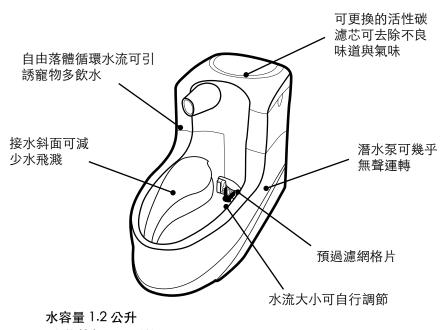

12 伏特低電壓系統

重要定義

機體:水從這裡向上泵送並穿過機體,然後流入活性碳濾芯內進行循環,接著從噴嘴噴出以產生瀑布似的水流,最後流入水盆中。

機體頂蓋:機體頂蓋在機體上卡到位,以使寵物無法觸碰到活性碳濾芯。

活性碳濾芯:它是一種包含由椰子殼製成的粒狀碳的三層碳濾芯。活性碳濾芯可在水從其中流過時吸收不良味道與氣味,並有助於保持水的新鮮味道,從而對寵物更具有誘惑力。

水盆:水盆為飲水器的基座。它內含水泵,並採用電源線穿線孔以遮蔽電源線。

預過濾網格片:它是一種小的進水柵,可在毛髮和狗食等大的顆粒物進入活性碳濾芯之前將它們卡住。可透過向上拉動頂部的唇狀物將預過濾網格片取下。若要把預過濾網格片放回原處,請在水流調節旋鈕之上向後滑動到適當的位置,並往下按壓,直到它在該旋鈕附近卡住為止。

水流調節旋鈕:與預過濾網格片相連接的黑色旋鈕,用於調節水流量。水流 調節旋鈕通過卡扣與預過濾網格片緊緊扣合在一起。

水泵(馬達):它是一種小的水族箱用水泵,可部分地拆卸以進行清潔。重要事項:洗碗機不可用於該水泵!在清潔該水泵之前,請從飲水器上拆下它(請參閱「飲水器拆卸與清潔」一節)。

操作說明


重要事項:饮水器禁止空轉 - 僅限室內使用。飲水器將組裝完好,隨時可以 使用。

- 與其他任何電氣裝置一樣,在使用本電器之前,請檢查電源線有無任何 撕裂或破損之處。
- 2. 確保內聯插頭已完全連接(未顯露任何鍍銀部分)。
- 拆下機體頂蓋,方法是:把食指放入機體頂蓋兩邊的內陷槽中,然後向上提起頂蓋。將頂蓋放到一邊。
- 4. 插入活性碳濾芯。濾芯將裝在機體右邊的兩個三角形插槽內。在裝入濾芯時,讓窄的一側朝下,並使黑色面朝向飲水器正面(如圖1所示)。濾芯將輕鬆地滑動到適當位置,但需確保將它一直推到底。

附註:應先把活性碳濾芯放在涼水下徹底沖洗乾 淨,然後將其置於飲水器中。這將清除所有鬆動的 碳塵(對身體無害)。少量碳塵可能會減少濾芯的 使用壽命。這是正常情況,不會傷害到您的寵物。



- 5. 將飲水器置於所需位置。不要透過提拉機體拿起整個飲水器。僅可透過 把雙手放在飲水器底座下方來抬起飲水器,並抓緊側壁以保持穩固。若 放置在地毯、瓷磚或木地板上,請使用保護墊或其他耐用的防水表面, 以防止因寵物之緣故使水飛濺或滴落到地板上。
- 給本電器內注滿水。這包括水盆和過濾器殼體。這樣水泵就注好了水。 把頂蓋放回原處。
- 7. 給飲水器接通電源之前,請確保電源線以及您的雙手均為乾的。然後將 飲水器的插頭插入標準電源插座中。
- 8. 利用位於防水飛濺斜面右側的水流調節旋鈕 來設定所需流速。對於較小的水流,可設於 10點位置;對於強勁的水流,可設於2點位 置(如圖2所示)。
- 9. 可根據需要在水盆中添加水。不要讓水位降至低於水流調節旋鈕,否則可能導致水泵發生故障。備用水泵須另購,可傳送電子郵件至 asiacc@petsafe.net 聯絡客戶服務中心。

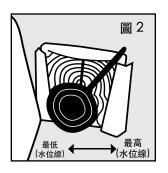

飲水器拆卸與清潔

重要事項:飲水器須清洗乾淨以便繼續正常工作。


活性碳濾芯:每2至4週更換一次。


- 1. 活性碳濾芯應當每2至4週更換一次。若飲水器用於多隻寵物或是產生 大量唾液的寵物,應當更頻繁地更換濾芯。
- 2. 活性碳濾芯是飲水器的一項附加功能。濾芯的使用並非飲水器維持正常 運轉所必需的,但可以讓飲水器中的水更潔淨。
- 3. 在清潔飲水器時,可能會把活性碳濾芯沖洗掉。切勿用肥皂水清洗濾芯,否則將無法去除肥皂殘留物。

飲水器:每週清潔一次

- 1. 拔下飲水器的插頭,然後拆下機體頂蓋,並取出活性碳濾芯。
- 2. 將飲水器內的水倒空。
- 輕輕地向上拉動預過濾網格片頂部的唇狀物以將預 過濾網格片取下,然後用肥皂水進行清洗(請參看 圖 3)。
- 4. 在飲水器兩邊的曲線與接縫相交處輕輕地向內推 壓,以拆下機體。並輕輕地向上提起(請參看圖 4 和 5)。



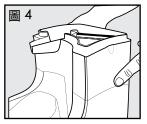


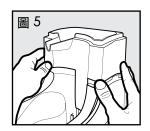

附註:您將注意到機體右邊有一定的阻力,原因是進水管 會朝離開水泵的方向拉動。

5. 接著拆下水泵(圖 6),方法是:首先拔掉內聯插頭(圖 7),然後將水泵從飲水器中提起並取出。清除掉可能已在水流調節旋鈕和水泵進水面板周邊聚積的所有毛髮、碎屑或狗食。



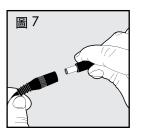

- 6. 將飲水器完全拆卸之後,即可取得4個塑膠部件和一部馬達。
- 用溫水和肥皂清潔飲水器。也可把飲水器放置於洗碗機的頂架上。將飲水器置於洗碗機上之前,請拆下水泵。建議盡可能調低洗碗機內的水溫。
- 8. 若您夠不著飲水器上的某些部位或是難以夠到角落處,請嘗試使用棉籤或是購買 Drinkwell* 清潔套裝(三件式清潔刷套裝)。 備用水泵須另購,可傳送電子郵件至 asiacc@petsafe.net 聯絡客戶服務中心。

飲水器重新組裝

1. 將水泵放回到位於飲水器右邊四 (4) 個 12.7 mm 柱之間的原處。輕輕地 往下按壓以啟用吸盤(圖 8 和 9)。




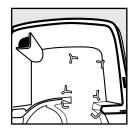



圖 9



2. 使插頭穿過水盆左後角的孔(圖 10)。然後沿著飲水器背面將電源線穿入電源線穿線孔內(圖 11)。利用此電源線穿線孔可以遮蔽電源線。

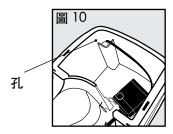


電源線穿線孔

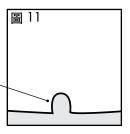


3. 依次在馬達和水盆上方調整過濾器殼體單元的對準位置。您將想要調整 進水管的對準位置以便直接裝入馬達中。一旦放入適當的位置,即輕輕 地往下按壓以使過濾器殼體鎖定到位。 4. 在水流調節旋鈕之上將預過濾網格片放回原處, 方法是:先插入窄的一端;預過濾網格片頂部 的唇狀物將朝向飲水器正面,然後往下按壓以 便在水流調節旋鈕之上將預過濾網格片卡到位 (圖 12)。



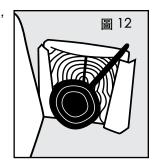

水泵日常保養

重要事項:為確保飲水器的使用壽命以及潔淨的水質,必須對水泵進行清潔。應當每2週對水泵進行一次清潔。若馬達未加以清潔,保固可能會失效。

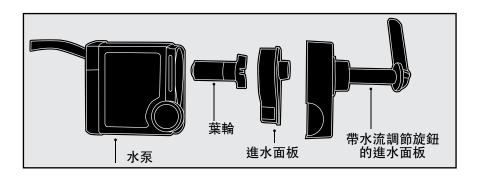



- 1. 從水盆上拆下預過濾網格片和機體。
- 將水泵從其安放位置上提起。水泵底部的吸盤將使它固定於原處。可能有必要施加一點力量。
- 3. 從寵物噴泉飲水器中取出水泵之後,即用拇指和食指輕輕地捏住進水面板的兩邊並向外拉動,以將其拔出。可能有必要把手指甲塞入進水面板的接縫內,以將其撬出(圖 13 和 14)。






4. 接著您將需要拆下進水面板,方法是:把您的手指甲塞到小的唇狀物 (位於淚滴形進水面板拉環上窄的一側)下方,並將其拉出 (圖 15 和 16)。

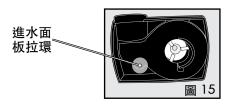

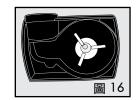

- 5. 在取出進水面板之後,也可拆下透過磁力 固定到位的葉輪(白色,三瓣式葉輪片)。 若要拆下葉輪,請把手指甲塞入一個葉片 下方,然後將葉輪提起並取出(圖 17)。
- 6. 一旦水泵拆卸完畢,即可用溫肥皂水清潔其 部件。可使用棉籤或是 Drinkwell*清潔套裝 中的馬達清洗刷進入馬達內腔,並清除所有 聚積物。如需另外進行消毒並去除硬水,請 用白醋來清潔馬達。

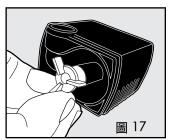

- 7. 一旦各部件清潔完畢,即可重新組裝水泵以供使用。
 - a) 把葉輪放回原處.
 - b) 把定子放回原處。
 - c) 把進水面板放回原處,並與水流調節旋鈕相連。

飲水器與您的環境

如果您的居住环境湿度大,存在霉菌和水藻等问题,则在正常清洁后将所有宠物喷泉饮水器部件浸泡在稀释的醋溶液(20%的白醋和80%的水)中约10分钟。并且也要将稀释的醋溶液倒入马达内腔。

如果您用的是"硬水",水泵上面或内侧可能开始出现少量白色矿物沉淀。 这最终会影响叶轮的正常旋转。为了避免更换或损坏水泵,请采取下列预防 措施:

- 更频率地清洁水泵。
- 使用稀释的醋溶液每周清洁水泵。
- 使用瓶装水而非自来水。

使用時重要提示

- 您的寵物經引導使用飲水器時,可能對這個新奇的物體十分小心。在飲水器開始運轉之後,只需讓您的寵物按照它的步調進行調整即可。某些寵物可能需要幾天或更長的時間才開始使用飲水器,而有些寵物會馬上開始使用。
- 您的寵物可能更喜歡飲水器放置於遠離其正常攝食區域的地方。請嘗試 把飲水器放在另一個位置,例如廚房中的其他區域或是盥洗室或雜用 間。
- 可在水盆中加一些冰塊,以使自來水變得清爽而冰涼!

保固與客戶服務

本產品享有製造商提供的一(1)年有限保固。該保固不適用於因意外、誤用或濫用行為所致的損害。它還在法律允許之範圍內明確地排除了偶發性或後果性損害。因未進行清潔、碎片或硬水的礦化作用所致的功能喪失不在本保固範圍之內(請參閱清潔指示和環境說明)。

如需取得關於適用本產品之保固及其條款的詳細資訊,可造訪www.petsafe.net 及/或傳送電子郵件至 asiacc@petsafe.net。

請聯絡當地的客戶服務中心以解決您所遇到的任何安裝或技術難題,以及在必要時獲得協助來更換產品。如需取得您所在地區的客戶服務中心清單,請 造訪我們的網站 www.petsafe.net。

合規性



本設備符合電磁相容性 (EMC) 和低電壓指令的要求。若在未獲得授權之情形下對本產品作出未經 Radio Systems Corporation 批准的變更或改動,可能會違反歐盟法規,而且可能導致使用者操作本設備之權限失效,並會使本保固失效。

如需查看「符合性聲明」,可造訪: http://www.petsafe.net/customercare/eu_docs.php。

重要的回收利用建議



請遵守您所在國家/地區實行的廢電機電子設備規定。務必將本設備回收再利用。若您不再需要本設備,請勿將它棄置於標準的市政廢物處理系統中。請把它返還至您最初購買本產品的地方,這樣它可進入到我們的回收再利用系統。若您無法這樣做,請聯絡客戶服務中心以取得進一步的資訊。

使用條款及責任限制

1. 使用條款

若要使用本產品,應當接受本文所載之條款、條件和通知,而不對其作 出修改。使用本產品即意味著您接受所有此等條款、條件和通知。若您 不願接受這些條款、條件和通知,請勿使用本產品。

2. 正確使用

若您不確定本產品是否適合您的寵物,請諮詢獸醫或持有證書的馴獸師,或是連絡我們的客戶服務中心,或造訪我們的網站 www.petsafe.net。正確使用包括仔細閱讀產品隨附之「操作指南」的全文以及所有特定的警告聲明。

3. 不得用於非法或禁止的用途

本產品專門設計用於寵物。本裝置不可用於危害、傷害或激怒寵物。以非預期方式使用本產品可能會違反聯邦、州或當地法律

4. 責任限制

在任何情況下,Radio Systems Corporation 或其任何一間聯屬公司皆不對以下損害或損失承擔責任: (i) 任何間接性、懲罰性、偶發性、特殊性或後果性損害,及/或 (ii) 因誤用本產品所致或與之相關的任何損失或損害。購買者將在法律所允許之最大範圍內承擔與使用本產品有關的所有風險和責任。

5. 條款和條件之修改

Radio Systems Corporation 保留變更提供本產品時應遵循之條款、條件和通知的權利。

^{*}已在美國專利暨商標局註冊

在下文中,Radio Systems Corporation 和任何其它附属公司或 Radio Systems Corporation 品牌都将统称为"我们"。

重要安全信息

本指南中使用的警示语和符号说明

▲警告

"警告"表示一种危险处境,如果不避免,会导致人员死亡或 严重受伤。

小心

"**小心**"未与安全警告符号同时使用时,表示一种危险处境,如果不避免,可能会导致您的宠物受到伤害。

注意

"注意"用于指示不会导致人员受伤的正确做法。

▲警告

当使用电器时,应遵循基本的安全注意事项,以降低火灾、电击和/或人员伤害的风险,包括:

- 为避免受伤,靠近或由儿童使用电器时必须予以严格监督。
- 为避免电击,请勿将电源线或插头置干水或其他液体中。
- 仅使用由制造商推荐或销售的附件。
- 请勿用干户外。仅供室内家庭使用。
- 请勿抓住电源线拔下插头。若要拔下插头,请抓住插头,而不是电源线。
- 请勿在电源线或插头破损时,或者其有故障或损坏时操作任何电器。请立即致电客服中心寻求进一步指示。
- 对于便携电器 为了降低电击风险,请勿将其置于会掉到或被拖入浴盆或水池中的位置。
- 在不用时、拆卸或安装部件以及清洁之前,请务必拔下电器插头。切勿通过拉拽电源线从墙壁插座上拔下插头。
- 请勿将电器用于其他非预期目的。
- 如果设备插头湿了,请断开至该插座的电流。请勿尝试拔下插头。
- 安装好电器后进行检查。如果电源线或插头上有水,请勿连接。

S-C

小心

- 请勿让宠物咀嚼或吞噬任何部件。如果您担心电源线安全, 则请在五金店购买一个电源线导管(硬质塑料保护壳)来保 护电源线。
- 饮水器部件不含BPA(双酚丙基烷)。但有些动物被发现对塑料的食物和水容器过敏。如果您的宠物有对塑料过敏的症状,请暂停使用并咨询您的兽医。

注意

- 只要水位稳定且定期清洁,饮水器将持续运转(一直通电)。 确保定期检查饮水器,避免损坏水泵,这是因为水会用完或挥 发掉,造成水泵空转。
- 请勿试图自行修理马达。
- 为了避免弄湿插头或插座,插座应始终高于饮水器液位。
- 如有必要,请使用额定功率合适的延长线。
- 此电器的额定功率是 2.5 瓦。
- 请勿将电器用于其他非预期目的。使用非制造商推荐或销售的附件可能会有危险。请勿改装设备。
- 不要安装或存储设备,它会接触到天气或温度低于4.5℃。
- 阅读并遵守电器上和包装中列出的所有注意事项。

请保存使用说明书以备用


感谢您选择 PetSafe[®] 品牌。您和您的宠物值得拥有互相陪伴的难忘时刻和包容共识。我们的产品和训练工具将增进宠物和主人之间的关系。如果您对我们的产品和训练工具有任何问题, 请查询我们的网站:www.petsafe.net,或致电我们的客服中心: +86 (0) 755 2671 5353。

为了充分利用您的保修期,请于 30 日内在 www.petsafe.net 注册您的产品。通过注册和保留你的收据,您将享受本产品的全部免费保修。如您致电客服中心,我们会更加及时地帮助您。 最重要的是,我们绝不会将您的宝贵信息透露或出售给任何人。在 www.petsafe.net 您可以找到完整的保修信息。


目录

组件	29
寺点	29
重要定义3	Ю
吏用说明3	31
次水器拆卸与清洁3	32
次水器重新组装3	3
水泵日常维护3	}4
次水器与您的环境3	35
更用时重要提示3	
保修和客服	
今规性3	
重要的回收利用建议3	}7
吏用条款及责任限制3	37

组件

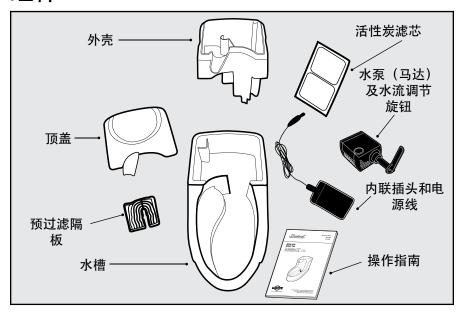

特点

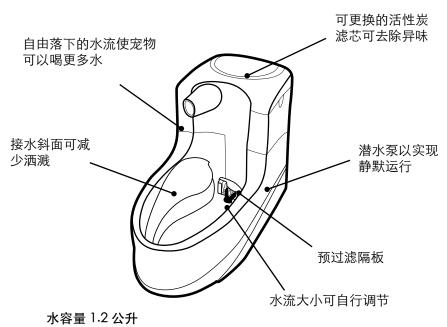

低压 (12V) 系统

重要定义

外壳:水在这里经由外壳被泵抽至循环,通过活性炭滤芯并在喷嘴流出,形成一个水柱落入水槽中。

外壳顶盖:外壳顶盖卡入到外壳中,使宠物接触不到活性炭滤芯。

活性炭滤芯:是一个三层炭过滤器,里面是椰壳制成的炭粒。活性炭滤芯在水通过时会吸收异味,使水清新并吸引宠物。

水槽:水槽是饮水器的基础。它里面是水泵,并有一个穿线口来隐藏电源 线。

预过滤隔板:一个小型进水隔栅,用以阻挡大颗粒,如毛发和粗食,使其无法进入活性炭滤芯。向上拉顶部的唇片可取出预过滤隔板。若要装回去,可向后滑动到水流调节旋钮上方,并向下推,直到其卡在旋钮附近。

水流调节旋钮:与预过滤隔板相连接的黑色旋钮,用于调节水流量。水流调节旋钮通过卡扣与预过滤隔板紧紧扣合在一起。

水泵(马达):一个小型的水族水泵,可部分拆除进行清洁。重要:此水泵不可放入洗碗机清洗!请在清洁之前拆下水泵(参见"饮水器拆卸与清洁"一节)。

使用说明

重要:切勿让饮水器空转-仅用于室内。饮水器在购买时已安装好,可随时 使用。

- 1. 与其他电器设备一样,在使用前检查电源线是否有破损。
- 2. 确保内联插头充分连接(看不到银色)。
- 3. 将食指放入外壳顶盖任一侧的内嵌凹槽中,上提取下外壳顶盖,并将其 放到旁边。
- 4. 插入活性炭滤芯。滤芯将嵌入外壳右侧的三角中。滤芯窄端向下,白色一面向着饮水器前端(如图 1 所示)。滤芯将轻松滑入到位,但要确保其向下推到底。

注意:在置于饮水器中之前要用冷水彻底冲洗活性 炭滤芯。这将清除所有脱落的无害炭粉。滤芯在寿 命期内可能会一直释放少量活性炭。这是正常现 象,对宠物无害。



- 5. 将饮水器放在合适的地方。请勿通过外壳来 提起整个饮水器。只可将双手放在饮水器基座 下面,并抓紧侧壁,握牢饮水器。如果放在地毯、瓷砖或木地板上,则 使用保护垫或其他防水耐用表面,防止宠物将水溅到或滴落到地板上。
- 6. 在饮水器中装上水。这包括水槽和过滤支架,并会将水泵注满。装回顶 盖。
- 7. 在给饮水器通电前,确保电源线和您的手是干的。将饮水器连接到标准的电源插座。
- 8. 在防溅斜面板右侧有一个水流调节旋钮,用 它设定合适的水流大小。在 10 点钟方位时, 水流较小,而在 2 点钟方位时,水流较大 (如图 2 所示)。
- 9. 根据需要在水槽中加水。切勿让水位低于水流调节旋钮,否则可能损坏水泵。替换水泵另行购买,具体可通过gsigcc@petsafe.net联系客服中心。



饮水器拆卸与清洁

重要: 饮水器必须清洁才能正常使用。 活性炭滤芯: 每2到4周更换一次。


1. 活性炭滤芯应每二到四周更换一次。当饮水器用于多个宠物或宠物唾液非常多时,应增加更换滤芯的频率。

- 2. 活性炭滤芯是饮水器的新增特点。正常使用无需滤芯,但它们可以净化饮水器中的水。
- 3. 在清洁饮水器时可冲洗活性炭滤芯。切勿使用肥皂水清洗滤芯,因为肥皂残留很难清除。

饮水器: 每周清洁一次

- 1. 拔下饮水器插头,取下外壳顶盖,并取出活性炭滤芯。
- 2. 倒空饮水器中的水。
- 3. 轻轻上拉预过滤隔板顶部的唇片,取出预过滤隔板,并使用肥皂和水清洗(见图 3)。
- 4. 在饮水器任一侧曲线结合处往里推,并向上轻提,取下外壳(见图 4 和 5)。



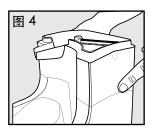




注意: 您会发现,将进水管拉离水泵时,外壳的右侧会有一些阳力。

5. 接下来取出水泵(图 6),方法是先断开内联插头(图 7),然后将其 从饮水器中提出来。清除干净堆积在水流调节旋钮和水泵进水面板周围 的所有毛发、残渣或粗食。



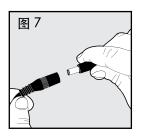

- 6. 在饮水器完全拆卸后,您将得到: 4个塑料部件和一个马达。
- 7. 使用温水和肥皂清洁饮水器部件。您也可以将饮水器放在洗碗机的顶层。在将饮水器置于洗碗机中之前请取出水泵。如果可能,建议您降低洗碗机中的水温。
- 8. 如果有些位置或角落够不到,则可以使用棉签或购买 Drinkwell* 清洁套件,即清洁刷三件套。 替换水泵另行购买,具体可通过 asiacc@petsafe.net 联系客服中心。

饮水器重新组装

1. 将水泵放回到饮水器右侧四 (4) 个 12.7 mm 立柱的中间位置。向下轻推、与吸盘啮合(图 8 和 9)。

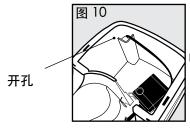





图 9



2. 将插头穿过水槽左后角的开孔(图 10)。然后沿饮水器后部将电源线穿过电源线"穿线口"(图 11)。使用此"穿线孔"可以隐藏电源线。




电源线"穿线孔"

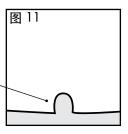


3. 对齐过滤支架装置,然后是马达和水槽。您还需要对齐进水管,直接嵌入马达。放好后轻轻往下推,将滤芯外壳锁定到位。

- 4. 先滑入预过滤隔板窄端,将其装回到水流调节旋钮上。预过滤隔板顶端的唇片向着饮水器正面,下推卡入到水流调节旋钮的正确位置(图 12)。
- 5. 装回活性炭滤芯和外壳顶盖。

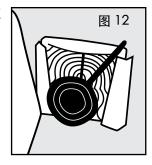

水泵日常维护

重要:水泵的清洁对于饮水器的寿命以及水的洁净至关重要。每2周清洁一次水泵。如果未清洁马达则可能使保修失效。

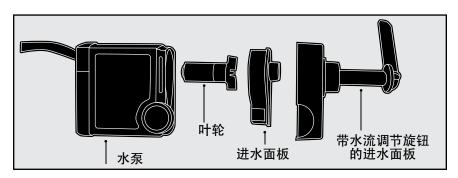


- 1. 从水槽上取下预过滤隔板和外壳。
- 2. 将水泵轻轻从其固定位置提起。水泵底部的吸盘会将其保持在原位。因此可能需要施加一定的力。
- 3. 将水泵取出宠物饮水器后,用拇指和食指轻轻捏住进水面板任一端,然后拉出。这可能需要在进水面板的接缝中插入手指甲将其撬开 (图 13-14)。






4. 然后,您需要将指甲伸到进水面板泪滴形拉环上的小唇片下面,并向外 拉,取出进水面板(图 15-16)。

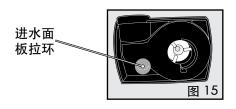



- 5. 取出进水面板后,您还可以拆下叶轮(白色,3 片式叶轮),叶轮靠磁性保持在原位。若要拆下叶轮,可将指甲伸到叶片下并往外拉(图 17)。
- 6. 拆开水泵后,可以用温肥皂水清洁其部件。 使用棉签或 Drinkwell' 清洁套件中的"马达 清洗刷"伸入马达内腔并清除所有沉积物。 如果要清除积聚的消毒水和硬水,则使用白 醋清洁马达。

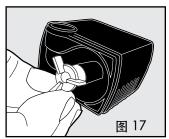

- 7. 清洁部件后可以重新组装水泵备用。
 - a) 装回叶轮,
 - b) 重新装好定子。
 - c) 装回进水面板及水流调节旋钮。

饮水器与您的环境

如果您的居住环境湿度大,存在霉菌和水藻等问题,则在正常清洁后将所有宠物喷泉饮水器部件浸泡在稀释的醋溶液(20%的白醋和80%的水)中约10分钟。并且也要将稀释的醋溶液倒入马达内腔。

如果您用的是"硬水",水泵上面或内侧可能开始出现少量白色矿物沉淀。 这最终会影响叶轮的正常旋转。为了避免更换或损坏水泵,请采取下列预防 措施:

- 1. 更频率地清洁水泵。
- 2. 使用稀释的醋溶液每周清洁水泵。
- 3. 使用瓶装水而非自来水。

使用时重要提示

- 开始使用饮水器时,宠物可能会对这个新鲜事物感到好奇。起初,要允许宠物按自己的节奏适应饮水器。有些宠物可能需要几天或更久,而另一些则可能会立刻开始使用。
- 您的宠物可能更喜欢将饮水器放在远离正常喂食的地方。将其放在其他地方,如厨房的另一个位置,或者厕所或杂物间中。
- 在水槽中添加冰块以获得新鲜的冰冷流水!

保修和客服

本产品享受 l (一) 年的有限厂家保修。该保修范围不包括意外、误用或滥用引起的损坏。它还特别排除了法律规定的连带或间接损坏。缺乏清洁以及"硬水"造成的碎屑或矿化引起的功能丧失不在保修范围内(参阅清洁说明和环保注意事项)。

本产品适用的保修详情及其条款可从 www.petsafe.net 上获取,和/或发送电子邮件至 asiacc@petsafe.net 索取。

如有任何安装或技术问题,请联系当地的客服中心,并根据需要,更换产品。如需获得您所在地区客服中心的清单,请浏览我们的网站www.petsafe.net。

合规性



本设备符合电磁兼容性(EMC)和低压指令。未经 Radio Systems Corporation 授权对产品进行改动或修改会违反欧盟法规,并导致用户失去操作本设备的资格,并会使保修失效。

合规声明地址:

http://www.petsafe.net/customercare/eu_docs.php.

重要的回收利用建议



请遵守贵国的废弃电气和电子设备规定。此设备必须回收处理。如果您不再需要此设备,请勿将其随意丢弃。请将其送回您购买此产品的商店,以便于将其投入我们的回收系统。如果无法做到这点,请联系客服中心以获取更多信息。

使用条款及责任限制

1. 使用条款

使用本产品您便已经无异议地接受了此处列举的使用条款和注意事项。 使用本产品意味着接受了所有这些使用条款和注意事项。如果您不想接 受这些使用条款和注意事项,请勿使用本产品。

2. 使用方式

如果您不确定本产品是否适用于您的宠物,请咨询您的兽医或有执照的训练师,与我们的客服中心联系或访问我们的网站: www.petsafe.net。使用方式包含查阅随您的产品附带的完整操作指南以及任何具体的注意事项声明。

3. 禁止非法或不当使用

本产品是专为宠物使用而设计的。本设备不得用于伤害、致伤或挑衅。以非预期方式使用本产品可能会导致违反联邦、州或当地法律。

4. 责任范围

在任何情况下 Radio Systems Corporation 或其任何关联公司对如下事项不承担法律责任。(i)任何间接的、惩罚性的、偶然的、特殊或间接损失;和/或(ii)由于误用本产品所导致的相应的任何损失或损害。购买者应在法律允许的最大范围内承担因使用本产品而带来的全部风险和责任。

5. 使用条款的修改

Radio Systems Corporation 保留更改使用条款以及本产品所提供之注意事项的权利。

^{*}品牌已在美国专利商标局注册



protect. teach. love:

Radio Systems Corporation 10427 PetSafe Way Knoxville, TN 37932 (865) 777-5404

www.petsafe.net

400-1669-43/1

©2016 Radio Systems Corporation