


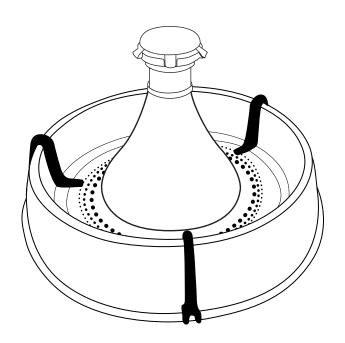

操作指南操作指南

D360SSCN-RE D360SSTW-RE

360 Stainless Steel Pet Fountain - 3.8 Litres 360 不銹鋼寵物噴泉飲水器 - 3.8 公升 360 不锈钢宠物喷泉饮水器 - 3.8 公升





Please read this entire guide before beginning 開始使用產品前,請詳閱完整指南 请在使用之前全面阅读本指南 Hereinafter Radio Systems Corporation and any other affiliate or Brand of Radio Systems Corporation may be referred to collectively as "We" or "Us".

IMPORTANT SAFETY INFORMATION

Explanation of Attention Words and Symbols used in this guide

▲WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

NOTICE

NOTICE is used to address safe use practices not related to personal injury.

▲WARNING

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- To reduce the risk of injury, close supervision is necessary when an appliance is used by or near children.
- To protect against electric shock, do not place Power Cord or plug in water or other liquids.
- Only use attachments recommended or sold by the manufacturer.
- Do not use outdoors. FOR INDOOR HOUSEHOLD USE ONLY.
- Do not unplug by pulling on Power Cord. To unplug, grasp the plug, not the Power Cord.
- Do not operate any appliance if it has a damaged Power Cord or plug, or if it is malfunctioning or has been damaged. Call Customer Care Centre immediately for further instructions.
- For a portable appliance To reduce the risk of electrical shock, do not place or store an appliance where it can fall or be pulled into a tub or sink.
- Always unplug any appliance when not in use, before putting on or taking off parts and before cleaning. Never pull on the electrical Power Cord to remove the plug from the wall outlet.
- Do not use an appliance for anything other than its intended use.
- If the plug of this device gets wet, turn off the electricity to that outlet. Do not attempt to unplug.
- Examine this appliance after installation. Do not plug in if there
 is water on the Power Cord or plug.

CAUTION

- Do not allow pets to chew on or swallow any parts. If you are concerned about the Power Cord, purchase a cord conduit (a hard plastic protector) at any hardware store.
- The Pet Fountain parts are BPA-FREE. However, some animals
 have been known to be sensitive to plastic food and water
 containers. If your animal shows signs of an allergic reaction to the
 plastic, please discontinue use until you have consulted with your
 veterinarian.

NOTICE

- The Pet Fountain is intended to run continuously (always plugged into electricity), as long as the water level is maintained and the Pet Fountain is cleaned regularly. Be sure to check the Pet Fountain regularly to help prevent damage to the Pump, as the water may get consumed or evaporate causing the Pump to run dry.
- Do not attempt repairs on the Pump yourself.
- To avoid the possibility of the plug or outlet getting wet, the outlet should always be above the level of the Pet Fountain.
- If an extension cord is necessary, an extension cord with a proper rating should be used.
- The electrical use of this appliance is 2.5 watts.
- Do not use appliance for anything other than intended use. The use
 of attachments not recommended or sold by the manufacturer may
 cause an unsafe condition. Do not modify the unit.
- Do not install or store appliance where it will be exposed to weather or temperatures below 4.5° C.
- When cleaning your Pet Fountain, do <u>not</u> use any abrasive cleaning solutions, sponges, or pads. These abrasive surfaces can scratch the stainless steel parts.
- Read and observe all important notices listed on the appliance and in the packaging.

SAVE THESE INSTRUCTIONS


Thank you for choosing the PetSafe® Brand. You and your pet deserve a companionship that includes memorable moments and a shared understanding together. Our products and training tools enhance the relationship between pets and their owners. If you have any questions about our products or training your pet, please visit our website at www.petsafe.net or contact our Customer Care Center at +86 (0) 755 2671 5353.

To get the most protection out of your warranty, please register your product within 30 days at www.petsafe.net. By registering and keeping your receipt, you will enjoy the product's full warranty and should you ever need to call the Customer Care Center, we will be able to help you faster. Most importantly, your valuable information will never be given or sold to anyone. Complete warranty information is available online at www.petsafe.net.

Table of Contents


Components	 . 5
Features	 . 5
Key Definitions	 . 6
Operating Instructions	 . 7
Pet Fountain Disassembly and Cleaning	 . 9
Pump Maintenance	 10
Pet Fountain Reassembly	 12
The Pet Fountain and Your Environment	 13
General Tips	 13
Warranty and Customer Care	 14
Compliance	 14
Important Recycling Advice	 14
Terms of Use and Limitation of Liability	 15

Components

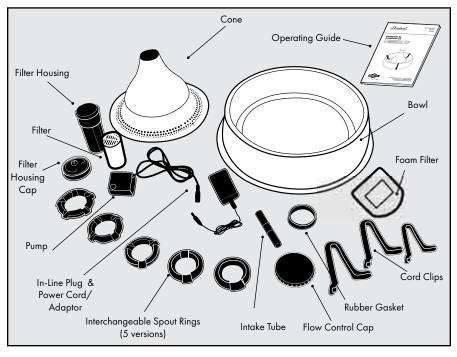

Note: Your Pet Fountain will come partially assembled, however, it is a good idea to make sure none of the Pet Fountain pieces have come loose in shipping.

Features

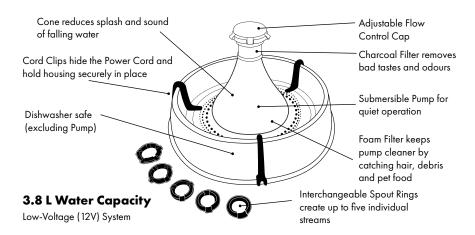

Key Definitions

Bowl: The stainless steel Bowl is the foundation of the Pet Fountain. The circular bowl piece can be carried by simply gripping underneath the sidewalls of the Bowl.

Cone: The stainless steel Cone serves as the housing for the Pet Fountain components and encloses the Pump from curious pets. The Cone acts to reduce the splash and sound of the falling water.

Filter Housing: The Filter Housing slides into the opening at the top of the Cone and its main purpose is to hold the Filter in place.

Charcoal Filter: The cylindrical Charcoal Filter features a pull-tab at the top and should be placed in the Filter Housing with the tab facing upwards for easy placement and removal.

Filter Housing Lid: The Filter Housing Lid is a screw on lid that attaches to the Filter Housing to keep the Charcoal Filter in place. It serves as the base piece to attach the interchangeable Spout Rings & Flow Control Cap.

Foam Filter: The Foam Filter collects hair, debris and pet food before they reach the Pump. It is important to use the Foam Filter as it helps maintain proper Pump function.

Spout Rings: The five interchangeable Spout Rings can be easily changed based upon your pet's preference and can provide up to 5 streams of water for multiple pet households.

Flow Control Cap: The Flow Control Cap is attached to the top of the Pet Fountain and easily adjusts the flow of water by turning the Flow Control Cap to the left or right. Turn to the right, to increase the flow of water. Turn to the left to decrease flow.

 
Pump: A small Low Voltage submersible aquarium pump that can be dismantled for cleaning. **Important:** THE PUMP IS NOT DISHWASHER SAFE! Remove Pump from Pet Fountain prior to cleaning. (See "Pump Maintenance") The pump cord features a detachable In-Line Plug for easy removal.

Cord Clips: The three plastic Cord Clips serve to cover the electrical Power Cord as it feeds over the rim of the Bowl and these Cord Clips are required to hold the Cone piece in place.


Operating Instructions

Important: DO NOT RUN DRY - FOR INDOOR USE ONLY.

- 1. As with any electrical device, check the electrical Power Cord for any tears or damage before use.
- 2. Make sure the In-Line Plug is connected (Fig. 1).
- 3. Place the Foam Filter around the Pump. The rounded side of the Foam Filter should be directly in front of the Faceplate on the Pump. Make sure the electrical power cord runs over the top of the Foam Filter, not underneath it, as this will keep the Foam Filter in place.




4. With the Foam Filter securely around the Pump, place the Pump inside the indention in the Bowl. Position the Pump so that the circular opening on the top, is in the upper right hand corner or true center of the Bowl (**Fig. 2**). Press down on the Pump to engage the suction cups. Place the Intake Tube into the circular opening on the top of the Pump (**Fig. 3**).

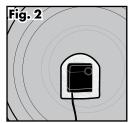





- Align the Cone so that the Power Cord runs through the Power Cord notch (Fig. 4) without moving the Pump from its original position. Once the Power Cord is aligned, gently place the Cone piece into resting position.
- Take the partially assembled Filter Housing and remove the Flow Control Cap by gently lifting straight up - DO NOT TWIST TO REMOVE (Fig. 5). Gently lift up and remove the Spout Ring to access the Filter Housing Cap.
- Unscrew Filter Housing Cap and insert the Filter into the Filter Housing with the pull-tab facing up (Fig. 6). The Filter will slide easily into place. Next, screw on the Filter Housing Cap.

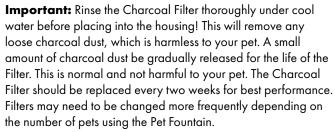





3. Look into the Cone opening and make sure the Intake Tube is sticking straight up from the Motor (Fig. 7). Carefully, insert the Filter Housing into the cone opening and push straight down (Fig. 8). By pushing the Filter Housing all the way down to the rubber gasket, the Housing should easily attach to the Intake Tube.

 Select one of the five interchangeable Spout Rings based upon your personal preference or your pet's.
 Place the chosen Spout Ring on top of Filter Housing Cap and gently press down to secure in place (Fig. 9).


Fig. 7









- 10. On the Filter Housing Cap, align the Flow Control Cap with the raised notches (Fig. 10). Press down gently and the Flow Control Cap will snap into place. With the Flow Control Cap, you will be able to easily adjust the intensity of the water flow. Turn the Flow Control Cap to the right to increase the flow of water and turn to the left to decrease. Important: If you notice a decrease in the flow of the water that is not corrected by increasing the flow control to max flow, this may be an indication of a clogged and dirty Filter and/or the need to rinse and clean the Filter Housing. Consult the "Pet Fountain Disassembly and Cleaning" section of this manual for details on cleaning and maintaining your Pet Fountain.
- 11. Take one of the plastic Cord Clips and align with the electrical Power Cord hanging over the rim of the Bowl. With the two-prong end on the outside of the Bowl (Fig. 11), slide the Cord Clip all the way down until it clips onto the bottom of the Bowl (Fig. 12).
- 12. Take the other two plastic Cord Clips and attach them to the Bowl so that the three clips together form the three points of a triangle (**Fig. 13**). This will lock the Cone in place.

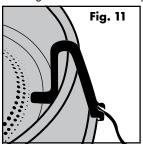

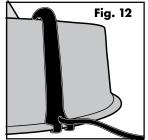

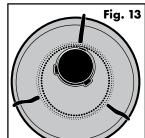

- 13. Fill the Pet Fountain Bowl with water. Make sure the water level is at least to the minimum MIN (minimum) fill line so the Pump does not run dry. This will prime the Pump for use. Do not fill the Pet Fountain past the MAX (maximum) fill line.
- 14. Place Pet Fountain in desired location. To properly pick up the Pet Fountain, use both hands and grip underneath the sidewalls of the Bowl and lift. Important: Never pick up a full Pet Fountain by the center Cone piece! To take care of your floors, we suggest to always use a protective mat or other durable, water resistant surface. This will help protect your floor from any water that may splash out from your pet's use of the Pet Fountain.
- 15. Before plugging the Pet Fountain into electricity, make sure the Power Cord and your hands are completely dry. Plug the Pet Fountain in to a standard wall outlet.
- 16. Add water as needed. **Never** let the water level fall lower than the MIN (minimum) fill line (approximately 25 mm above the bottom of the Bowl) or the Pump may fail. Replacement Pumps are sold separately by contacting the Customer Care Centre at asiacc@petsafe.net.

Pet Fountain Disassembly and Cleaning

NOTICE

When cleaning your Pet Fountain, do <u>not</u> use any abrasive cleaning solutions, sponges, or pads. These abrasive surfaces can scratch the stainless steel parts.

Important: Pet Fountain must be cleaned to continue working normally.

FILTER SYSTEM

The Pet Fountain is equipped with two types of filters that should be replaced on a regular basis. The Charcoal Filter removes bad tastes and odours, keeping water fresh. The Foam Filter collects hair, debris and pet food and prevents them from reaching the Pump, providing optimal filtration. The filters together will keep the Pump cleaner and provide fresher water to your pet.

CHARCOAL FILTER: Filters should be changed every two to four weeks. Replace filters more frequently when using the Pet Fountain for multiple pets or pets that produce a lot of saliva. **Important:** Always rinse the Charcoal Filter prior to use. A small amount of charcoal dust may be released for the life of the filter, this is normal and is not harmful to your pet.

FOAM FILTER: Replace the Foam Filter every one to two months, depending on the location of the Pet Fountain and the number of pets using it. If you do not intend to replace the filter at the time of cleaning, rinse the Foam Filter thoroughly with fresh water.


Filters are an added feature of the Pet Fountain. Using the filters is not required for normal operation. However, when used properly and changed regularly, the filters help keep the water cleaner and fresher, while extending the life of your Pet Fountain. Filters may be rinsed out when the Pet Fountain is cleaned. **Importants** Never wash the filters with soapy water, as the soap residue will seep into the filters and cannot be removed. Only rinse the filters with water.

PET FOUNTAIN: Clean once a week.


- 1. Unplug Pet Fountain from electrical source and disconnect the In-Line Plug (Fig. 1).
- 2. Remove the Flow Control Cap and Spout Ring.
- 3. Next, remove the three Cord Clips by gently pulling the two-prong clip up and away from the bottom of the Bowl. Set the Cord Clips aside.
- 4. While holding the Cone steady, wrap your thumb and two fingers around the top of the Filter Housing and lift up to remove. If the Filter Housing is too tight and not moving easily, try twisting the Housing back and forth in a circular motion until it loosens up enough to remove. Lift the piece up and set aside. Most likely, the Intake Tube will still be attached to the bottom of the Filter Housing.
- 5. Lift up the stainless steel Cone and set aside for cleaning.
- 6. Reach in the Bowl and lift up the Pump, remove and set aside for cleaning.
- Remove the Foam Filter from the Pump. Clean away any hair, debris or pet food that may have accumulated on the Faceplate of the Pump (See "Pump Maintenance" for detailed cleaning instructions for the Pump).
- 8. While holding underneath the sidewalls of the Bowl, empty the water out of the Pet Fountain.
- 9. Clean the Pet Fountain parts with warm water and soap. You can also put the Pet Fountain in the dishwasher. Important: do not use any abrasive cleaning solutions, sponges, or pads that could potentially scratch the stainless steel parts. Remove the pump before placing the Pet Fountain in the dishwasher. DO NOT PLACE PUMP IN DISHWASHER!
- 10. If you have troubles reaching certain spots or hard-to-reach corners, try using a cotton swab or purchase the Drinkwell* Cleaning Kit, a 3-Piece Brush kit. To purchase a cleaning kit, visit our website at www.petsafe.net to locate a retailer near you or to find a listing of Customer Care Centre telephone numbers for your area.

Pump Maintenance


Important: Cleaning the pump is essential to the longevity of the Pet Fountain as well as the cleanliness of the water. Clean the pump at least every two weeks. Warranty may be voided if the pump is not cleaned regularly.

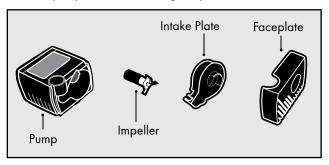


- 1. Remove Pump from the Pet Fountain as explained in the "Pet Fountain Disassembly and Cleaning" section (Step 6).
- Once the Pump is out of the Pet Fountain, with your thumb and forefinger, gently squeeze on either side of the Faceplate and pull off. It may be necessary to insert a fingernail into the seam of the Faceplate to pry it off.
- Next, you will want to remove the Intake Plate by placing your finger nail under the small lip located on the narrow side of tear drop shaped Fake Plate and pull out (Fig. 14).

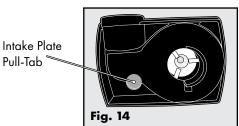

- 4. Once the Intake Plate is removed you can also remove the Impeller (white, 3-bladed propeller) which is held in place magnetically. To remove the Impeller use a fingernail to get under the plastic blade and lift out (**Fig. 15**).
- 5. Once the Pump is disassembled you can clean the parts with warm soapy water. Use a cotton swab or the "motor" brush from the Drinkwell* Cleaning Kit to get into the Motor cavity and remove any build-up (Fig. 16). For added disinfecting and hard water removal, clean the Motor with a 10% white vinegar & 90% water solution. Be sure to rinse thoroughly with fresh water.
- Once the parts are clean and dry, you can reassemble the Pump for use.
 - a) Replace the Impeller.
 - b) Replace the Intake Plate.
 - c) Replace the Faceplate.

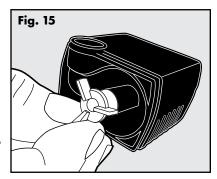

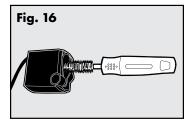

Pet Fountain Reassembly

- 1. Place the Foam Filter around the Pump. The rounded side of the Foam Filter should be directly in front of the Faceplate on the Pump. Make sure the electrical power cord runs over the top of the Foam Filter, not underneath it, as this will keep the Foam Filter in place.
- Replace the Pump into its original location (Fig. 2). Be sure that the circular opening on the top of the Pump is positioned in the Bowl's true center or the Intake Tube will not properly align with the Housing. Gently push down to engage the suction cups.
- 3. Replace the Intake Tube into the circular opening on the top of the Pump (Fig. 3).
- 4. Align the Cone so that the Power Cord runs through the Cord Notch while keeping the Pump in its original position. Once the Power Cord is aligned (**Fig. 3**), gently place the Cone piece into resting position.
- 5. After cleaning your Pet Fountain, it is a good idea to replace your Filter with a new one. After replacing the Charcoal Filter, screw on the Filter Housing Cap.
- 6. Look into the Cone opening and make sure the Intake Tube is sticking straight up from the Pump. Carefully, insert the Filter Housing into the Cone opening and push straight down. By pushing the Filter Housing all the way down to the rubber gasket, the Housing should easily attach to the Intake Tube.
- Choose your preferred Spout Ring (1 spout up to 5 spouts) and place on top of the Filter Housing Cap, press it gently into place. Be sure it is pushed down evenly all the way around.
- 8. Replace the Flow Control Cap by aligning the Flow Control Cap with the notches on the Filter Housing Cap. Gently push down to secure in place.
- 9. Attach the three Cord Clips around the base of the Pet Fountain to hide the electrical Power Cord and secure the Cone piece into place.
- 10. Fill the Pet Fountain Bowl with water. Make sure the water level is at least to the minimum MIN (minimum) fill line so the Pump does not run dry. This will prime the Pump for use. Do not fill the Pet Fountain past the MAX (maximum) fill line.
- 11. Place Pet Fountain in desired location. To properly pick up the Pet Fountain, use both hands and grip underneath the sidewalls of the Bowl and lift. **Important:**Never pick up a full Pet Fountain by the center Cone piece! To take care of your floors, we suggest to **always** use a protective mat or other durable, water resistant surface. This will help protect your floor from any water that may splash out from your pet's use of the Pet Fountain.
- 12. Before plugging the Pet Fountain into electricity, make sure the Power Cord and your hands are completely dry. Plug the Pet Fountain in to a standard wall outlet.

The Pet Fountain and Your Environment

If you live in a humid environment and have problems with mold or algae, soak all Pet Fountain parts in a diluted vinegar solution (20% White Vinegar and 80% Water) for 10 minutes after regular cleaning. Also, pour the diluted vinegar solution into the Pump's motor cavity.

If you have hard water, small white mineral deposits may form on or inside the Pump. This can eventually prevent the Impeller from turning properly. To avoid replacement or damage to the Pump, please take the following precautions:

- Clean the Pump more frequently.
- Clean the Pump with a diluted vinegar solution weekly.
- Use bottled water instead of tap water.

General Tips

- When being introduced to the Pet Fountain, your pet may be cautious of this new
 and unusual object. After beginning operation of your Pet Fountain, simply allow
 your pet to adjust at his or her own pace. Some pets may take several days or
 longer to begin use, while others will start right away.
- Your pet may prefer that the Pet Fountain be placed away from their normal feeding area. Try placing it in another location, such as a different area of the kitchen or in a bathroom or utility room.
- Add ice cubes to the bowl for refreshing, ice-cold running water!

Warranty and Customer Care

This product has the benefit of a 1 (one) year limited manufacturer's warranty. This warranty does not cover damage from accidents, misuse or abuse. It also specifically excludes incidental or consequential damages as allowed by law. Loss of function as a result of lack of cleaning, debris or mineralization from "hard water" does not qualify under this warranty (Refer to cleaning instructions and environmental notes).

Details of the warranty applicable to this product and its terms can be found at www.petsafe.net and/or are available by sending an email to: asiacc@petsafe.net.

Please contact your local Customer Care Centre with any set-up or technical difficulties you experience, and if necessary to assist in the replacement of your product. For a listing of Customer Care Centres in your area, visit our website at www.petsafe.net.

Compliance



This equipment complies with the EMC and Low Voltage Directives. Unauthorized changes or modifications to the product that are not approved by Radio Systems Corporation may violate EU regulations, could void the user's authority to operate the equipment, and will void the warranty.

The Declaration of Conformity can be found at: http://www.petsafe.net/customercare/eu_docs.php.

Important Recycling Advice



Please respect the Waste Electrical and Electonic Equipment regulations in your country. This equipment must be recycled. If you no longer require this equipment, do not place it in the normal municipal waste system. Please return it to where it was purchased in order that it can be placed in our recycling system. If this is not possible, please contact the Customer Care Centre for further information.

Terms of Use and Limitation of Liability

Terms of Use

Use of this Product is subject to your acceptance without modification of the terms, conditions, and notices contained herein. Use of this Product implies acceptance of all such terms, conditions, and notices. If you do not wish to accept these terms, conditions, and notices, do not use this Product.

2. Proper Use

If you are unsure whether this is appropriate for your pet, please consult your veterinarian or certified trainer, contact our Customer Care Center, or visit our Web Site at www.petsafe.net. Proper use includes reviewing the entire Operating Guide provided with your product and any specific caution statements.

3. No Unlawful or Prohibited Use

This product is designed for use with pets only. This device is not intended to harm, injure, or provoke. Using this Product in a way that is not intended could result in violation of Federal, State, or local laws.

4. Limitation of Liability

In no event shall Radio Systems Corporation or any of its associated companies be liable for (i) any indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the misuse of this Product. The Purchaser assumes all risks and liability from the use of this Product to the fullest extent permissible by law.

5. Modification of Terms and Conditions

Radio Systems Corporation reserves the right to change the terms, conditions, and notices under which this product is offered.

^{*} Registered in The U.S. Patent and Trademark Office

在下文中,Radio Systems Corporation 以及 Radio Systems Corporation 的其他任何聯屬公司或品牌可統稱為「我們」。

重要安全資訊

本手冊使用的警示文字與符號說明

▲警告

小心

注意

警告:表示危險情況,若不避免,可能導致死亡或嚴重傷

害。

小心:未配合安全警示符號使用時,表示危險情況,若不避

免,可能危及寵物。

注意:用於強調安全的使用方法,與人身傷害無關。

▲警告

使用電子設備時,為避免發生火災、觸電和/或造成人身傷害,請務必遵守下列基本安全防護措施:

- 在幼童附近使用設備,請密切監管以免受傷。
- 請勿將電源線或插頭放進水裡或其他液體中,以免觸電。
- 僅使用原廠銷售或建議的附屬裝置。
- 請勿用於戶外。僅限室內家居使用。
- 請勿以拉扯方式拔除電源線。握住插頭(而非電源線) 後拔下。
- 電源線或插頭破損,或是設備故障或損壞時,請勿使用。請立即聯絡客戶服務中心取得進一步說明。
- 使用可攜式設備時,為避免觸電,請勿將設備存放在可 能掉落或掉推盆子或水槽的位置。
- 設備不用時,請一定要先拔下插頭,再拆裝配件或進行 清潔。請勿將電源線插頭從牆上插座硬拉下來。
- 請勿將設備用於非預定用途。
- 設備插頭如受潮,請關閉插座電源,可別試著拔掉插頭。
- 安裝好請檢查本設備,如電源線或插頭有水,請勿插電。

小心

- 請勿讓寵物吞咬任一配件,若擔心電源線被咬,請至任一五金行購買導線管(硬塑膠外殼)。
- 飲水器配件不含酚甲烷(BPA),不過有些動物對裝食物和水的塑膠容器敏感。如果寵物對塑膠製品出現過敏性反應,諮詢獸醫之前請暫停使用。

注意

- 飲水器為持續運轉而設計(隨時插著電),只要保持一定 水位並定期清潔飲水器即可。由於水可能喝完或蒸發,致 使水泵空轉,請務必定期檢查飲水器,以免水泵損壞。
- 請勿嘗試自行修理馬達。
- 電源插座應高於飲水器,以避免插頭或插座受潮。
- 如須使用延長線,應選擇適合的額定功率。
- 本設備耗電率為 2.5 瓦。
- 請勿將設備用於非預定用途。使用非原廠銷售或建議的附屬裝置可能造成不安全的情況。請勿變更設備。
- 不要將本電器安裝或貯存於會暴露在 4.5°C 以下之天氣或 溫度的地方。
- 清潔飲水器時,請勿使用任何具研磨作用的清潔液、海綿或墊子。這些磨料表面會刮傷不銹鋼配件。
- 請閱讀並遵守設備與包裝明列的所有重要注意事項。

請保存使用說明書備用


感謝您選擇 PetSafe® 品牌。您和您的寵物應享有一種包含難忘時刻和共同理解的友愛關係。我們的產品和訓練工具可增強寵物與其主人之間的關係。若您對於我們的產品或是訓練寵物有任何疑問,請造訪我們的網站 www.petsafe.net,或是撥打電話 +86 (0) 755 2671 5353 連絡我們的客戶服務中心。

為透過產品保固獲得最大的保護,請於 30 天內造訪www.petsafe.net 註冊您的產品。您透過註冊並保管好您的收據,將享受產品的完整保固,而且如需打電話給客戶服務中心,我們將能夠為您提供更快捷的幫助。最重要的是,您的寶貴資訊決不會披露或出售給任何人。請造訪 www.petsafe.net 線上取得完整保固資訊。

目錄


部件	19
特點	19
重要定義	20
操作說明	21
飲水器拆卸與清潔	23
水泵日常保養	
飲水器重新組裝	
飲水器與您的環境	
使用時重要提示	27
產品保固與客戶服務	
合規性	28
重要的回收建議	28
使用條款與責任限制	29

部件

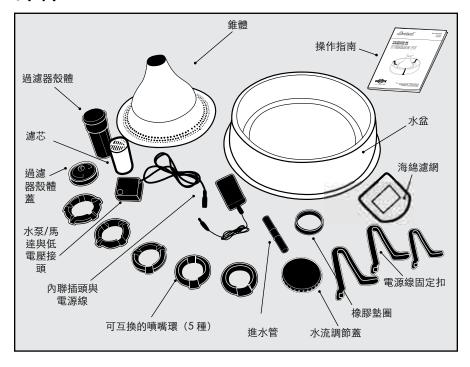

註:您會收到部分組裝好的飲水器,但仍建議您檢查所有的配件,看在運送 過程中有無鬆脫的情形。

特點

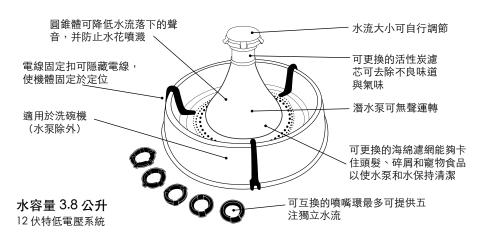

重要定義

水盆:不鏽鋼水盆是飲水器的基座。拿著圓形水盆下方的側壁即可端起。

錐體:不鏽鋼錐體是飲水器部件的機體,包住水泵免受好奇寵物接觸。錐體 可減少水花噴濺情形並降低落水聲。

過濾器殼體:過濾器殼體從錐體頂部滑入開口,主要功能為固定濾芯。

濾芯:圓筒狀的濾芯頂部有拉環,放入過濾器殼體時拉環應朝上,方便更換。

過濾器殼體蓋:過濾器殼體蓋是附在過濾器殼體的旋轉式頂蓋,用來固定濾芯,是連接可互換的噴嘴環與水流調節蓋的基件。

海綿濾網:海綿濾網能夠卡住毛髮、碎屑和寵物食品以防止它們進入水泵內,從而達到最佳過濾效果。請務必使用海綿濾網,這有助於維持正常的水泵運轉。

噴嘴環:五個可互換的噴嘴環可依寵物的喜好輕鬆變換,提供寵物多的家庭最多 5 處水流。

水流調節蓋:水流調節蓋附在飲水器頂部,左右旋轉即可輕鬆調節水流。右轉可增強水流量,左轉可降低水流量。

 
水泵:小型低電壓的水族箱用潛水泵,可拆開清潔。重要事項:用洗碗機清洗水泵不安全!清潔前,請先卸下飲水器的水泵。(請參閱「水泵日常保養」)水泵電源線具備可拆式內聯插頭方便拆卸。

電源線固定扣:水盆邊三個塑膠固定扣是用來包覆電源線,固定錐體時必須 用到這些固定扣。

操作說明

重要事項:飲水器禁止空轉。僅限室內使用。

- 如同使用任何電器設備,使用前請先檢查電源 線有無裂開或損壞。
- 2. 請確保內聯插頭有接上(見圖1)。
- 3. 環繞水泵放置海綿濾網。海綿濾網的圓形側應 置於水泵面板的正前方。確認電源線是繞過海 綿濾網的頂端,而非從其下方繞過,如此可使 海綿濾網固定於定位。



4. 一邊使海綿濾網穩固地環繞著水泵,一邊將水泵裝入水盆中的內凹處。 定位水泵,使頂部的圓形開口位在水盆右上角或正中心(見圖 2)。下壓 水泵使其與吸盤接合。將進水管放進水泵頂部的圓形開口(見圖 3)。

圖 2



圖 3



- 5. 對準錐體,使電源線穿過電源線凹槽(見圖 4), 水泵仍留在原位。電源線對齊後,將錐體輕輕放入 定位。
- 6. 拿著部分組裝的過濾器殼體,輕輕掀起水流調節蓋 後取下,請勿以扭轉方式卸除(見圖 5)。輕掀噴嘴 環後卸下,以接觸過濾器殼體蓋。
- 7. 旋開過濾器殼體蓋,把濾芯放入殼體,拉環朝上 (見圖 6)。濾芯會輕鬆滑入就位。接著,旋上過濾 器殼體蓋。

重要事項:將濾芯放入殼體之前,請先用冷水徹底沖淨!此舉會除去所有脫落的活性炭塵,活性炭塵對寵物無害。濾芯在使用期間內可能會逐漸釋出少量的活性炭塵。這很正常,對寵物無害。濾芯使用兩週就該換新,以維持最佳效能。視使用飲水器的寵物數而定,濾芯可能得更常換新。

 


圖 5

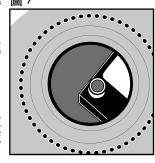


圖 6




8. 從錐體開口向內看,確保進水管牢牢地在馬達 圖7 正上方(見圖7)。小心將過濾器殼體插入錐 體開口,往下直壓(見圖8)。透過將過濾器 殼體推至橡膠墊圈底,殼體應該就很容易與進 水管連接。

請依您個人或寵物的喜好,從五個可互換的噴嘴中擇一。將選定的噴嘴環放在過濾器殼體蓋上,輕壓固定(圖9)。









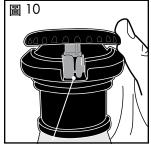


高起的凹槽

- 10. 在過濾器殼體蓋上,將水流調節蓋對準高起的凹槽(圖 10),輕壓水流調節蓋即可卡入定位。有了水流調節蓋,就能輕鬆調節水流量。右轉水流調節蓋可增強水流量,左轉可降低水流量。重要事項:如水流變小,且將水流調節蓋轉到最大也無用,就可能是濾芯堵塞或是髒了,和/或需要沖洗並清潔過濾器殼體。請參閱本手冊的「飲水器拆卸與清潔」一節,了解清潔與維護飲水器的詳情。
- 11. 拿一個塑膠固定扣與掛在水盆邊的電源線對齊。用盆外的雙叉端 (見圖 11) 將固定扣一路下滑直到夾在盆底(見圖 12)。
- 12. 把其他兩個塑膠固定扣固定在水盆上,形成三角點(見圖 13),這樣就 能扣住錐體。

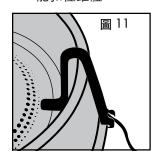

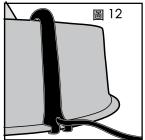

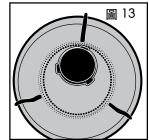

T-CN

- 13. 將飲水器的水盆裝水。確保水位至少高於 MIN(最低(水位線)),避免水泵空轉。此舉可啟用水泵。裝水請勿滿過飲水器的 MAX(最高(水位線))。
- 14. 將飲水器放在所需位置。 欲正確拿起飲水器,請用雙手握住水盆側壁下方抬起。重要事項: 千萬別從中央的錐體拿起整個飲水器。 建議您隨時鋪著保護墊或其他耐用的防水表面來保護地板,避免因寵物使用飲水器而受潮。
- 15. 飲水器插電前,請確保電源線和您的雙手完全乾燥。將飲水器插頭插入標準的牆壁電源插座。
- 16. 視需要加水,千萬別讓水位低於 MIN(最低(水位線))(盆底上方25 公釐左右),不然水泵可能會壞掉。 備用水泵須另購,可傳送電子郵件至 asiacc@petsafe.net 聯絡客戶服務中心。

飲水器拆卸與清潔

注意

清潔飲水器時,請勿使用任何具研磨作用的清潔液、海綿或墊子。這些廳料表面會刮傷不銹鋼配件。

重要事項:飲水器一定要保持清潔,方可維持正常運作。

過濾系統

寵物噴泉飲水器配備的兩種過濾裝置應當定期更換。活性碳濾芯可去除不良 味道與氣味,這有助於保持水的新鮮味道。海綿濾網能夠卡住頭髮、碎屑和 寵物食品以防止它們進入水泵內,從而達到最佳過濾效果。這兩種過濾裝置 結合使用將能夠使水泵保持潔淨,並可為寵物提供更新鮮的水。



活性碳濾芯: 濾芯應當每二至四週更換一次。若寵物噴泉飲水器 用於多隻寵物或產生大量唾液的寵物,應當更頻繁地更換濾芯。 重要事項:使用活性碳濾芯前請一律予以沖洗。使用期間可能會 釋出少量活性碳粉;此乃正常現象,不會對寵物造成危害。

海綿濾網:應根據寵物噴泉飲水器的位置,以及使用飲水器的 寵物數,每一至兩個月更換海綿濾網。如果清潔時還不想更換濾 網,請用乾淨的水徹底沖洗海綿濾網。



濾網是寵物噴泉飲水器的一項附加功能。即使未使用濾網,飲水器仍可正常操作,但若適當使用並定期予以更換,濾網能讓水更潔淨、更新鮮,同時還可延長寵物噴泉飲水器的使用壽命。清潔

寵物噴泉飲水器時,可將濾網取出沖洗。 重要事項: 切勿使用肥皂水清洗 濾網,因為殘留的肥皂液會滲入濾網,導致無法去除。僅可用水沖洗濾網。

飲水器:每週清潔一次。

- 1. 拔下飲水器的電源並拔除內聯插頭(見圖1)。
- 2. 卸下水流調節蓋與噴嘴環。
- 3. 接著,從水盆底輕輕往上拉出雙叉固定扣,取下三個固定扣放旁邊。


- 4. 拿好錐體,同時用拇指和另外兩指扣住過濾器殼體的頂部往上抬起並取下。過濾器殼體若太緊不好移動,以畫圓的方式來回轉動直到鬆到足以卸下。拿起殼體放旁邊。進水管極有可能環連在過濾器殼體的底部。
- 5. 拿起不銹鋼錐體,放旁邊待會清洗。
- 6. 找水盆,拿起水泵取下,放一邊稍後清潔。
- 7. 將海綿濾網從水泵取下。清除聚積在水泵面板上的任何毛髮、碎屑或寵物食品(請參閱「水泵日常保養」,瞭解水泵的詳細清潔指示。)
- 8. 握著水盆側壁下方,同時倒掉飲水器裡的水。
- 9. 請用溫水和肥皂清潔飲水器的配件。也可把飲水器放入洗碗機。**重要**事項:請勿使用任何具研磨作用的清潔劑、海綿或墊子,這些東西可能會 刮傷不銹鋼配件。把飲水器放入洗碗機之前,請先取下水泵。**請勿將水泵放入洗碗機**!
- 10. 有些地方或角落若難以清潔,請試試棉花棒或購買 Drinkwell 清潔刷套裝(3件套)。購買清潔套裝,請造訪我們的網站 www.petsafe.net 查詢離您最近的零售商,或取得您所在區域的客戶服務中心電話列表。

水泵日常保養


重要事項:若要飲水器長期耐用並供應潔淨的水,清潔水泵必不可少。請至 少兩週清潔一次水泵。未定期清潔水泵,可能使保固無效。




- 1. 請依照「飲水器拆卸與清潔」一節的說明取下飲水器的水泵(步驟 6)。
- 2. 一旦取出寵物噴泉飲水器的水泵後,請用拇指和食指輕壓面板兩側並予以拉出。可能必須將指甲塞入面板的縫隙中,才可撬出。
- 3. 接下來,您可把指甲塞到淚滴型進水面板狹窄側的小凸緣下方,再向外拉,即可取出進水面板(圖 14)。

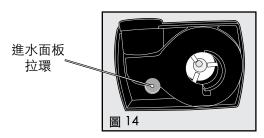

 - 4. 取出進水面板後,您也可取出以磁力固定的葉輪(白色三瓣式葉輪片)。以指甲卡入塑膠瓣片下往外掀開,取下葉輪(圖 15)。
- 5. 水泵拆開後,即可用溫肥皂水清潔配件。使用棉花棒或 Drinkwell*清潔套裝的「馬達清洗刷」進入馬達內腔,去除所有的堆積物(圖 16)。為了強化消毒並去除硬水,請用 10% 的白醋和 90% 的水製成的溶液清潔馬達。一定要用清水徹底沖乾淨。
- 把配件洗淨並晾乾,即可重新組裝水泵來使用。
 - a) 更換葉輪。
 - b) 將進水面板放回原處。
 - c) 把面板放回原處。

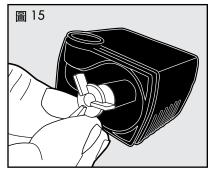



飲水器重新組裝

- 環繞水泵放置海綿濾網。海綿濾網的圓形側應置於水泵面板的正前方。 確認電源線是繞過海綿濾網的頂端,而非從其下方繞過,如此可使海綿 濾網固定於定位。
- 2. 把水泵放回原來的位置(見圖 2)。確保水泵頂部的圓形開口在水盆中心,否則進水管無法對準機體。往下輕壓與吸盤接合。
- 3. 把進水管放進水泵頂部的圓形開口(見圖3)。
- 4. 對準錐體,使電源線穿過電源線凹槽,水泵仍留在原位。電源線對齊後 (見圖 3),將錐體輕放入定位。
- 5. 建議在清潔飲水器後將濾芯換新。 更換活性炭濾芯后,將過濾器殼體蓋 擰緊。
- 6. 從錐體開口向內看,確保進水管牢牢地在水泵正上方。小心地將過濾器 殼體插入錐體開口往下直壓。將過濾器殼體推至橡膠墊圈底,應能輕易 將殼體與進水管連接。
- 7. 選擇您喜歡的噴嘴環(1-5 個噴嘴),放在過濾器殼體蓋頂部,輕壓到 位。請確保下壓力道都很平均。
- 8. 對準過濾器殼體的凹口,將水流調節蓋放回,輕壓固定。
- 9. 將三個固定扣附在飲水器的基座,以隱藏設備電源線並將錐體定位。
- 10. 將飲水器的水盆裝水。確保水位至少高於 MIN(最低(水位線)),避免水泵空轉。此舉可啟用水泵。裝水請勿滿過飲水器的 MAX(最高(水位線))。
- 11. 將飲水器放在所需位置。 欲正確拿起飲水器,請用雙手握住水盆側壁下方抬起。重要事項: 千萬別從中央的錐體拿起整個飲水器。 建議您隨時鋪著保護墊或其他耐用的防水表面來保護地板,避免因寵物使用飲水器而受潮。
- 12. 飲水器插電前,請確保電源線和您的雙手完全乾燥。將飲水器插頭插入標準的牆壁電源插座。

飲水器與您的環境

若您居住的環境較為潮濕,易於茲生霉菌與苔蘚,請於清洗寵物喷泉飲水器後,將其浸泡於稀釋後的醋酸溶液 (20% 醋與 80% 水的比例) 中十分鐘。 並且用其清洗馬達內腔。

如果您所在的地區水質較硬,水泵內外可能會有些許的白色的礦物質。 日後這可能會造成葉輪無法正常運作。 為避免水泵損壞,可採取以下措施:

- 經常清洗水泵。
- 2. 每週清洗時請使用稀釋過的醋酸溶液清洗水泵。
- 3. 不用自來水,改用蒸餾水作為寵物的飲用水。

使用時重要提示

- 您的寵物剛開始用飲水器時,可能會對這個新奇的物品小心翼翼。飲水器開始運轉後,任由寵物依其步調適應。有些寵物可能需要數天或更長時間才會開始使用,有些馬上就喝起來了。
- 您的寵物可能喜歡飲水器離平時的餵食區遠一點。設法將飲水器放在別處,例如廚房另一區、浴室或雜物間。
- 加冰塊到水盆裡讓流水更加冰鎮、爽口!

保固與客戶服務

本產品享有製造商提供的一(1)年有限保固。該保固不適用於因意外、誤用或濫用行為所致的損害。它還在法律允許之範圍內明確地排除了偶發性或後果性損害。因未進行清潔、碎片或硬水的礦化作用所致的功能喪失不在本保固範圍之內(請參閱清潔指示和環境說明)。

如需取得關於適用本產品之保固及其條款的詳細資訊,可造訪www.petsafe.net 及/或傳送電子郵件至 asiacc@petsafe.net。

請聯絡當地的客戶服務中心以解決您所遇到的任何安裝或技術難題,以及在必要時獲得協助來更換產品。如需取得您所在地區的客戶服務中心清單,請 造訪我們的網站 www.petsafe.net。

合規性



本設備符合 EMC 與低電壓指令。未經 Radio Systems Corporation 授權核准之產品變更或修改可能違反歐盟規定,可 讓使用者失去設備操作權力,並使保固無效。

查閱符合性之宣告:

http://www.petsafe.net/customercare/eu_docs.php。

重要的回收建議



請尊重所在國的廢電子電機設備規定。本設備必須回收。若不再需要此設備,請勿將其置於一般的城市廢器物處理系統中。麻煩帶回原銷售地點,以便透過我們的回收系統回收。如無法做到,請聯絡客戶服務中心取得進一步的資訊。

使用條款與責仟限制

1. 使用條款

若要使用本產品,應當接受本文所載之條款、條件和通知,而不對其作 出修改。使用本產品即意味著您接受所有此等條款、條件和通知。若您 不願接受這些條款、條件和通知,請勿使用本產品。

2. 正確使用

若您不確定本產品是否適合您的寵物,請諮詢獸醫或持有證書的馴獸師,或是連絡我們的客戶服務中心,或造訪我們的網站 www.petsafe.net。正確使用包括仔細閱讀產品隨附之「操作指南」的全文以及所有特定的警告聲明。

3. 不得用於非法或禁止的用途

本產品專門設計用於寵物。本裝置不可用於危害、傷害或激怒寵物。以非預期方式使用本產品可能會違反聯邦、州或當地法律

4. 責任限制

在任何情況下,Radio Systems Corporation 或其任何一間聯屬公司皆不對以下損害或損失承擔責任: (i) 任何間接性、懲罰性、偶發性、特殊性或後果性損害,及/或 (ii) 因誤用本產品所致或與之相關的任何損失或損害。購買者將在法律所允許之最大範圍內承擔與使用本產品有關的所有風險和責任。

5. 條款和條件之修改

Radio Systems Corporation 保留變更提供本產品時應遵循之條款、條件和通知的權利。

^{*} 已在美國專利暨商標局註冊

在下文中,Radio Systems Corporation 和任何其它附属公司或 Radio Systems Corporation 品牌都将统称为"我们"。

重要安全信息

本指南中使用的警示语和符号说明

▲警告

"警告"表示一种危险处境,如果不避免,会导致人员死亡或严重受伤。

小心

"小心"在未与安全警告符号同时使用时,表示一种危险处境,如果不避免,可能会导致您的宠物受到伤害。

"注意"用于指示不会导致人员受伤的安全使用做法。

▲警告

在使用电器时,一定要遵守基本的安全注意事项,以降低火灾、电击和/或人员受伤等风险,包括以下内容:

- 为降低受伤风险,在儿童使用或在儿童附近使用电器时,必须要密切监护。
- 为防止电击,切勿将电源线或插头放入水中或其它液体中。
- 只能使用制造商建议或销售的附件。
- 切勿在室外使用。仅供室内家庭使用。
- 切勿拉动电源线拔出插头。若要拔出插头,请抓住插头,而不要抓住电源线。
- 如果任何电器的电源线或插头损坏,或电器出现故障或已经损坏,切勿使用之。请立即致电客服中心寻求进一步指示。
- 对于便携式电器 为了降低电击风险,切勿将电器置于或储存在可能跌落或可能被拉入浴盆或水池的地方。
- 一定要在电器不使用时、安装或拆卸零件之前以及在清洁之前才能拔下插头。决不可拉动电源线从墙体插座上拔下插头。
- 切勿将电器用于其用途之外的任何目的。
- 如果本装置的插头受潮变湿,请关闭连接其插座的电源。切勿尝试拔下插头。
- 在安装后检查本电器。如果电源线或插头上有水,切勿插入插头。

小心

- 切勿让宠物咀嚼或吞咽任何零件。如果您担心电源线,请 在任何五金商店购买电线护套(一种硬质塑料保护套)。
- 饮水器零件不含 BPA(双酚基丙烷)。但是已知有些动物 对塑料食物和水容器过敏。如果您的动物出现对塑料过敏 反应迹象,请停止使用,并咨询您的兽医。

注意

- 只要保持水位并且定期清洁饮水器,该饮水器(一直插入电源)会一直喷水。要确保定期检查饮水器,以防止水泵损坏,因为水可能被消耗或蒸发,造成水泵空转。
- 切勿尝试自己修理马达。
- 为避免插头或插座变湿,插座一定要高于饮水器的高度。
- 如果必须使用延长线,应使用具有正确等级的延长线。
- 本电器的功率为 2.5 瓦。
- 切勿将电器用于其用途之外的任何目的。使用非制造商建议或销售的附件可能会造成不安全状况。切勿修改本装置。
- 请勿将电器安装或储存于温度低于4.5°C的环境中。
- 在清洁饮水器时,切勿使用任何磨洗溶液、海绵或擦洗垫。这些摩擦表面可划伤不锈钢零件。
- 阅读并遵守本电器上或包装上所列的所有重要注意事项。

请保存使用说明书以备用


感谢您选择 PetSafe[®] 品牌。您和您的宠物值得拥有互相陪伴的难忘时刻和包容共识。我们的产品和训练工具将增进宠物和主人之间的关系。如果您对我们的产品和训练工具有任何问题, 请查询我们的网站:www.petsafe.net,或致电我们的客服中心: +86 (0) 755 2671 5353。

为了充分利用您的保修期,请于 30 日内在 www.petsafe.net 注册您的产品。通过注册和保留你的收据,您将享受本产品的全部免费保修。如您致电客服中心,我们会更加及时地帮助您。 最重要的是,我们绝不会将您的宝贵信息透露或出售给任何人。在 www.petsafe.net 您可以找到完整的保修信息。

目录


组件33
Features33
重要定义34
使用说明35
次水器拆卸与清洁37
水泵日常维护
次水器重新组装40
次水器与您的环境41
使用时重要提示41
保修与客服42
合规性42
重要的回收利用建议
使用条款及责任限制43

组件

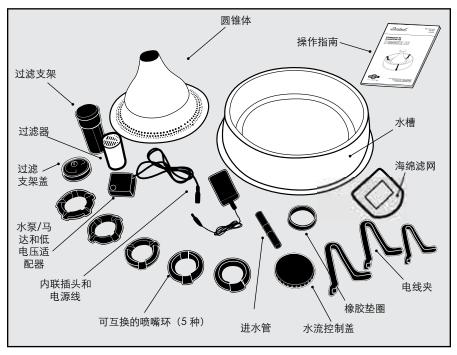

注:您的饮水器发货时已部分组装,但最好要检查确保饮水器的零件在运输 过程中没有松脱。

特点

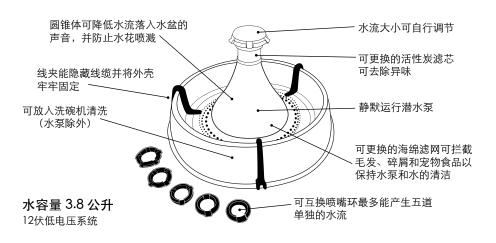

重要定义

水槽:不锈钢水槽是饮水器的基础。只需抓住该圆形水槽件侧壁的下面,即可将其拿走。

圆锥体:该不锈钢圆锥体是饮水器组件的壳体,其中保护的是宠物颇感兴趣的水泵。该圆锥体的作用是减少喷溅及落水声音。

过滤支架:该过滤支架从圆锥体顶部的开口处滑入,其主要目的是将过滤器固定到位。

过滤器:圆筒形过滤器的特点是在顶部有一个拉环,在将其放入过滤支架时,该拉环应向上,以便取放。

过滤支架盖:过滤支架盖是连接到过滤支架上的带螺丝的盖子,将过滤器固定到位。它作为基座件连接可互换的喷嘴环和水流控制盖。

海绵滤网:海绵滤网可挡住毛发、碎屑和宠物食品,防止其进入水泵,从而提供最佳过滤功能。使用海绵滤网是很重要的,因其有助于保持适当的水泵功能。

喷嘴环:可根据您宠物的喜好方便地更换五个可互换的喷嘴环,而且最多可提供5股水流,供家庭中的多个宠物使用。

水流控制盖:水流控制盖连接到饮水器顶部,可向左或向右旋转水流控制盖来调节水流。向右旋转增加水流。向左旋转减小水流。

 
水泵: 这是一种可拆卸清洁的小型低压潜水泵。重要: 该水泵不可使用洗碗机清洁! 在清洁前从饮水器上拆下水泵。(请参见"水泵日常维护")水泵电缆配有可拆卸内联插头,便于拆下。

导线夹:三个导线夹的作用是在电源线绕过水槽边缘时覆盖电源线,而且将 圆锥体件固定到位也需要这些导线夹。

使用说明

重要: 切勿让饮水器空转-仅适于室内使用。

- 1. 与任何电气装置一样,在使用之前请检查电源 线是否有磨损或损坏。
- 2. 确保内联插头已连接(参见图1)。
- 3. 将海绵滤网绕在水泵上。海绵滤网的圆形侧面 应正对水泵的面板。确保电源线从海绵滤网的 顶部而不是底下绕过,因为这样能使海绵滤网 保持固定。



4. 将海绵滤网紧紧绕在水泵上后,将水泵放入水槽的凹口内。 确定水泵的位置,使其顶部的圆形开口位于水槽的右上角,即水槽的正中央(参见图 2)。压下水泵,使其连接到吸盘上。将进水管插入水泵顶部的圆形开口中(参见图 3)。

图 2



图 3



- 5. 将圆锥体对齐,使电源线穿过电源线槽(参见图 4) ,同时将水泵保持在原位。一旦对齐电源线,将圆锥 体件轻轻放入固定位置。
- 6. 取出部分组装好的过滤支架,轻轻向上提起,取下水流控制盖 取下时切勿扭转(参见图 5)。轻轻向上提起取下喷嘴环来接触过滤支架盖。
- 7. 旋开过滤支架盖,将过滤器插入到过滤支架中, 使拉片向上(参见图 6)。过滤器将很容易滑动就 位。下一步,拧上过滤支架盖。

重要:在将过滤器放入支架中之前,在冷水下彻底冲洗过滤器!这将去除对宠物有害的任何脱落的木炭粉。在过滤器寿命期中会逐渐释放少量的木炭粉。这是正常的,对宠物无害。应每两周更换一次过滤器,以实现最佳性能。根据使用饮水器的宠物的数量,可能需要更频繁地更换过滤器。

图 4


 



图 5

 

图 6




查看圆锥体开口内部,确保进水管从马达上垂 图 7 直伸出(参见图7)。小心将过滤支架插入到 圆锥体开口内并垂直向下推(参见图8)。通 过一直向下将过滤支架推至橡胶垫圈上,支架 应很容易地连接到讲水管上。

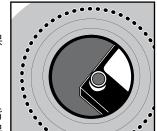

9. 根据您个人或宠物的喜好,在五个可互换喷嘴 环中选择一个。将选定的喷嘴环放在过滤支架 盖上面,然后轻轻压下固定到位(图9)。







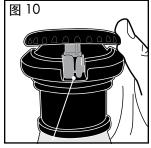


凸起槽

- 10. 在过滤支架盖上,将水流控制盖与凸起槽对齐(图 10)。轻轻压下后, 水流控制盖将卡紧入位。利用水流控制盖,您将能方便地调节水流强 度。向右旋转水流控制盖增加水流,向左旋转减小水流。 重要: 如果您 注意到水流减少,而将水流控制提高到最大,也无法改变水流,这可能 表示过滤器堵塞和变脏,需要冲洗和清洁过滤支架。请查阅本手册的" 饮水器拆卸与清洁"一节,了解清洁和维护饮水器的详情。
- 11. 拿一个塑料电线夹,与悬在水槽边缘上方的电源线对齐。利用水槽外面 上的两爪端头(参见图 11),将电线夹一直滑动到底,卡入水槽底部 (参见图12)。
- 12. 拿起另两个塑料电线夹,将其连接到水槽,使三个电线夹一起形成三角 形的三个点(参见图 13)。这样就将圆锥体锁定到位。

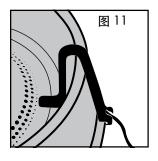

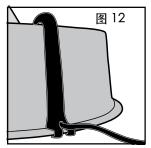

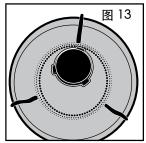

- 13. 给饮水器水槽注水。确保水位**至少**达到 MIN(最低(水位线))以便 使水泵不会空转。这将给水泵注水以备用用。切勿给饮水器注水超过 MAX(最高(水位线))。
- 14. 将饮水器放在所需位置。 若要正确拿起饮水器,用双手抓住水槽侧壁底部提起。重要: 绝不能抓住中央圆锥体件拿起满水的饮水器! 为了保护地板,我们建议一定要使用保护垫或其它耐久防水表面。这样将有助于避免宠物使用饮水器时喷溅出的水影响地板。
- 15. 在将饮水器连接到电源之前,确保电源线和您的手完全干燥。将饮水器插入标准墙体插座。
- 16. 按需加水。**绝不能**让水位低于 MIN(最低(水位线))(大约高出水槽 底部 25 毫米),否则水泵将出现故障。替换水泵另行购买,具体可通 过 asiacc@petsafe.net 联系客服中心。

饮水器拆卸与清洁

注意

在清洁饮水器时,<u>切勿</u>使用任何磨洗溶液、海绵或擦洗垫。这些摩擦表面可划伤不锈钢零件。

重要: 饮水器必须清洁才能继续正常工作。

过滤器: 每2周更换一次。

过滤器系统

宠物饮水器配备两种类型的过滤器,这些过滤器应定期更换。活性炭滤芯可消除不良味道和气味,使饮水保持新鲜。海绵滤网可挡住毛发、碎屑和宠物食品,防止其进入水泵,从而提供最佳过滤功能。这些过滤器共同发挥作用,保持水泵清洁,为您的宠物提供更加新鲜的饮水。



活性炭滤芯:过滤器应每二到四周更换一次。当宠物饮水器用于多个宠物或宠物唾液非常多时,应增加更换过滤器的频率。 重要:使用前务必清洗活性炭滤芯。过滤器使用寿命期间可能会释放少量活性炭粉末,这是正常现象,不会对您的宠物造成伤害。



海绵滤网:每一两个月更换一次海绵滤网,具体取决于宠物饮水器的位置以及使用饮水机的宠物的数量。如果在清洁时不想更换过滤器,请用淡水彻底清洗海绵滤网。

过滤器是宠物饮水器的新增特点。使用过滤器并非正常运行的必要条件。

不过,若使用得当且定期更换,过滤器有助于保持饮水清洁、干净,同时延 长宠物饮水器的使用寿命。在清洁宠物饮水器时,可冲洗过滤器。

重要:请勿用肥皂水洗涤过滤器,因为肥皂沉淀物会渗入过滤器并无法清除。务必用清水冲洗过滤器。


饮水器: 每周清洁一次。

- 1. 将饮水器插头从电源上拔下,断开内联插头(参见图 1)。
- 2. 拆下水流控制盖和喷嘴环。


- 3. 下一步,轻轻向上拉起两爪电线夹并从水槽底部移开,以此拆下三个电 线夹。将电线夹放在一旁。
- 4. 在拿稳圆锥体的同时,用拇指和两个手纸握住过滤支架顶部向上提起拆下。如果过滤支架太紧而难于拆下,尝试前后旋转支架,直至松动,然后拆下。将该件提起,放在一旁。进水管很有可能扔连接在过滤支架的底部。
- 5. 提起不锈钢圆锥体,放在一旁等待清洁。
- 6. 手伸到水槽中提起水泵, 拆下后放在一旁等待清洁。
- 7. 从水泵卸下海绵滤网。清除水泵面板上可能聚积的任何毛发、碎屑或宠物食物(请参阅"水泵日常维护"中详细的水泵清洁说明)。
- 8. 在抓住水槽侧壁底部的同时, 倒空饮水器中的水。
- 9. 用温水和肥皂清洁饮水器零件。您也可以将饮水器放在洗碗机中。 重要:<u>切勿</u>使用可能划伤不锈钢零件的任何磨洗溶液、海绵或擦洗垫。 在将饮水器放入洗碗机之前,拆下水泵。**切勿将水泵放入洗碗机**!
- 10. 如果很难够到某些点或难以接触的角落,可尝试使用棉签或购买 Drinkwell* 清洁套件,即清洁刷三件套。若要购买清洁套件,请访问我 们的网站 www.petsafe.net 查找在您附近的零售商,或查找您所在地 区的客服中心电话号码列表。

水泵日常维护


重要:清洁水泵对于饮水器寿命以及水的清洁至关重要。至少每两周清洁一次水泵。如果未能定期清洁水泵,保修可能失效。

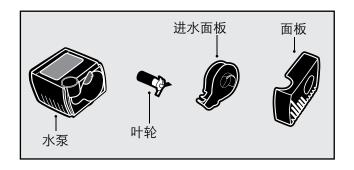


- 1. 按照"饮水器拆卸与清洁"一节(第6步)的解释,从饮水器上拆下水泵。
- 2. 「水「取出」物「水器之后,用拇指和食批「「面板任一端,然后拉出。可能需要「指甲伸入面板的「隙中,才可」」。
- 3. 接下来,将指甲放在泪珠状进水面板窄端上的小唇片下并向外拉,拆下进水面板,并将其拉出。(图 14)。

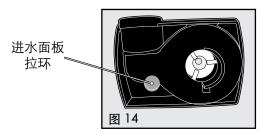

- 4. 取出进水面板后,您还可以拆下叶轮(白色,三瓣叶轮片),叶轮靠磁性保持在原位。若要拆下叶轮,使用指甲插入塑料叶片下面并提起(图 15)。
- 5. 一旦水泵拆卸完毕,您可以使用 温肥皂水清洁零件。使用棉签或 Drinkwell^{*}清洁套件中的"马达清 洗刷"进入马达内腔,清除任何积 聚物(图 16)。为了提高消毒和 硬水去除效果,请使用 10% 白醋和 90% 水溶液清洁马达。要确保用清 水彻底冲洗。
- 6. 一旦零件清洁和干燥后,您可以重 新组装水泵供使用。
 - a) 重新装好叶轮。
 - b) 重新装好进水面板。
 - c) 重新装好面板。

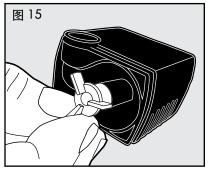

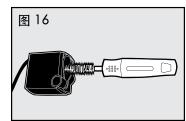

饮水器重新组装

- 1. 将海绵滤网绕在水泵上。海绵滤网的圆形侧面应正对水泵的面板。确保 电源线从海绵滤网的顶部而不是底下绕过,因为这样能使海绵滤网保持 固定。
- 2. 将水泵放回原位(参见图 2)。要确保水泵顶部上的圆形开口位于水槽的正中心,否则进水管将无法与支架正确对齐。轻轻压下,使其连接到吸盘上。
- 3. 将进水管重新插入水泵顶部的圆形开口中(参见图3)。
- 4. 将圆锥体对齐,使电源线穿过电源线槽,同时将水泵保持在原位。一旦对齐电源线(参见图 3),将圆锥体件轻轻放入固定位置。
- 5. 在清洁了饮水器之后,最好重新放置一个新的滤芯。 更换活性炭滤芯之 后,将过滤支架盖拧好。
- 6. 查看圆锥体开口内部,确保进水管从水泵上垂直伸出。小心将过滤支架 插入到圆锥体开口内并垂直向下推。通过一直向下将过滤支架推至橡胶 垫圈上,支架应很容易地连接到进水管上。
- 7. 选择您偏好的喷嘴环(1-5个喷嘴),将其放在过滤支架盖顶部,轻轻将 其压下就位。要确保四周均匀压下。
- 8. 将水流控制盖与过滤支架盖上的槽口对齐,重新放好水流控制盖。轻轻 下推,固定到位。
- 9. 将三个电线夹连接到饮水器基座周围,以隐藏电源线并将圆锥体固定到 位。
- 10. 给饮水器水槽注水。确保水位**至少**达到 MIN(最低(水位线))以便 使水泵不会空转。这将给水泵注水以备用用。切勿给饮水器注水超过 MAX(最高(水位线))。
- 11. 将饮水器放在所需位置。 若要正确拿起饮水器,用双手抓住水槽侧壁底部提起。重要: 绝不能抓住中央圆锥体件拿起满水的饮水器! 为了保护地板,我们建议一定要使用保护垫或其它耐久防水表面。这样将有助于避免宠物使用饮水器时喷溅出的水影响地板。
- 12. 在将饮水器连接到电源之前,确保电源线和您的手完全干燥。将饮水器插入标准墙体插座。

饮水器与您的环境

如果您的居住环境湿度大,存在霉菌和水藻等问题,则在正常清洁后将所有 宠物喷泉饮水器部件浸泡在稀释的醋溶液(20% 的白醋和 80% 的水)中约 10 分钟。并且也要将稀释的醋溶液倒入马达内腔。

如果您所在的地区水质较硬,水泵上面或内侧可能会出现少量白色矿物沉 淀。这最终会影响叶轮的正常旋转。为了避免更换或损坏水泵,请采取下列 预防措施:

- 1. 更频率地清洁水泵。
- 2. 使用稀释的醋溶液每周清洁水泵。
- 3. 不用自来水, 改用瓶装/桶装的纯净水作为宠物的饮用水。

使用时重要提示

- 在给宠物使用饮水器时,您的宠物可能对这种新型非常规物体敬而远之。在开始使用饮水器后,只需让宠物按自己的节奏适应即可。有些宠物需要几天甚至更长时间才开始使用,而有些宠物会马上使用。
- 您的宠物可能更喜欢将饮水器远离其正常的进食区。尝试将其放在另外的地方,比如厨房的不同区域或放在卫生间或杂物间。
- 在水槽中添加冰块,冰镇过的流水更加新鲜、爽口!

保修与客服

本产品享受 l (一) 年的有限厂家保修。该保修范围不包括意外、误用或滥用引起的损坏。它还特别排除了法律规定的连带或间接损坏。缺乏清洁以及"硬水"造成的碎屑或矿化引起的功能丧失不在保修范围内(参阅清洁说明和环保注意事项)。

本产品适用的保修详情及其条款可从 www.petsafe.net 上获取,和/或发送电子邮件至 asiacc@petsafe.net 索取。

如有任何安装或技术问题,请联系当地的客服中心,并根据需要,更换产品。如需获得您所在地区客服中心的清单,请浏览我们的网站www.petsafe.net。

合规性



本设备符合电磁兼容性(EMC)和低电压指令。未经 Radio Systems Corporation 授权对本产品进行改动或修改可能会违反欧 盟法规,会导致用户失去操作本设备的资格,并会使保修失效。

符合性声明可访问:

http://www.petsafe.net/customercare/eu_docs.php.

重要的回收利用建议



请遵守贵国的废弃电气和电子设备规定。此设备必须回收处理。如果您不再需要此设备,请勿将其随意丢弃。请将其送回您购买此产品的商店,以便于将其投入我们的回收系统。如果无法做到这点,请联系客服中心以获取更多信息。

使用条款及责任限制

1. 使用条款

使用本产品您便已经无异议地接受了此处列举的使用条款和注意事项。 使用本产品意味着接受了所有这些使用条款和注意事项。如果您不想接 受这些使用条款和注意事项,请勿使用本产品。

2. 使用方式

如果您不确定本产品是否适用于您的宠物,请咨询您的兽医或有执照的训练师,与我们的客服中心联系或访问我们的网站:www.petsafe.net。使用方式包含查阅随您的产品附带的完整操作指南以及任何具体的注意事项声明。

3. 禁止非法或不当使用

本产品是专为宠物使用而设计的。本设备不得用于伤害、致伤或挑衅。以非预期方式使用本产品可能会导致违反联邦、州或当地法律。

4. 责任范围

在任何情况下 Radio Systems Corporation 或其任何关联公司对如下事项不承担法律责任。(i)任何间接的、惩罚性的、 偶然的、特殊或间接损失;和 / 或(ii)由于误用本产品所导致的相应的任何损失或损害。 购买者应在法律允许的最大范围内承担因使用本产品而带来的全部风险和责任。

5. 使用条款的修改

Radio Systems Corporation 保留更改使用条款以及本产品所提供之注意事项的权利。

^{*}品牌已在美国专利商标局注册



protect. teach. love:

Radio Systems Corporation 10427 PetSafe Way Knoxville, TN 37932 (865) 777-5404 www.petsafe.net

400-1677-43/1

©2016 Radio Systems Corporation