



## USER GUIDE

### Battery Installation

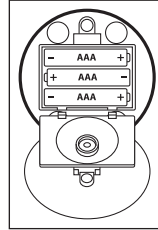

1. Locate battery door on bottom of the toy, underneath suction cup.
2. Open battery door and position 3 AAA batteries as shown in diagram.
3. Close battery door.

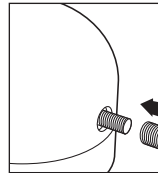

Attach spring arm by twisting the spring onto the threaded nub.

For more information about this product, please call 1-800-806-4229.

If you are not satisfied with this product, return it with your valid receipt to the place of purchase for a refund.

Dist. by/par: Pacific Coast Distributing, Inc., 19601 N. 27th Ave., Phoenix, AZ USA 85027



OUTSIDE

### Operating Instructions

#### One-time-play Mode

- Press suction cup onto a flat, smooth surface to engage suction cup. Suction cup performs best on materials such as glass and other smooth surfaces.
- Press and release power button located on top of the toy to turn on power.
- The toy will chirp to indicate that a single play session has been activated.
- The toy will automatically turn off after 10 minutes.
- If you wish to end play session before the toy automatically turns off, press and release the button.

#### Play-While-You-Are-Away mode

- Observe your cat playing with the toy before you enable the Play-While-You-Are-Away mode. Never enable this mode without confirming that it is safe for your cat.
- To activate multiple play sessions throughout the day: When unit is off, press and hold the button until the toy beeps 3 times. The audible beeps indicate the toy will cycle through 3 play sessions.
- The next play session will begin 2 hours after the first play session. The toy will chirp at the beginning of second play session. The final play session will begin two hours after the second play session has finished.
- Each play session will last 10 minutes. Time between sessions is 2 hours.
- Total Play-While-You-Are-Away period is 4.5 hours.
- Each time Play-While-You-Are-Away mode is activated, and prior to leaving your cat unsupervised with the toy, ensure that the suction cup is securely attached to the smooth surface and is in a safe location for your cat to play.

### To Ensure Proper Function

Do not mix old and new batteries.

Do not mix standard, alkaline, or rechargeable batteries. Only use batteries of the same or equivalent type as recommended.

Exhausted batteries should be removed immediately.

Do not dispose of batteries with household waste.

Suction should be checked regularly and only be used on a smooth surface.

### Advice for use

Pets should be supervised while playing with this product. Follow each play session with a tangible reward for your pet such as a treat or plush animal toy to simulate a "catch". If you notice your pet exhibiting obsessive or unusual behavior, immediately discontinue use and consult your veterinarian before using again.

Apart from playing with this product, it is recommended that pet parents interact with their pets and provide a variety of play activities, opportunities for stimulation, and an appropriate amount of daily exercise as determined by their veterinarian.

### Warning

- This product should only be used in accordance with the instructions in this user manual.
- Test toy to insure it will not damage or scratch any surface.
- Check that the feather, string and toy are securely fastened to the cat toy.
- Always supervise pets playing with pet toys.
- This product is intended for pets, not for children. Adult supervision required around children and pets.
- Complies with DHHS Rule 21 CFR, Subchapter J.

INSIDE