



**Operating Guide**

사용 설명서

## **D360SSKA-RE**

360 Stainless Steel Pet Fountain - 3.8 Litres

360 스테인레스 스틸 애완동물 분수대 - 3.8 리터



protect. teach. love:

Please read this entire guide before beginning  
사용하기 전에 본 설명서 전체를 읽어보십시오

# IMPORTANT SAFETY INFORMATION

Explanation of Attention Words and Symbols used in this guide

**⚠ WARNING** **WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.

**⚠ CAUTION** **CAUTION**, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

**NOTICE** **NOTICE** is used to address safe use practices not related to personal injury.

**⚠ WARNING** When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- To reduce the risk of injury, close supervision is necessary when an appliance is used by or near children.
- To protect against electric shock, do not place Power Cord or plug in water or other liquids.
- Only use attachments recommended or sold by the manufacturer.
- Do not use outdoors. FOR INDOOR HOUSEHOLD USE ONLY.
- Do not unplug by pulling on Power Cord. To unplug, grasp the plug, not the Power Cord.
- Do not operate any appliance if it has a damaged Power Cord or plug, or if it is malfunctioning or has been damaged. Call Customer Care Centre immediately for further instructions.
- For a portable appliance - To reduce the risk of electrical shock, do not place or store an appliance where it can fall or be pulled into a tub or sink.
- Always unplug any appliance when not in use, before putting on or taking off parts and before cleaning. Never pull on the electrical Power Cord to remove the plug from the wall outlet.
- Do not use an appliance for anything other than its intended use.
- If the plug of this device gets wet, turn off the electricity to that outlet. Do not attempt to unplug.
- Examine this appliance after installation. Do not plug in if there is water on the Power Cord or plug.

**CAUTION**

- Do not allow pets to chew on or swallow any parts. If you are concerned about the Power Cord, purchase a cord conduit (a hard plastic protector) at any hardware store.
- The Pet Fountain parts are BPA-FREE. However, some animals have been known to be sensitive to plastic food and water containers. If your animal shows signs of an allergic reaction to the plastic, please discontinue use until you have consulted with your veterinarian.

**NOTICE**

- The Pet Fountain is intended to run continuously (always plugged into electricity), as long as the water level is maintained and the Pet Fountain is cleaned regularly. Be sure to check the Pet Fountain regularly to help prevent damage to the Pump, as the water may get consumed or evaporate causing the Pump to run dry.
- Do not attempt repairs on the Pump yourself.
- To avoid the possibility of the plug or outlet getting wet, the outlet should always be above the level of the Pet Fountain.
- If an extension cord is necessary, an extension cord with a proper rating should be used.
- The electrical use of this appliance is 2 watts.
- Do not use appliance for anything other than intended use. The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the unit.
- Do not install or store appliance where it will be exposed to weather or temperatures below 4.5° C.
- When cleaning your Pet Fountain, do not use any abrasive cleaning solutions, sponges, or pads. These abrasive surfaces can scratch the stainless steel parts.
- Read and observe all important notices listed on the appliance and in the packaging.

**SAVE THESE INSTRUCTIONS**

Thank you for choosing the PetSafe® brand. You and your pet deserve a companionship that includes memorable moments and a shared understanding together. Our products promote a lifestyle of protection, teaching and love; essentials that influence memories for a lifetime. If you have any questions about our products, please visit our website at [www.petsafe.net](http://www.petsafe.net) or contact our Customer Care Centre.

---

## Table of Contents


Components . . . . .	5
Features . . . . .	5
Key Definitions . . . . .	6
Operating Instructions . . . . .	7
Pet Fountain Disassembly and Cleaning . . . . .	9
Pump Maintenance . . . . .	10
Pet Fountain Reassembly . . . . .	12
The Pet Fountain and Your Environment . . . . .	13
General Tips . . . . .	13
Warranty and Customer Care . . . . .	14
Compliance . . . . .	14
Important Recycling Advice . . . . .	14
Terms of Use and Limitation of Liability . . . . .	15
<b>Korean</b> . . . . .	16

# Components



**Note:** Your Pet Fountain will come partially assembled, however, it is a good idea to make sure none of the Pet Fountain pieces have come loose in shipping.

## Features

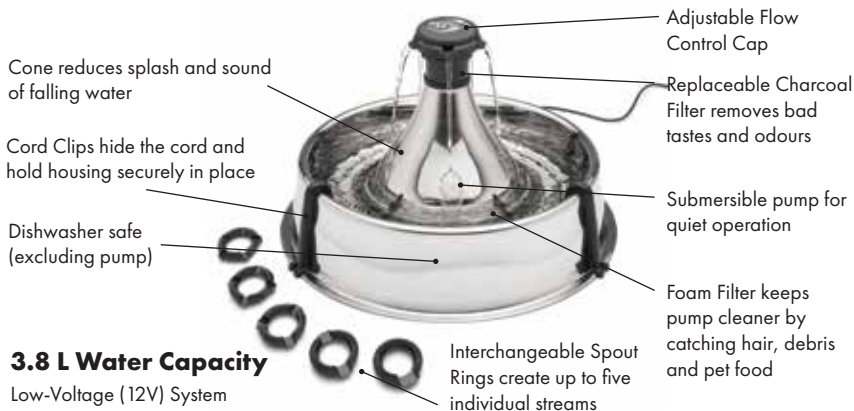

## Key Definitions

**Bowl:** The stainless steel Bowl is the foundation of the Pet Fountain. The circular bowl piece can be carried by simply gripping underneath the sidewalls of the Bowl.

**Cone:** The stainless steel Cone serves as the housing for the Pet Fountain components and encloses the Pump from curious pets. The Cone acts to reduce the splash and sound of the falling water.

**Filter Housing:** The Filter Housing slides into the opening at the top of the Cone and its main purpose is to hold the Filter in place.

**Charcoal Filter:** The cylindrical Charcoal Filter features a pull-tab at the top and should be placed in the Filter Housing with the tab facing upwards for easy placement and removal.

**Filter Housing Lid:** The Filter Housing Lid is a screw on lid that attaches to the Filter Housing to keep the filter in place. It serves as the base piece to attach the interchangeable Spout Rings & Flow Control Cap.

**Foam Filter:** The Foam Filter collects hair, debris and pet food before they reach the Pump. It is important to use the Foam Filter as it helps maintain proper Pump function.

**Spout Rings:** The five interchangeable Spout Rings can be easily changed based upon your pet's preference and can provide up to 5 streams of water for multiple pet households.

**Flow Control Cap:** The Flow Control Cap is attached to the top of the Pet Fountain and easily adjusts the flow of water by turning the Flow Control Cap to the left or right. Turn to the right, to increase the flow of water. Turn to the left to decrease flow.


**Pump:** A small Low Voltage submersible aquarium pump that can be dismantled for cleaning. **Important:** THE PUMP IS NOT DISHWASHER SAFE! Remove Pump from Pet Fountain prior to cleaning. (See "Pump Maintenance") The pump cord features a detachable In-Line Plug for easy removal.

**Cord Clips:** The three plastic Cord Clips serve to cover the electrical Power Cord as it feeds over the rim of the Bowl and these Cord Clips are required to hold the Cone piece in place.

# Operating Instructions

**Important:** DO NOT RUN DRY - FOR INDOOR USE ONLY.

1. As with any electrical device, check the electrical Power Cord for any tears or damage before use.
2. Make sure the In-Line Plug is connected (**Fig. 1**).
3. Place the Foam Filter around the Pump. The rounded side of the Foam Filter should be directly in front of the Faceplate on the Pump. Make sure the electrical power cord runs over the top of the Foam Filter, not underneath it, as this will keep the Foam Filter in place.
4. With the Foam Filter securely around the Pump, place the Pump inside the indentation in the Bowl. Position the Pump so that the circular opening on the top, is in the upper right hand corner or true center of the Bowl (**Fig. 2**). Press down on the Pump to engage the suction cups. Place the Intake Tube into the circular opening on the top of the Pump (**Fig. 3**).

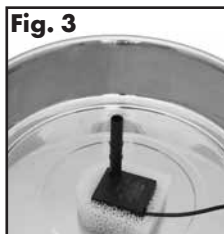

5. Align the Cone so that the Power Cord runs through the Power Cord notch (**Fig. 4**) without moving the Pump from its original position. Once the Power Cord is aligned, gently place the Cone piece into resting position.
6. Take the partially assembled Filter Housing and remove the Flow Control Cap by gently lifting straight up - DO NOT TWIST TO REMOVE (**Fig. 5**). Gently lift up and remove the Spout Ring to access the Filter Housing Cap.
7. Unscrew Filter Housing Cap and insert the Filter into the Filter Housing with the pull-tab facing up (**Fig. 6**). The Filter will slide easily into place. Next, screw on the Filter Housing Cap.

**Fig. 5**



**Fig. 6**




**IMPORTANT:** Rinse the Filter thoroughly under cool water before placing into the housing! This will remove any loose charcoal dust, which is harmless to your pet. A small amount of charcoal dust be gradually released for the life of the Filter. This is normal and not harmful to your pet. The Filter should be replaced every two weeks for best performance. Filters may need to be changed more frequently depending on the number of pets using the Pet Fountain.

- Look into the Cone opening and make sure the Intake Tube is sticking straight up from the Motor (**Fig. 7**). Carefully, insert the Filter Housing into the cone opening and push straight down (**Fig. 8**). By pushing the Filter Housing all the way down to the rubber gasket, the Housing should easily attach to the Intake Tube.
- Select one of the five interchangeable Spout Rings based upon your personal preference or your pet's. Place the chosen Spout Ring on top of Filter Housing Cap and gently press down to secure in place (**Fig. 9**).

**Fig. 7****Fig. 10**

- On the Filter Housing Cap, align the Flow Control Cap with the raised notches (**Fig. 10**). Press down gently and the Flow Control Cap will snap into place. With the Flow Control Cap, you will be able to easily adjust the intensity of the water flow. Turn the Flow Control Cap to the right to increase the flow of water and turn to the left to decrease. **IMPORTANT:** If you notice a decrease in the flow of the water that is not corrected by increasing the flow control to max flow, this may be an indication of a clogged and dirty Filter and/or the need to rinse and clean the Filter Housing. Consult the "Pet Fountain Disassembly and Cleaning" section of this manual for details on cleaning and maintaining your Pet Fountain.
- Take one of the plastic Cord Clips and align with the electrical Power Cord hanging over the rim of the Bowl (**Fig. 11**), slide the Cord Clip all the way down until it clips onto the bottom of the Bowl (**Fig. 12**).
- Take the other two plastic Cord Clips and attach them to the Bowl so that the three clips together form the three points of a triangle (**Fig. 13**). This will lock the Cone in place.

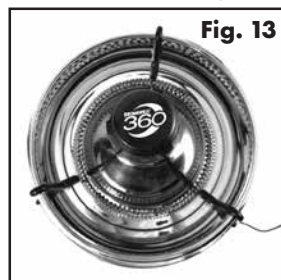



13. Place Pet Fountain in desired location. **Important:** To take care of your floors, we suggest to always use a protective mat or other durable, water resistant surface. This will help protect your floor from any water that may splash out from your pet's use of the Pet Fountain.
14. Fill the Pet Fountain Bowl with water. Make sure the water level is **at least** to the minimum MIN (minimum) fill line so the Pump does not run dry. This will prime the Pump for use. Do not fill the Pet Fountain past the MAX (maximum) fill line.
15. Before plugging the Pet Fountain into electricity, make sure the Power Cord and your hands are completely dry. Plug the Pet Fountain in to a standard wall outlet.
16. Add water as needed. **Never** let the water level fall lower than the MIN (minimum) fill line (approximately 25 mm above the bottom of the Bowl) or the Pump may fail. To properly pick up the Pet Fountain, use both hands and grip underneath the sidewalls of the Bowl and lift. **Important:** Never pick up a full Pet Fountain by the center Cone piece.

## Pet Fountain Disassembly and Cleaning

### NOTICE

When cleaning your Pet Fountain, do not use any abrasive cleaning solutions, sponges, or pads. These abrasive surfaces can scratch the stainless steel parts.

**Important:** Pet Fountain must be cleaned to continue working normally.

### FILTER SYSTEM

The Pet Fountain is equipped with two types of filters that should be replaced on a regular basis. The Charcoal Filter removes bad tastes and odours, keeping water fresh. The Foam Filter collects hair, debris and pet food and prevents them from reaching the Pump, providing optimal filtration. The filters together will keep the Pump cleaner and provide fresher water to your pet.



**CHARCOAL FILTER:** Filters should be changed every two to four weeks. Replace filters more frequently when using the Pet Fountain for multiple pets or pets that produce a lot of saliva. **Important:** Always rinse the Charcoal Filter prior to use. A small amount of charcoal dust may be released for the life of the filter, this is normal and is not harmful to your pet.



**FOAM FILTER:** Replace the Foam Filter every one to two months, depending on the location of the Pet Fountain and the number of pets using it. If you do not intend to replace the filter at the time of cleaning, rinse the Foam Filter thoroughly with fresh water.


Filters are an added feature of the Pet Fountain. Using the filters is not required for normal operation. However, when used properly and changed regularly, the filters help keep the water cleaner and fresher, while extending the life of your Pet Fountain. Filters may be rinsed out when the Pet Fountain is cleaned. **Important:** Never wash the filters with soapy water, as the soap residue will seep into the filters and cannot be removed. Only rinse the filters with water.

## PET FOUNTAIN: Clean once a week.


1. Unplug Pet Fountain from electrical source and disconnect the In-Line Plug (**Fig. 1**).
2. Remove the Flow Control Cap and Spout Ring.
3. Next, remove the three Cord Clips by gently pulling the two-prong clip up and away from the bottom of the Bowl. Set the Cord Clips aside.
4. While holding the Cone steady, wrap your thumb and two fingers around the top of the Filter Housing and lift up to remove. If the Filter Housing is too tight and not moving easily, try twisting the Housing back and forth in a circular motion until it loosens up enough to remove. Lift the piece up and set aside. Most likely, the Intake Tube will still be attached to the bottom of the Filter Housing.
5. Lift up the stainless steel Cone and set aside for cleaning.
6. Reach in the Bowl and lift up the Pump, remove and set aside for cleaning.
7. Remove the Foam Filter from the Pump. Clean away any hair, debris or pet food that may have accumulated on the Faceplate of the Pump (See "Pump Maintenance" for detailed cleaning instructions for the Pump).
8. While holding underneath the sidewalls of the Bowl, empty the water out of the Pet Fountain.
9. Clean the Pet Fountain parts with warm water and soap. You can also put the Pet Fountain in the dishwasher. **Important:** Do not use any abrasive cleaning solutions, sponges, or pads that could potentially scratch the stainless steel parts. Remove the pump before placing the Pet Fountain in the dishwasher. **DO NOT PLACE PUMP IN DISHWASHER!**
10. If you have troubles reaching certain spots or hard-to-reach corners, try using a cotton swab or purchase the Drinkwell® Cleaning Kit, a 3-Piece Brush kit. To purchase a cleaning kit, visit our website at [www.petsafe.net](http://www.petsafe.net) to locate a retailer near you or to find a listing of Customer Care Centre telephone numbers for your area.

## Pump Maintenance

**Important:** Cleaning the Pump is essential to the longevity of the Pet Fountain as well as the cleanliness of the water. Clean the Pump at least every two weeks. Warranty may be voided if the Pump is not cleaned regularly.

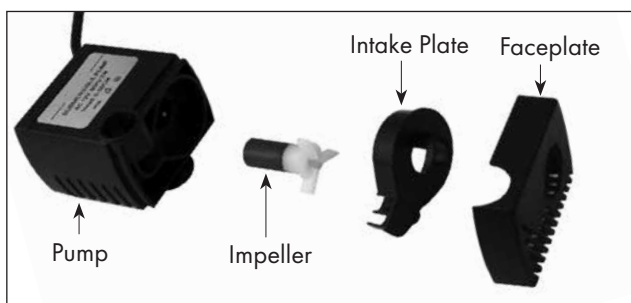

1. Remove Pump from the Pet Fountain as explained in the “Pet Fountain Disassembly and Cleaning” section (Step 6).
2. Once the Pump is out of the Pet Fountain, with your thumb and forefinger, gently squeeze on either side of the Faceplate and pull off. It may be necessary to insert a fingernail into the seam of the Faceplate to pry it off.
3. Next, you will want to remove the Intake Plate by placing your finger nail under the small lip located on the narrow side of tear drop shaped Intake Plate and pull out (**Fig. 14**).

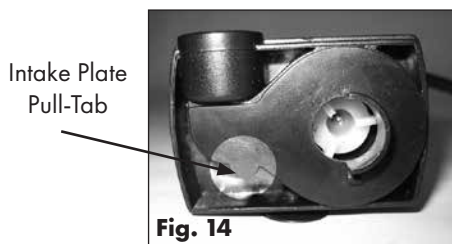

4. Once the Intake Plate is removed you can also remove the Impeller (white, 3-bladed propeller) which is held in place magnetically. To remove the Impeller use a fingernail to get under the plastic blade and lift out (**Fig. 15**).

Once the Pump is disassembled you can clean the parts with warm soapy water. Use a cotton swab or the “motor” brush from the Drinkwell® Cleaning Kit to get into the Motor cavity and remove any build-up (**Fig. 16**). For added disinfecting and hard water removal, clean the Motor with a 20% white vinegar & 80% water solution. Be sure to rinse thoroughly with fresh water.



5. Once the parts are clean and dry, you can reassemble the Pump for use.
  - a) Replace the Impeller.
  - b) Replace the Intake Plate.
  - c) Replace the Faceplate.



# Pet Fountain Reassembly

1. Place the Foam Filter around the Pump. The rounded side of the Foam Filter should be directly in front of the Faceplate on the Pump. Make sure the electrical power cord runs over the top of the Foam Filter, not underneath it, as this will keep the Foam Filter in place.
2. Replace the Pump into its original location (**Fig. 2**). Be sure that the circular opening on the top of the Pump is positioned in the Bowl's true center or the Intake Tube will not properly align with the Housing. Gently push down to engage the suction cups.
3. Replace the Intake Tube into the circular opening on the top of the Pump (**Fig. 3**).
4. Align the Cone so that the Power Cord runs through the Cord Notch while keeping the Pump in its original position. Once the Power Cord is aligned (**Fig. 3**), gently place the Cone piece into resting position.
5. After cleaning your Pet Fountain, it is a good idea to replace your Filter with a new one. Insert the Charcoal Filter into the Filter Housing with the pull-tab facing up. The Charcoal Filter will slide easily into place. Next, screw on the Filter Housing Cap.
6. Look into the Cone opening and make sure the Intake Tube is sticking straight up from the Pump. Carefully, insert the Filter Housing into the Cone opening and push straight down. By pushing the Filter Housing all the way down to the rubber gasket, the Filter Housing should easily attach to the Intake Tube.
7. Choose your preferred Spout Ring (1 spout up to 5 spouts) and place on top of the Filter Housing Cap, press it gently into place. Be sure it is pushed down evenly all the way around.
8. Replace the Flow Control Cap by aligning the Flow Control Cap with the notches on the Filter Housing Cap. Gently push down to secure in place.
9. Attach the three Cord Clips around the base of the Pet Fountain to hide the electrical Power Cord and secure the Cone piece into place.
10. Place Pet Fountain in desired location and fill with water to the MAX fill line.  
**Important:** To take care of your floors, we suggest to always use a protective mat or other durable, water resistant surface. This will help protect your floor from any water that may splash out from your pet's use of the Pet Fountain.
11. With dry hands, reconnect the In-Line Plug and then plug the Pet Fountain in to a standard wall outlet. Adjust the flow to your preference and let your pet enjoy the fresh free-falling water of the Pet Fountain.

# The Pet Fountain and Your Environment

If you live in a humid environment and have problems with mold or algae, soak all Pet Fountain parts in a diluted vinegar solution (20% White Vinegar and 80% Water) for 10 minutes after regular cleaning. Also, pour the diluted vinegar solution into the Pump's motor cavity.

If you have hard water, small white mineral deposits may form on or inside the Pump. This can eventually prevent the Impeller from turning properly. To avoid replacement or damage to the Pump, please take the following precautions:

- Clean the Pump more frequently.
- Clean the Pump with a diluted vinegar solution weekly.
- Use bottled water instead of tap water.

---

## General Tips

- When being introduced to the Pet Fountain, your pet may be cautious of this new and unusual object. After beginning operation of your Pet Fountain, simply allow your pet to adjust at his or her own pace. Some pets may take several days or longer to begin use, while others will start right away.
- Your pet may prefer that the Pet Fountain be placed away from their normal feeding area. Try placing it in another location, such as a different area of the kitchen or in a bathroom or utility room.
- Add ice cubes to the bowl for refreshing, ice-cold running water!

## Warranty and Customer Care

This product has the benefit of a 1 (one) year limited manufacturer's warranty. This warranty does not cover damage from accidents, misuse or abuse. It also specifically excludes incidental or consequential damages as allowed by law. Loss of function as a result of lack of cleaning, debris or mineralization from "hard water" does not qualify under this warranty (Refer to cleaning instructions and environmental notes).

Details of the warranty applicable to this product and its terms can be found at [www.petsafe.net](http://www.petsafe.net) and/or are available by sending an email to: [asiacc@petsafe.net](mailto:asiacc@petsafe.net).

Please contact your local Customer Care Centre with any set-up or technical difficulties you experience, and if necessary to assist in the replacement of your product. For a listing of Customer Care Centres in your area, visit our website at [www.petsafe.net](http://www.petsafe.net).

---

## Compliance



This equipment complies with the EMC and Low Voltage Directives. Unauthorized changes or modifications to the product that are not approved by Radio Systems Corporation may violate EU regulations, could void the user's authority to operate the equipment, and will void the warranty.

The Declaration of Conformity can be found at:  
[http://www.petsafe.net/customercare/eu\\_docs.php](http://www.petsafe.net/customercare/eu_docs.php).

---

## Important Recycling Advice



Please respect the Waste Electrical and Electronic Equipment regulations in your country. This equipment must be recycled. If you no longer require this equipment, do not place it in the normal municipal waste system.

Please return it to where it was purchased in order that it can be placed in our recycling system. If this is not possible, please contact the Customer Care Centre for further information.

---

Covered by: U.S. Patents No. 5,799,609 and 5,842,437

# Terms of Use and Limitation of Liability

## 1. **Terms of Use**

Use of this Product is subject to your acceptance without modification of the terms, conditions and notices contained herein. Use of this Product implies acceptance of all such terms, conditions and notices. If you do not wish to accept these terms, conditions, and notices, please return the Product, unused, in its original packaging and at your own cost and risk to the relevant Customer Care Centre together with proof of purchase for a full refund.

## 2. **Proper Use**

If you are unsure whether this Product is appropriate for your pet, please consult your veterinarian or certified trainer prior to use. Proper use includes, without limitation, reviewing the entire Operating Guide and any safety information statements.

## 3. **No Unlawful or Prohibited Use**

This Product is designed for use with pets only. Using this Product in a way that is not intended could result in violation of Federal, State or local laws.

## 4. **Limitation of Liability**

In no event shall Radio Systems Corporation or any of its associated companies be liable for (i) any indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the misuse of this Product. The Purchaser assumes all risks and liability from the use of this Product to the fullest extent permissible by law. For the avoidance of doubt, nothing in this clause 4 shall limit Radio Systems Corporation's liability for human death or personal injury or fraud or fraudulent misrepresentation.

## 5. **Modification of Terms and Conditions**

Radio Systems Corporation reserves the right to change the terms, conditions and notices governing this Product from time to time. If such changes have been notified to you prior to your use of this Product, they shall be binding on you as if incorporated herein.

# 중요 안전 정보

본 설명서에서 사용하는 주의 용어 및 기호 설명

## ⚠ 경고

경고는 피하지 않을 경우 사망 또는 심각한 상해로 이어질 수 있는 위험한 상황을 나타냅니다.

## 주의

주의는 안전 경고 기호 없이 사용되는 경우 피하지 않으면 애완동물에 해를 입힐 수 있는 위험한 상황을 나타냅니다.

## 안내

안내는 신체 상해와 관련되지 않은 안전 사용 방식을 다루는데 사용됩니다.

## ⚠ 경고

전기 기구 사용 시 화재, 감전 및/또는 신체 상해의 위험을 줄이기 위해 다음 사항을 비롯한 기본 안전 수칙을 항상 따라야 합니다:

- 기구를 어린이 옆에서 또는 주변에서 사용하는 경우 부상 위험을 줄이기 위해 철저히 살펴야 합니다.
- 감전 방지를 위해 전기 코드나 플러그를 물이나 기타 액체 안에 넣지 마십시오.
- 제조업체가 권장하거나 판매하는 부속 장치만 사용하십시오.
- 옥외에서 사용하지 마십시오. 가정 실내 전용.
- 플러그를 뽑을 때 전기 코드를 잡아당기지 마십시오. 플러그를 뽑을 때 전기 코드가 아니라 플러그를 잡으십시오.
- 기구의 전기 코드나 플러그가 손상되거나 기구가 고장나거나 손상된 경우 기구를 작동하지 마십시오. 즉시 고객 지원 센터에 연락하여 자세한 지침을 받으십시오.
- 휴대용 기구의 경우 - 감전 위험을 줄이기 위해 떨어지거나 욕조나 싱크에 끌려들어갈 수 있는 곳에 기구를 놓거나 보관하지 마십시오.
- 사용하지 않을 때, 부품을 탈착하기 전에 그리고 청소하기 전에는 항상 기구의 전원 플러그를 빼십시오. 절대로 전기 코드를 당겨서 플러그를 벽 콘센트로부터 빼내지 마십시오.
- 원래 용도 이외의 용도로 기구를 사용하지 마십시오.
- 본 기구의 플러그가 젖은 경우, 그 콘센트에 공급되는 전기를 끄십시오. 플러그를 빼려고 하지 마십시오.
- 본 기구를 설치한 후에 검사하십시오. 전기 코드나 플러그에 물이 있으면 플러그를 꽂지 말아야 합니다.



## 주의

- 애완동물이 부품을 씹거나 삼키지 못하게 하십시오. 전기 코드에 대해 염려가 될 경우 전기상에서 전선관(단단한 플라스틱 보호관)을 구입하십시오.
- 분수대 부품에는 BPA가 없습니다. 그러나 어떤 동물들은 플라스틱 식기 및 물 그릇에 민감한 것으로 알려져 있습니다. 애완동물이 플라스틱에 대해 알레르기 반응의 징후를 보이는 경우 수의사와 상의하기 전까지는 기구 사용을 중단하십시오.

## 안내

- 분수대는 수위가 유지되고 분수대를 정기적으로 청소하는 한 계속 작동하도록 설계되었습니다(항상 플러그를 전원에 꽂아둠). 물이 다 소비되거나 증발되어 펌프가 물 없는 상태에서 작동될 수 있으므로 분수대를 정기적으로 점검하여 펌프에 손상이 발생하지 않도록 해야 합니다.
- 모터를 직접 수리하려고 시도하지 마십시오.
- 플러그나 콘센트가 젖을 가능성을 피하기 위해 콘센트는 항상 분수대보다 더 높은 위치에 있어야 합니다.
- 연장 코드가 필요한 경우 적절한 등급의 연장 코드를 사용해야 합니다.
- 본 기구의 전기 사용량은 2 와트입니다.
- 원래 용도 이외의 용도로 기구를 사용하지 마십시오. 제조업체가 권장하거나 판매하지 않는 부속 장치를 사용할 경우 위험한 상태가 초래될 수 있습니다. 기구를 개조하지 마십시오.
- 외부 기후나 4.5°C 이하의 온도에 노출되는 곳에 기구를 설치하거나 보관하지 마십시오.
- 분수대 청소 시, 연마성 청소 용액, 스폰지 또는 패드를 사용하지 **마십시오**. 이러한 연마성 면이 스테인레스 스틸 부품에 긁힌 자국이 생기게 할 수 있습니다.
- 기구와 포장에 표시된 모든 중요 고지사항을 읽고 준수하십시오.

이 수칙을 보관하십시오

PetSafe® 브랜드를 선택해 주셔서 감사합니다. 고객님의 고객님과 고객님의 애완동물은 추억에 남을만한 순간들과 마음을 같이한 것을 비롯하여 서로 정을 나누는 사이입니다. 저희의 제품은 평생 동안 추억에 영향을 미칠 필수 요소인 보호, 가르침 및 사랑의 생활방식을 촉진합니다. 저희 제품에 대해 궁금한 점이 있으시면 저희 웹사이트 [www.petsafe.net](http://www.petsafe.net) 를 방문하거나 고객 지원 센터에 문의하십시오.

## 목차

구성품 .....	19
특징 .....	19
중요기능 .....	20
작동 설명 .....	21
분수대 분해 및 청소 .....	23
펌프 유지보수 .....	24
분수대 재조립 .....	26
분수대와 환경 .....	27
사용 요령 .....	27
품질보증 및 고객 서비스 .....	28
준수 .....	28
중요한 재활용 정보 .....	28
사용 조건과 배상 책임의 한계 .....	29

## 구성품



참고: 분수대는 부분 조립 상태로 공급되지만 운송 도중에 분수대의 부품이 헐거워지지 않았는지 확인하는 것이 좋습니다.

## 특징

콘은 물이 튀는 것과 떨어지는 물의 소음을 줄이는 역할을 합니다.

코드 클립이 코드를 가리고 하우스징을 단단히 제자리에 유지합니다

식기세척기로 세척 가능 (펌프 제외)

3.8 L 물 용량  
저전압(12V) 시스템



## 중요기능

**용기:** 스테인레스 스틸 용기는 분수대의 기초입니다. 둥근 용기는 용기의 측면 바닥을 잡아서 나르면 됩니다.

**콘:** 스테인레스 스틸 콘은 분수대 구성품들을 위한 하우징 역할을 하며 호기심이 많은 애완동물들로부터 펌프를 보호합니다. 콘은 물이 튀는 것과 떨어지는 물의 소음을 줄이는 역할을 합니다.

**필터 하우징:** 필터 하우징은 콘의 상단에 있는 구멍 안으로 들어가며 주목적은 필터를 지탱하는 것입니다.

**필터:** 원통형 필터는 상단에 당김용 고리가 있으며 용이한 설치 및 제거를 위해 고리가 위를 향하도록 필터 하우징 내에 설치해야 합니다.

**필터 하우징 뚜껑:** 필터 하우징 뚜껑은 필터를 제자리에 유지하기 위해 필터 하우징에 부착되는 나사형 뚜껑입니다. 이 뚜껑은 교환 가능한 주둥이 링과 유량 제어 캡을 부착기 위한 바닥판 역할을 합니다.

**포움 필터:** 포움 필터는 털, 오물 및 애완동물 사료를 걸러서 펌프로 가지 않게 하는 적합한 여과 기능을 제공합니다. 포움 필터는 펌프의 정상적 작동을 유지하는데 도움이 되므로 반드시 사용해야 합니다.

**주둥이 링:** 다섯 개의 교환 가능 주둥이 링은 애완동물의 취향에 따라 쉽게 바꿀 수 있으며 여러 애완동물이 있는 가정을 위해 물 흐름을 5개까지 제공할 수 있습니다.

**유량 조절 캡:** 유량 조절 캡은 분수대의 상단에 부착되며 유량 조절 캡을 왼쪽이나 오른쪽으로 돌려서 유량을 쉽게 조절합니다. 유량을 늘리려면 오른쪽으로 돌리십시오. 유량을 줄이려면 왼쪽으로 돌리십시오.


**펌프:** 청소를 위해 분해되는 소형 저전압 수중 어항 펌프. **중요:** 이 펌프는 식기세척기에서 세척하면 손상될 수 있습니다! 청소 전에 분수대에서 펌프를 빼내십시오. ("펌프 유지보수" 항 참조) 펌프 코드는 용이한 분리를 위한 분리 가능 인라인 플러그를 갖추고 있습니다.

**코드 클립:** 세 개의 플라스틱 코드 클립은 용기의 가장자리를 타고 설치되는 전기 코드를 씌우는 역할을 하며 이 코드 클립들은 콘을 제자리에 고정하는데 필요합니다.

## 작동 설명

중요: 건조 상태에서 작동하지 마십시오 - 실내 전용.

1. 모든 전기 기구와 마찬가지로 사용 전에 전기 코드가 갈라지거나 손상되지 않았는지 점검하십시오.
2. 인라인 플러그가 연결되었는지 확인하십시오 (그림 1 참조).
3. 포움 필터가 펌프를 둘러싸게 하십시오. 포움 필터의 둥근 쪽은 펌프 전면판의 바로 앞에 있어야 합니다. 전기 코드는 포움 필터의 아래쪽이 아니라 위로 지나가야 하는데 이렇게 함으로써 포움 필터가 제자리에 유지되기 때문입니다.
4. 포움 필터가 펌프 주변을 단단히 둘러싼 상태에서 펌프를 용기 내의 공간 안에 설치합니다. 상단에 있는 둥그런 구멍이 용기의 오른쪽 위 귀퉁이로 가거나 정중앙에 있도록 펌프를 배치하십시오 (그림 2 참조). 펌프를 내리눌러 흡입 컵들이 맞물리게 하십시오. 흡입관을 펌프 뒷부분에 있는 둥그런 구멍에 꽂으십시오 (그림 3 참조).

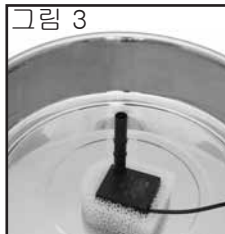

5. 펌프를 원래 위치에서 움직이지 않고 전기 코드가 전기 코드 홈을 통해 배선되도록 콘을 정렬하십시오(그림 4 참조). 일단 전기 코드가 정렬되면, 콘을 설치 위치에 가볍게 놓으십시오.
6. 부분적으로 조립된 필터 하우징에서 유량 제어 캡을 조심해서 똑바로 위로 올려서 빼내십시오 - 뒤틀어서 빼지 마십시오 (그림 5 참조). 필터 하우징 캡에 액세스하기 위해 주동이 링을 부드럽게 올려서 빼내십시오.
7. 필터 하우징 캡을 돌려서 빼고 당김 고리가 위로 가게 하여 필터를 필터 하우징 내에 삽입합니다 (그림 6 참조). 필터는 쉽게 제자리에 장착됩니다. 다음은 필터 하우징 캡을 돌려서 잠그십시오.

그림 5



그림 6



중요: 필터를 하우징에 설치하기 전에 찬 물로 완전히 행구십시오. 그러면 애완동물에 해롭지는 않지만 곁에 묻은 숲 먼지가 제거됩니다. 숲 필터를 사용하는 동안 소량의 숲 먼지가 서서히 떨어져나올 수 있습니다. 이것은 정상이며 애완동물에 해가 되지 않습니다. 최상의 성능을 위해서는 필터를 두 주마다 교체해야 합니다.

8. 콘 구멍을 들여다보아 흡입관이 모터로부터 똑바로 위로 솟아있는지 확인합니다(그림 7 참조). 조심스럽게 필터 하우징을 콘 구멍에 집어넣고 똑바로 내리누릅니다(그림 8 참조). 필터 하우징을 고무 개스킷까지 완전히 내리누르면 하우징이 쉽게 흡입관에 부착됩니다.


그림 7



9. 개인의 취향이나 애완동물의 취향에 따라 다섯 개의 교환 사용 가능한 주둥이 링 중에서 하나를 선택하십시오. 선택한 주둥이 링을 필터 하우징 캡의 상단에 놓고 부드럽게 내리눌러 제자리에 고정하십시오(그림 9).



10. 필터 하우징 캡에서 유량 제어 캡을 돌리된 흐름과 정렬시키십시오(그림 10). 부드럽게 내리눌러서 유량 제어 캡이 제자리에 고정되게 하십시오. 유량 제어 캡으로 물 흐름의 강도를 쉽게 조절할 수 있습니다. 유량을 늘리려면 유량 조절 캡을 오른쪽으로 돌리고 줄이려면 왼쪽으로 돌리십시오. 중요: 분수대를 사용하는 애완동물의 수에 따라 필터를 더 자주 교체해야 할 수도 있습니다. 유량 제어기를 최대 유량으로 올려도 해결되지 않는 유량 감소가 발생하는 경우, 막히고 더러운 필터의 징조이거나 필터 하우징을 행구고 닦을 필요성을 나타내는 것일 수 있습니다. 분수대 청소 및 유지관리에 대한 자세한 내용은 본 안내서의 “분수대 분해 및 청소” 항목을 참조하십시오.
11. 플라스틱 코드 클립 중 하나를 택하여 용기의 가장자리 위에 걸려있는 전기 코드와 정렬시키십시오. 용기의 외부에 있는 두 가닥 끝부분(그림 11 참조)으로 코드 클립이 용기의 바닥에 끼워지기 까지 코드 클립을 밀어내십시오(그림 12 참조).
12. 다른 두 플라스틱 코드 클립을 용기에 부착하여 세 클립이 함께 삼각형의 세 꼭지점을 형성하게 하십시오(그림 13 참조). 이렇게 하면 콘이 제자리에 고정됩니다.

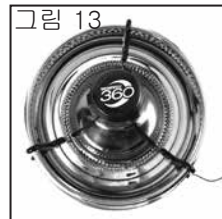

13. 분수대를 원하는 위치에 놓으십시오. 중요: 바닥 보호를 위해 항상 보호 매트나 다른 내구성과 내수성을 갖춘 면을 사용하도록 권장합니다. 그러면 애완동물이 분수대를 사용하면서 튀는 물로부터 바닥을 보호하는데 도움이 됩니다.
14. 분수대 용기를 물로 채우십시오. 수위가 최소한 MIN(최저) 채우기 선 이상이 되게 하여 펌프가 물 없는 상태에서 작동되지 않게 해야 합니다. 그러면 펌프 작동에 필요한 물이 공급됩니다. 분수대를 MAX(최대) 채우기 선 이상으로 채우지 마십시오.
15. 분수대를 전원에 꽂기 전에 전기 코드와 손이 전혀 젖지 않았는지 확인하십시오. 분수대의 플러그를 일반 콘센트에 꽂으십시오.
16. 필요한 만큼 물을 추가하십시오. 절대로 수위가 MIN(최저) 채우기 선 (용기 바닥으로부터 약 25 mm 위) 아래로 내려가지 않게 해야 하며 그렇지 않으면 펌프가 고장날 수 있습니다. 펌프를 올바르게 들어올리기 위해 두 손을 사용해서 용기의 측벽 아래를 잡아서 올리십시오. 중요: 절대로 가득 찬 분수대를 중앙 콘 부품을 잡아서 들어올리지 마십시오!

## 분수대 분해 및 청소

### 안내

분수대 청소 시, 연마성 청소 용액, 스폰지 또는 패드를 사용하지 마십시오. 이러한 연마성 면이 스테인레스 스틸 부품에 긁힌 자국이 생기게 할 수 있습니다.

중요: 분수대는 청소를 해야 계속 정상적으로 작동합니다.

### 필터 시스템

애완동물 분수대에는 정기적으로 교체해야 하는 두 종류의 필터가 구비되어 있습니다. 숯 필터는 나쁜 맛과 악취를 제거하여 물을 신선하게 유지합니다. 포움 필터는 털, 오물 및 애완동물 사료를 걸러서 펌프로 가지 않게 하는 적합한 여과 기능을 제공합니다. 이 필터들은 함께 펌프를 깨끗하게 유지하고 애완동물에게 더욱 신선한 물을 제공하는 역할을 합니다.



숯 필터: 필터들은 2-4 주마다 교체해야 합니다. 애완동물 분수대를 여러 애완동물이 사용하거나 침을 많이 분비하는 애완동물들이 사용하는 경우 필터를 더 자주 교체하십시오. 중요: 숯 필터는 항상 사용하기 전에 헹구어야 합니다. 필터를 사용하는 동안 소량의 숯 먼지가 서서히 떨어지나올 수 있는데, 이것은 정상이며 애완동물에 해가 되지 않습니다.



포움 필터: 애완동물 분수대의 위치와 그것을 사용하는 애완동물의 수에 따라 포움 필터는 1-2 개월마다 교체해야 합니다. 청소할 때 필터를 교체하지 않는 경우에는 포움 필터를 깨끗한 물로 철저히 헹구어야 합니다.

필터는 애완동물 분수대의 추가 기능입니다. 정상적인 작동을 위해 필터 사용이 요구되지는 않습니다. 그러나 필터는 올바르게 사용하고 정기적으로 교체할 경우 물을 더욱 깨끗하고 신선하게 유지하며 애완동물 분수대의 수명을 연장하는데 도움이 됩니다. 애완동물 분수대를 청소할 때 필터를 물에 헹굴 수 있습니다. 중요: 비누 잔류물은 필터에 스며들어 제거할 수 없게 될 수 있으므로 절대로 필터를 비눗물로 씻지 마십시오. 필터는 물로만 헹구십시오.

분수대: 매주 한번씩 청소하십시오.

1. 분수대의 플러그를 전원에서 빼고 인라인 플러그의 연결을 해제하십시오(그림 1 참조).
2. 유량 조절 캡과 주둥이 링을 빼내십시오.
3. 다음은 두 가닥 클립을 부드럽게 위로 당겨서 용기를 바닥에서 들어내어 세 코드 클립을 빼내십시오. 코드 클립들을 옆에 놓으십시오.
4. 콘을 단단히 잡은 상태에서 엄지손가락과 두 손가락으로 필터 하우징의 상단을 감싸서 위로 들어올려 빼내십시오. 필터 하우징이 너무 뻣뻣하여 쉽게 움직이지 않으면, 빼낼 수 있을 정도로 헐거워질 때까지 하우징을 원형 동작으로 앞뒤로 돌리십시오. 부품을 들어올려서 옆에 놓으십시오. 흡압관은 여전히 필터 하우징의 바닥에 부착되어 있을 가능성이 다분합니다.
5. 스테인레스 스틸 콘을 들어올려서 청소를 위해 옆에 놔두십시오.
6. 용기 안으로 손을 뻗쳐 펌프를 들어올려서 청소를 위해 옆에 놔두십시오.
7. 펌프에서 포움 필터를 제거하십시오. 펌프의 전면판에 축적되어 있을 수 있는 털, 오물 또는 애완동물 사료를 닦아내십시오 (자세한 펌프 청소법에 대해서는 “펌프 유지보수”를 참조하십시오).
8. 용기 측벽 아래를 붙잡고 분수대의 물을 비우십시오.
9. 분수대 부품을 온수와 비누로 닦으십시오. 분수대를 식기세척기에 넣어도 됩니다. 중요: 스테인레스 스틸 부품들을 굵을 가능성이 있는 일체의 마모성 세척액, 스폰지 또는 패드를 사용하지 마십시오. 분수대를 식기세척기에 넣기 전에 펌프를 빼내십시오. 펌프는 식기세척기에 넣지 마십시오!
10. 어떤 부분이나 비좁은 귀퉁이에 손이 미치기에 어려움이 있는 경우, 면봉을 사용해거나 Drinkwell® 청소 키트(브러시 3개 키트)를 구입하십시오. 청소 키트를 구입하기 위해서는 저희 웹사이트 [www.petsafe.net](http://www.petsafe.net) 을 방문하여 가까운 소매점을 찾거나 해당 지역의 고객 지원 센터 전화 번호를 찾아보십시오.

## 펌프 유지보수

중요: 펌프 청소는 물의 청결뿐만 아니라 분수대의 장기사용을 위해 필수적입니다. 펌프를 최소한 두주마다 청소하십시오. 펌프를 정기적으로 청소하지 않으면 품질보증이 무효화될 수 있습니다.





1. "분수대 분해 및 청소" 항(단계6)에 설명된 대로 분수대에서 펌프를 빼내십시오.
2. 일단 펌프가 분수대에서 이탈되면 엄지와 검지로 전면판의 한 측면을 가볍게 압축하여 빼내십시오. 손톱을 전면판의 경계선에 집어넣어서 전혀내야 할 수도 있습니다.
3. 다음은 눈물 방울 모양의 흡입판의 좁은 쪽에 위치에 있는 작은 입술 모양 부분 아래로 손톱을 집어넣어 흡입판을 빼낼 수 있습니다 (그림 14).

흡입판  
당김 탭



4. 흡입판을 빼낸 다음에는 자력에 의해 고정되어 있는 임펠러(흰색 세 날 프로펠러)를 뺄 수 있습니다. 임펠러를 빼내려면 손톱을 플라스틱 날 아래에 넣고 올려서 빼내면 됩니다(그림 15).

5. 일단 펌프가 분해되면 부품들을 따뜻한 비눗물로 씻으면 됩니다. 면봉이나 Drinkwell® 청소 키트의 "모터 브러시"를 사용하여 모터 설치 자리에 있는 침적물을 제거합니다 (그림 16). 추가로 소독하고 경수 물때를 제거하려면 흰 식초 10%와 물 90%를 혼합한 용액으로 모터를 닦으십시오. 맹물로 철저히 헹구어야 합니다.



6. 부품들이 깨끗하고 건조해졌으면 사용을 위해 펌프를 다시 조립할 수 있습니다.

- a) 임펠러를 설치합니다.
- b) 흡입판을 설치합니다.
- c) 전면판을 설치합니다.

그림 16



## 분수대 재조립

1. 포음 필터가 펌프를 둘러싸게 하십시오. 포음 필터의 둥근 쪽은 펌프 전면판의 바로 앞에 있어야 합니다. 전기 코드는 포음 필터의 아래쪽이 아니라 위로 지나가야 하는데 이렇게 함으로써 포음 필터가 제자리에 유지되기 때문입니다.
2. 펌프를 원래 위치에 설치하십시오 (그림 2 참조). 펌프 상단에 있는 둥그런 구멍이 용기의 정중앙에 위치하도록 해야 하며 그렇지 않으면 흡입관이 하우징과 올바르게 정렬되지 않습니다. 부드럽게 내리눌러 흡입 컵들이 맞물리게 하십시오.
3. 흡입관을 펌프 상단에 있는 둥그런 구멍에 설치하십시오 (그림 3 참조).
4. 펌프를 원래 위치에 유지하면서 전기 코드가 코드 홈을 통해 배선되도록 콘을 정렬하십시오. 일단 전기 코드가 정렬되면(그림 3 참조), 콘을 설치 위치에 가볍게 놓으십시오.
5. 분수대를 청소한 후에, 필터를 새 것으로 교체하면 좋습니다. 당김 탭을 위로 향하게하여 필터 하우징에 슛 필터를 삽입합니다. 필터는 쉽게 제자리에 장착됩니다. 다음은 필터 하우징 캡을 돌려서 잠그십시오.
6. 콘 구멍을 들여다보아 흡입관이 펌프로부터 똑바로 위로 솟아있는지 확인합니다. 조심스럽게 필터 하우징을 콘 구멍에 집어넣고 똑바로 내리누릅니다. 필터 하우징을 고무 개스킷까지 완전히 내리누르면 하우징이 쉽게 흡입관에 부착됩니다.
7. 선호하는 주동이 링을 선택하여(주동이 1개에서 5개까지) 필터 하우징 캡 꼭대기에 놓고 부드럽게 눌러서 제자리에 들어가게 합니다. 사방으로 끝까지 고르게 눌러내려야 합니다.
8. 유량 제어 캡이 필터 하우징 캡 상의 홈과 정렬되게 하여 유량 제어 캡을 설치하십시오. 부드럽게 내리눌러서 제자리에 고정되게 하십시오.
9. 분수대 받침 돌레에 세개의 코드 클립을 부착하여 전기 코드를 감추고 콘 부품이 제자리에 고정되게 하십시오.
10. 분수대를 원하는 위치에 놓고 MAX(최대) 채우기 선까지 물로 채우십시오. 바닥 보호를 위해 항상 보호 매트나 다른 내구성과 내수성을 갖춘 면을 사용하도록 권장합니다. 그러면 애완동물이 분수대를 사용하면서 튀는 물로부터 바닥을 보호하는데 도움이 됩니다.
11. 마른 손으로 인라인 플러그를 다시 연결한 후에 분수대의 플러그를 일반 콘센트에 꽂으십시오. 유량을 원하는 대로 조절해서 애완동물이 분수대의 신선한 자유 낙하수를 즐기게 하십시오.

## 분수대와 환경

습한 환경에 거주하며 곰팡이나 조류 문제가 있는 경우, 정기적인 세척 후 모든 애완동물 분수대 부품들을 희석한 식초 표백제 용액(백식초 20% 및 물 80%)에 10분 정도 담그십시오. 그런 다음, 희석한 식초 표백제를 모터 설치 공간에 따르십시오.

사용하는 물이 “경수”인 경우 펌프 내외에 소량의 흰색 광물 침전물이 생길 수 있습니다. 이로 인해 결국에는 임펠러가 올바르게 회전되지 못할 수 있습니다. 펌프 교체 및 손상을 방지하려면 다음 예방책을 숙지하십시오.

1. 더 자주 펌프를 청소합니다.
2. 매주 희석한 식초 표백제로 펌프를 세척합니다.
3. 수돗물 대신에 병입수를 사용합니다.

## 사용 요령

- 분수대를 처음 접할 때 애완동물은 새롭고 전에 보지 못한 이 물체를 경계할 수 있습니다. 분수대를 사용하기 시작한 후에 애완동물이 스스로 자신의 페이스에 따라 적응하게 하십시오. 어떤 애완동물은 며칠이 지난 후에 사용하기 시작할 수도 있고, 어떤 애완동물은 즉시 사용하기 시작할 수도 있습니다.
- 애완동물은 분수대가 그들의 정상적인 식사 공간에서 멀리 떨어져 있기를 원할 수도 있습니다. 주방의 다른 부분이나 화장실이나 다용도실과 같은 다른 장소에 놔두어 보십시오.
- 산뜻하고 차거운 물을 공급하기 위해서는 용기에 얼음을 넣으십시오!

## 품질보증 및 고객 서비스

본 제품은 제조업체로부터 1년 동안 제한적인 보증이 제공됩니다. 본 품질보증은 사고, 오용 및 남용으로 인한 손상을 보상하지 않습니다. 법적으로 허용되는 대로 부수적 또는 결과적 피해도 명시적으로 제외합니다. 청소 부실, 오물 또는 "경수"로 인한 광물질 침전의 결과로 발생하는 기능 상실은 본 보증의 대상이 되지 않습니다 (청소 지침 및 환경 유의사항을 참조하십시오).

본 제품의 보증 및 사용 약관에 대한 상세한 안내는 [www.petsafe.net](http://www.petsafe.net) 에서 보시거나 다음 주소로 이메일을 보내어 제공받으실 수 있습니다: [asiacc@petsafe.net](mailto:asiacc@petsafe.net).

설치 및 기술적인 문제가 있거나 필요한 경우 제품 교체를 위한 도움을 받기 위해서는 해당 지역 고객 서비스 센터에 문의하십시오. 해당 지역의 고객 관리 센터 목록은 당사 웹사이트 [www.petsafe.net](http://www.petsafe.net) 에 나와 있습니다.

## 준수



본 기기는 EMC 및 저전압 지침을 준수합니다. Radio Systems Corporation에서 승인하지 않은 본 제품에 대한 무단 변경이나 개조는 유럽연합 규정의 위반에 해당되고 기기 작동에 대한 사용자의 권한 및 보증을 무효화할 수 있습니다.

적합성 선언은 다음 사이트에서 보실 수 있습니다:  
[http://www.petsafe.net/customer-care/eu\\_docs.php](http://www.petsafe.net/customer-care/eu_docs.php).

## 중요한 재활용 정보



해당 국가의 폐가전 제품 규정을 준수하십시오. 이 기기는 재활용해야 합니다. 이 기기가 더 이상 필요하지 않아 폐기할 경우 일반 생활 폐기물로 폐기해서는 안 됩니다. 당사의 재활용 시스템을 이용하려면 구입한 곳으로 반환해 주십시오. 반환이 어려운 경우에는 고객 관리 센터에 문의하여 자세한 정보를 얻으십시오.

해당 특허: 미국 특허 번호 5,799,609 및 5,842,437

# 사용 조건과 배상 책임의 한계

## 1. 사용 조건

이 제품을 사용하려면 본 설명서에 포함된 약관, 조건 및 통지를 변경하지 않고 수용해야 합니다. 본 제품의 사용은 당해의 모든 조항, 조건 및 통지를 수용하는 것으로 간주됩니다. 이러한 약관, 조건 및 통지를 수락하지 않는 경우에는 비용 및 위험을 부담하고 제품을 사용하지 않은 채로 원래의 포장에 넣어 구입 증거물과 함께 고객 관리 센터로 반송하여 환불을 요청하십시오.

## 2. 올바른 사용

본 제품이 귀하의 애완동물에 적합한지 잘 모를 경우에는 사용 전에 수의사 또는 공인 트레이너에게 문의하십시오. 적절한 사용에는 사용 설명서의 전체 내용 및 일체의 안전 정보 내용을 검토하는 것이 포함되나 이에 국한되지는 않습니다.

## 3. 불법적 또는 용도 이외의 사용 금지

본 제품은 애완동물에게만 사용하도록 제작되었습니다. 용도 이외의 방식으로 이 제품을 사용하는 것은 연방, 주, 지역 법률에 위배될 수 있습니다.

## 4. 배상 책임의 한계

Radio Systems Corporation이나 모든 관련 기업은 어떠한 경우에도 (i) 간접적, 징벌적, 부수적, 결과적이거나 특별한 손해 및/또는 (ii) 이 제품의 오용으로 인하거나 그와 관련하여 발생하는 모든 손실이나 손해에 대해서도 책임을 지지 않습니다. 구매자는 법이 허용하는 최대 한도 내에서 이 제품의 사용으로 인한 모든 위험 및 책임을 집니다. 의문의 여지를 피하기 위하여, 이 조항 4의 어떠한 내용도 인명 사망이나 상해 또는 사기나 사기성의 잘못된 설명에 대한 Radio Systems Corporation의 책임을 제한하지 않습니다.

## 5. 구매 조건 변경

Radio Systems Corporation은 이 제품에 적용되는 약관, 조건 및 통지를 수시로 변경할 수 있는 권리를 보유합니다. 이 제품을 사용하기 전에 그러한 변경 사항이 통지되었을 경우에는 본 설명서에 설명되어 있는 것처럼 구속력을 갖게 됩니다.





Radio Systems Corporation  
10427 PetSafe Way  
Knoxville, TN 37932  
(865) 777-5404  
**[www.petsafe.net](http://www.petsafe.net)**

400-1676-41

©2013 Radio Systems Corporation