



Operating Guide

操作指南


操作指南

D360CN-RE **D360TW-RE**

360 Pet Fountain - 3.8 Litres

360 寵物噴泉飲水器 - 3.8 公升

360 宠物饮水器 - 3.8 公升

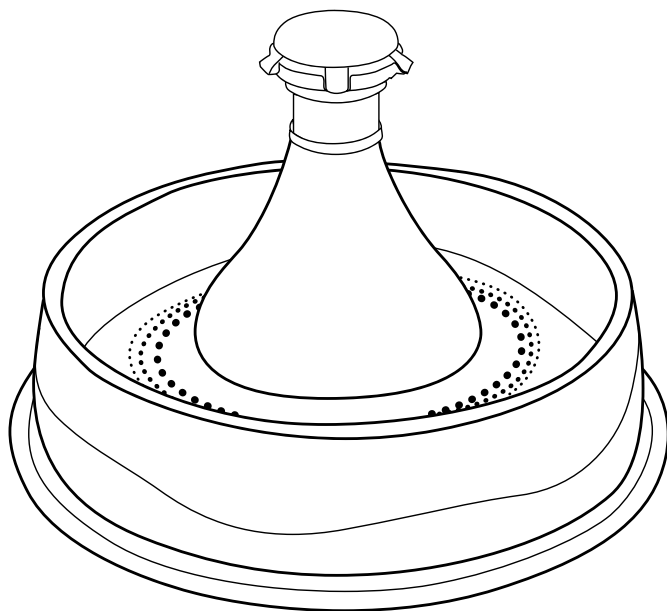

protect. teach. love.

Please read this entire guide before beginning

開始使用產品前，請詳閱完整指南

請在使用之前全面閱讀本指南

Hereinafter Radio Systems Corporation and any other affiliate or Brand of Radio Systems Corporation may be referred to collectively as "We" or "Us".

IMPORTANT SAFETY INFORMATION

Explanation of Attention Words and Symbols used in this guide

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

NOTICE

NOTICE is used to address safe use practices not related to personal injury.

⚠ WARNING

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- To reduce the risk of injury, close supervision is necessary when an appliance is used by or near children.
- To protect against electric shock, do not place Power Cord or plug in water or other liquids.
- Only use attachments recommended or sold by the manufacturer.
- Do not use outdoors. FOR INDOOR HOUSEHOLD USE ONLY.
- Do not unplug by pulling on Power Cord. To unplug, grasp the plug, not the Power Cord.
- Do not operate any appliance if it has a damaged Power Cord or plug, or if it is malfunctioning or has been damaged. Call Customer Care Centre immediately for further instructions.
- For a portable appliance - To reduce the risk of electrical shock, do not place or store an appliance where it can fall or be pulled into a tub or sink.
- Always unplug any appliance when not in use, before putting on or taking off parts and before cleaning. Never pull on the electrical Power Cord to remove the plug from the wall outlet.
- Do not use an appliance for anything other than its intended use.
- If the plug of this device gets wet, turn off the electricity to that outlet. Do not attempt to unplug.
- Examine this appliance after installation. Do not plug in if there is water on the Power Cord or plug.

CAUTION

- Do not allow pets to chew on or swallow any parts. If you are concerned about the Power Cord, purchase a cord conduit (a hard plastic protector) at any hardware store.
- The Pet Fountain parts are BPA-FREE. However, some animals have been known to be sensitive to plastic food and water containers. If your animal shows signs of an allergic reaction to the plastic, please discontinue use until you have consulted with your veterinarian.

NOTICE

- The Pet Fountain is intended to run continuously (always plugged into electricity), as long as the water level is maintained and the Pet Fountain is cleaned regularly. Be sure to check the Pet Fountain regularly to help prevent damage to the Pump, as the water may get consumed or evaporate causing the Pump to run dry.
- Do not attempt repairs on the Pump yourself.
- To avoid the possibility of the plug or outlet getting wet, the outlet should always be above the level of the Pet Fountain.
- If an extension cord is necessary, an extension cord with a proper rating should be used.
- The electrical use of this appliance is 2.5 watts.
- Do not use appliance for anything other than intended use. The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the unit.
- Do not install or store appliance where it will be exposed to weather or temperatures below 4.5° C.
- Read and observe all important notices listed on the appliance and in the packaging.

SAVE THESE INSTRUCTIONS


Thank you for choosing the PetSafe® Brand. You and your pet deserve a companionship that includes memorable moments and a shared understanding together. Our products and training tools enhance the relationship between pets and their owners. **If you have any questions about our products or training your pet, please visit our website at www.petsafe.net or contact our Customer Care Center at +86 (0) 755 2671 5353.**

To get the most protection out of your warranty, please register your product within 30 days at www.petsafe.net. By registering and keeping your receipt, you will enjoy the product's full warranty and should you ever need to call the Customer Care Center, we will be able to help you faster. Most importantly, your valuable information will never be given or sold to anyone. Complete warranty information is available online at www.petsafe.net.

Table of Contents


Components	5
Features	5
Key Definitions	6
Operating Instructions	7
Pet Fountain Disassembly and Cleaning	9
Pump Maintenance	10
Pet Fountain Reassembly	12
The Pet Fountain and Your Environment	13
General Tips	13
Warranty and Customer Care	14
Compliance	14
Important Recycling Advice	14
Terms of Use and Limitation of Liability	15

Components

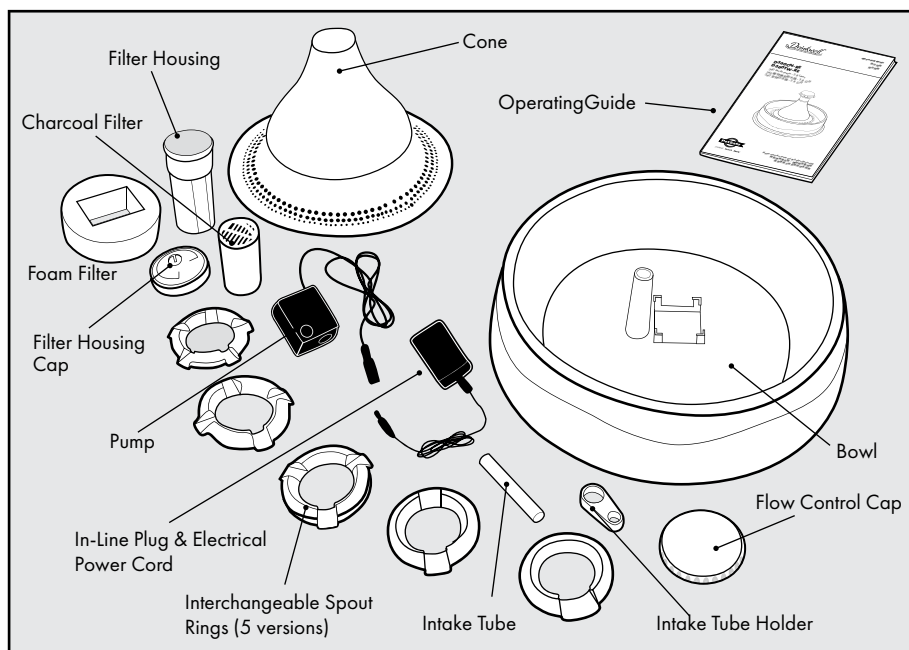

Note: Your Pet Fountain will come partially assembled, however, it is a good idea to make sure none of the Pet Fountain pieces have come loose in shipping.

Features

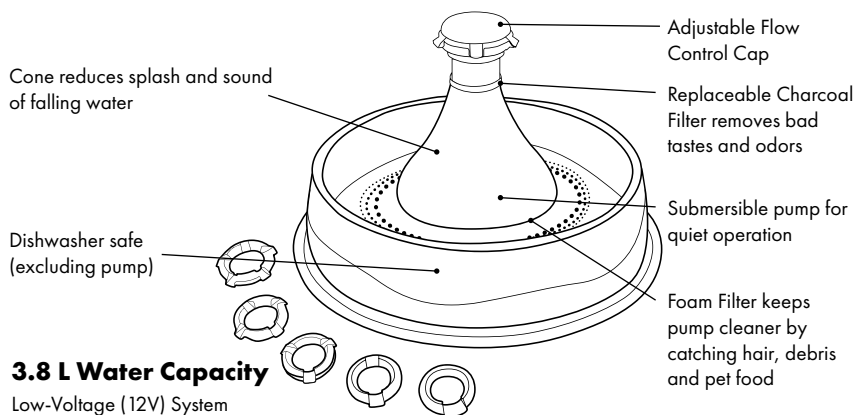

Key Definitions

Bowl: The Bowl is the foundation of the Pet Fountain. The circular bowl piece can be carried by simply gripping the sidewalls underneath the Bowl. In addition, the bottom of the Bowl features “cord clips” to hide the Power Cord from view.

Cone: The Cone acts as the housing for the Pet Fountain components and protects the Pump from curious pets. The Cone acts to reduce the splash and sound of the falling water. It also houses a majority of the water and holds the Filter Housing and subsequent parts.

Filter Housing: The Filter Housing slides into the opening at the top of the Cone. It houses the Filter and locks into the Cone by twisting the entire Filter Housing a quarter turn.

Charcoal Filter: The cylindrical Charcoal Filter features a pull-tab at the top and should be placed in the Filter Housing with the pull-tab facing upwards for easy placement and removal.

Filter Housing Cap: The Filter Housing Cap is a screw on Cap that attaches to the Filter Housing to keep the Filter in place. It serves as the base piece to attach the Interchangeable Spouts & Flow Control Cap.

Foam Filter: The Foam Filter collects hair, debris and pet food before they reach the Pump. It is important to use the Foam Filter as it helps maintain proper Pump function.

Spout Rings: The Pet Fountain features five Interchangeable Spout rings that can be easily changed based upon your pet’s preference and can provide up to 5 streams of water for multiple pet households.



Flow Control Cap: The Flow Control Cap is attached to the top of the Pet Fountain and adjusts the flow of water by simply turning the Flow Control Cap left or right. Turn to the right to increase the flow of water. Turn to the left to decrease.

Pump: A small Low Voltage submersible aquarium pump that can be dismantled for cleaning. **Important:** THE PUMP IS NOT DISHWASHER SAFE! Remove Pump from Pet Fountain prior to cleaning. (See “Pump Maintenance”) The pump cord features a detachable In-Line plug for easy removal.



Operating Instructions

Important: DO NOT RUN DRY - FOR INDOOR USE ONLY.




1. As with any electrical device, check the electrical Power Cord for any tears, or damage before use.
2. Make sure the In-Line Plug is connected (no silver showing - **Fig. 1**).
3. Remove Cone piece by twisting counter clockwise to unlock the tabs from the Bowl. Lift up and set aside (**Fig. 2**).
4. Check to make sure the Intake Tube is properly inserted (pushed all the way down) into the Pump. Place Foam Filter around the Pump (**Fig. 3**).
5. Replace Cone and twist clockwise to lock tabs in place (**Fig. 4**).

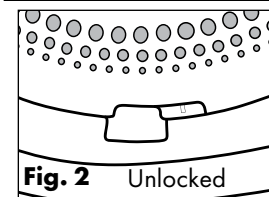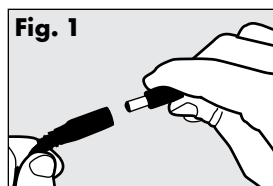

6. Take the partially assembled Filter Housing and remove the Flow Control Cap by gently lifting straight up - DO NOT TWIST TO REMOVE (**Fig. 5**). Gently lift up on the Spout Ring to access the Filter Housing Cap.

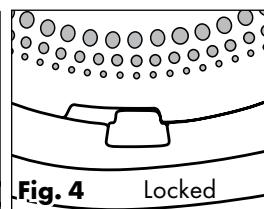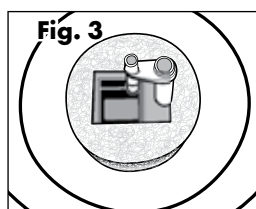

7. Unscrew Filter Housing Cap and insert the Filter into the Filter Housing with the pull-tab facing up (**Fig. 6**). The Filter will slide easily into place. Next, screw on the Filter Housing Cap (**Fig. 7**).

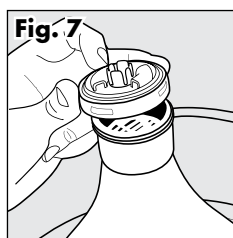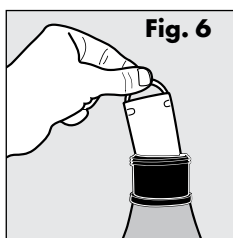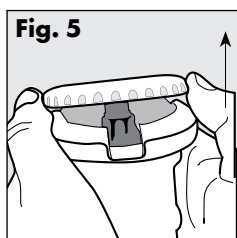





Important: Rinse the Charcoal Filter thoroughly under cool water before placing into the housing. This will remove any loose charcoal dust, which is harmless to your pet. A small amount of charcoal dust may be gradually released for the life of the Filter. This is normal and not harmful to your pet. The Charcoal Filter should be replaced every two weeks for best performance. Filters may need to be changed more frequently depending on the number of pets using the Pet Fountain.

8. Align the side grooves of the Filter Housing with the inner notches of the Cone opening. The Filter Housing should slide easily into place. Turn housing a quarter turn to the right (clockwise) until it locks in place (**Fig. 8**).
9. Select one of the five interchangeable Spout Rings based upon your personal preference or your pet's. Place the chosen Spout Rings on top of Filter Housing Cap and gently press down evenly to secure in place (**Fig. 9**).
10. Align Flow Control Cap with the raised notches (**Fig. 10**) on the Filter Housing Cap. Press down gently and the cap will snap into place. With the Flow Control Cap, you will be able to easily adjust the flow intensity of the water. Turn the cap to the right to increase the flow and turn to the left to decrease.

Important: If you notice a decrease in the flow of the water that is not corrected by turning the flow control cap toward max this may be an indication of a clogged and dirty Filter and/or the need to rinse and clean the Filter housing. Consult the "Pet Fountain Disassembly and Cleaning" section of this manual for details on cleaning and maintaining your Pet Fountain.

11. Fill the Pet Fountain Bowl with water. Make sure the water level is **at least** to the MIN (minimum) fill line so the pump does not run dry. This will prime the pump for use. Do not fill the Pet Fountain past the MAX (maximum) fill line.
12. Place Pet Fountain in desired location. **Important:** Never pick up a full Pet Fountain by the Cone piece. To properly pick up the Pet Fountain, use both hands and grip the sidewalls of the Pet Fountain Bowl and lift. To take care of your floors, **always** use a protective mat, such as a towel or place mat. This will help protect your floor from any water that may splash out from your pet's use of the Pet Fountain.
13. Before you plug in the Pet Fountain make sure the Power Cord and your hands are dry. Plug the Pet Fountain in to a standard wall outlet.

14. Add water as needed. **Never** let the water level fall lower than the MIN (minimum) fill line (approx. 25 mm above the bottom of the bowl, **Fig. 11**) or the Pump may fail. Replacement Pumps are sold separately by contacting the Customer Care Centre at asiacc@petsafe.net.

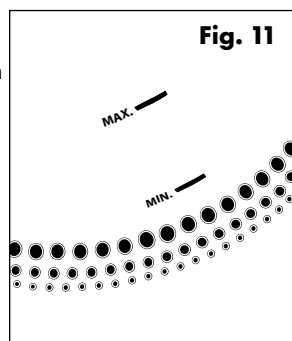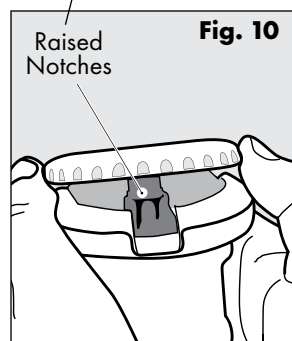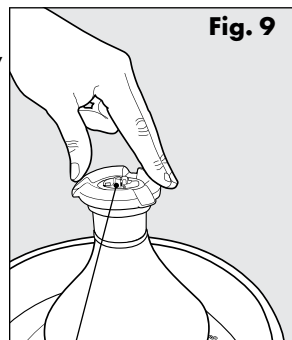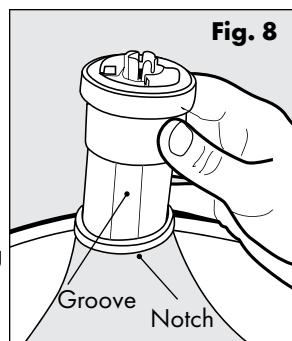

Pet Fountain Disassembly and Cleaning

Important: Pet Fountain must be cleaned to continue working normally.

FILTER SYSTEM

The Pet Fountain is equipped with two types of filters that should be replaced on a regular basis. The Charcoal Filter removes bad tastes and odours, keeping water fresh. The Foam Filter collects hair, debris and pet food and prevents them from reaching the Pump, providing optimal filtration. The filters together will keep the Pump cleaner and provide fresher water to your pet.



CHARCOAL FILTER: Filters should be changed every two to four weeks. Replace filters more frequently when using the Pet Fountain for multiple pets or pets that produce a lot of saliva. **Important:** Always rinse the Charcoal Filter prior to use. A small amount of charcoal dust may be released for the life of the filter, this is normal and is not harmful to your pet.




FOAM FILTER: Replace the Foam Filter every one to two months, depending on the location of the Pet Fountain and the number of pets using it. If you do not intend to replace the filter at the time of cleaning, rinse the Foam Filter thoroughly with fresh water.

Filters are an added feature of the Pet Fountain. Using the filters is not required for normal operation. However, when used properly and changed regularly, the filters help keep the water cleaner and fresher, while extending the life of your Pet Fountain. Filters may be rinsed out when the Pet Fountain is cleaned. **Important:** Never wash the filters with soapy water, as the soap residue will seep into the filters and cannot be removed. Only rinse the filters with water.


PET FOUNTAIN: Clean once a week.

1. Unplug Pet Fountain from electrical source and disconnect the In-Line Plug (**Fig. 1**).
2. Remove the Flow Control Cap and Spout Ring.
3. Remove the Filter Housing by twisting the Filter Housing to the counter clockwise to the unlock position. Lift directly up and set aside.
4. Empty the water out of the Pet Fountain.
5. Once the Pet Fountain is empty, remove the Cone piece by twisting to the counter clockwise to unlock the tabs. Lift up and set aside (**Fig. 2**).



Next, flip the Bowl upside down and unhook the Power Cord from the two Cord Clips (**Fig. 12**). This will allow you to pull the cord through the Power Cord Pass-Through in the Bowl (**Fig. 13**).

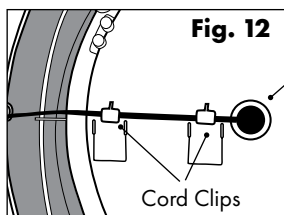

Cord Pass-Through

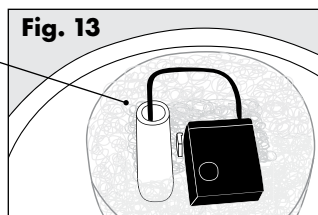


7. Remove the Pump for cleaning. First remove the Intake Tube by lifting up on the Intake Tube Holder to free the Intake Tube from the Pump (**Fig. 14 & 15**). This will allow you to remove the Pump. The intake tube can then be pulled from the intake tube holder (See "Pump Maintenance" for detailed cleaning instructions for the Motor/Pump).

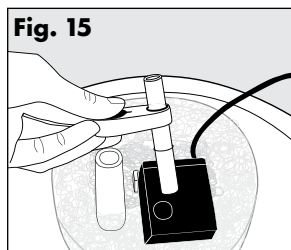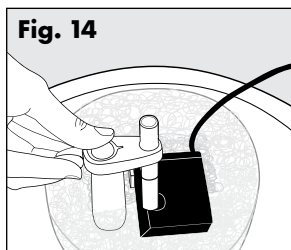

8. Remove the Foam Filter from the Pump. Clean away any hair, debris or pet food that may have accumulated on the Faceplate of the Pump (See "Pump Maintenance" for detailed cleaning instructions for the Pump).
9. Clean the Pet Fountain parts with warm water and soap. You can also put the Pet Fountain in the top rack of the dishwasher. Remove the pump before placing the Pet Fountain in the dishwasher. **DO NOT PLACE PUMP IN DISHWASHER!** If possible, it is recommended that you turn down the heat of the water inside the dishwasher.
10. If you have troubles reaching certain spots or hard-to-reach corners, try using a cotton swab or purchase the Drinkwell® Cleaning Kit, a 3-Piece Brush kit. To purchase a Cleaning Kit, visit our website at www.petsafe.net to locate a retailer near you or to find a listing of Customer Care Centre telephone numbers for your area.



Pump Maintenance

Important: Cleaning the Pump is essential to the longevity of the Pet Fountain as well as the cleanliness of the water. Clean the Pump at least every two weeks. Warranty may be voided if the Pump is not cleaned regularly.

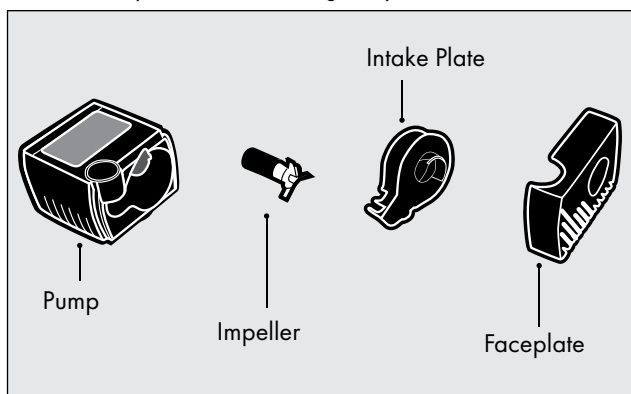

1. Remove Pump from the Pet Fountain as explained in the "Pet Fountain Disassembly and Cleaning" section (specifically steps 6 & 7).
2. Once the Pump is out of the Pet Fountain, with your thumb and forefinger, gently squeeze on either side of the Faceplate, and pull off. It may be necessary to insert a fingernail into the seam of the Faceplate to pry it off.
3. Next you will want to remove the Intake Plate by placing your fingernail under the small lip located on the narrow side of tear drop shaped Intake Plate and pull out (**Fig. 16**).

Intake Plate
Pull-Tab

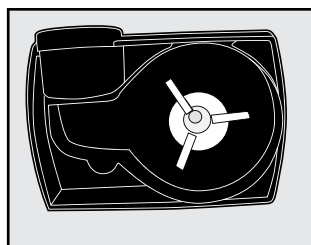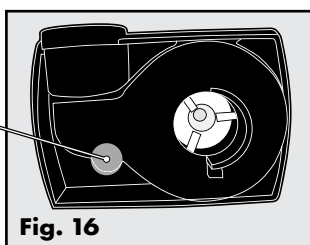

4. Once the Intake Plate is removed you can also remove the Impeller (white 3-bladed propeller) which is held in place magnetically. To remove the Impeller use a fingernail to get under the plastic blade and lift out (**Fig. 17**).
5. Once the Pump is disassembled you can clean the parts with warm soapy water. Use a cotton swab or the "Motor" brush from the Drinkwell® Cleaning Kit to get into the Pump's motor cavity and remove any build-up (**Fig. 18**). For added disinfecting and hard water removal, clean the Motor with a 20% white vinegar & 80% water solution. Be sure to rinse thoroughly with fresh water.
6. Once the parts are clean you can reassemble the Pump for use.
 - a) Replace the Impeller
 - b) Replace the Intake Plate
 - c) Replace the Faceplate.


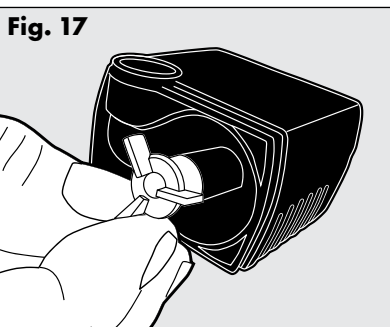


Fig. 18

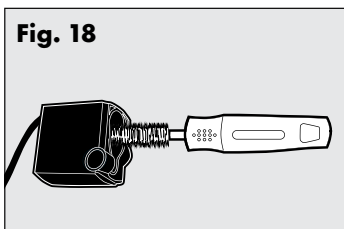

Pet Fountain Reassembly

1. Place the Foam Filter around the Pump. Make sure the electrical power cord runs over the top of the Foam Filter, not underneath it, as this will keep the Foam Filter in place.
2. With the Foam Filter securely around the Pump, replace the Pump into its location between the four, 12.5 mm posts in the center of the Bowl. Be sure to position the hole on the top of the Pump next to the electrical Power Cord Pass-Through in the Bowl. Gently push down to engage the suction cups.
3. Replace the Intake Tube into the Intake Tube Holder, then place the Intake Tube Holder back onto the electrical power cord Pass-Through post aligning the guideline on the post with the notch in the Intake Tube holder. Be careful to align the Intake Tube so that it fits into the hole on the top of the Pump.
4. Thread the In-Line Plug through the opening next to the Pump. On the bottom side of the Bowl, clip the Cord into place using the "Cord Clips" (**Fig. 12**). Next, thread the Power Cord directly out the Pet Fountain through the Cord Pass-Through (**Fig. 12 & 13**). Use this Pass-Through to keep the Power Cord from showing.
5. Align the three notches around the Cone with the corresponding tabs in the bowl. Next, turn the Cone piece to the right (clockwise) to lock tabs into place (**Fig. 2 & 4**).
6. After cleaning your Pet Fountain it is a good idea to replace your Filter.
7. Screw on Filter Housing Cap and slide the Filter Housing into place in the hole at the top of the Cone. Turn Filter Housing a quarter turn to the right (clockwise) to lock in place.
8. Choose your preferred Spout Ring (1 spout up to 5 spouts) and place on top of the Filter Housing Cap, press it gently into place. Be sure it is pushed down evenly all the way around.
9. Replace the Flow Control Cap by aligning the cap with the notches on the Filter Housing Cap and gently pushing down.
10. Fill the Pet Fountain Bowl with water. Make sure the water level is **at least** to the MIN (minimum) fill line so the pump does not run dry. This will prime the pump for use. Do not fill the Pet Fountain past the MAX (maximum) fill line.
11. Place Pet Fountain in desired location. **Important:** Never pick up a full Pet Fountain by the Cone piece. To properly pick up the Pet Fountain, use both hands and grip the sidewalls of the Pet Fountain Bowl and lift. To take care of your floors, **always** use a protective mat, such as a towel or place mat. This will help protect your floor from any water that may splash out from your pet's use of the Pet Fountain.
12. Before you plug in the Pet Fountain make sure the Power Cord and your hands are dry. Plug the Pet Fountain in to a standard wall outlet.

The Pet Fountain and Your Environment

If you live in a humid environment and have problems with mold or algae, soak all fountain parts in a diluted vinegar solution (20% White Vinegar and 80% Water) for 10 minutes after regular cleaning. Also, pour the diluted vinegar solution into the motor cavity.

If you have hard water, small white mineral deposits may form on or inside the Pump. This can eventually prevent the Impeller from turning properly. To avoid replacement or damage to the Pump, please take the following precautions:

1. Clean the Pump more frequently.
 2. Clean the Pump with a diluted vinegar solution weekly.
 3. Use bottled water instead of tap water.
-

General Tips

- When being introduced to the Pet Fountain, your pet may be cautious of this new and unusual object. After beginning operation of your Pet Fountain, simply allow your pet to adjust at his or her own pace. Some pets may take several days or longer to begin use, while others will start right away.
- Your pet may prefer that the Pet Fountain be placed away from their normal feeding area. Try placing it in another location, such as a different area of the kitchen or in a bathroom or utility room.
- Add ice cubes to the bowl for refreshing, ice-cold running water!

Warranty and Customer Care

This product has the benefit of a 1 (one) year limited manufacturer's warranty. This warranty does not cover damage from accidents, misuse or abuse. It also specifically excludes incidental or consequential damages as allowed by law. Loss of function as a result of lack of cleaning, debris or mineralization from "hard water" does not qualify under this warranty (Refer to cleaning instructions and environmental notes).

Details of the warranty applicable to this product and its terms can be found at www.petsafe.net and/or are available by sending an email to: asiacc@petsafe.net.

Please contact your local Customer Care Centre with any set-up or technical difficulties you experience, and if necessary to assist in the replacement of your product. For a listing of Customer Care Centres in your area, visit our website at www.petsafe.net.

Compliance



This equipment complies with the EMC and Low Voltage Directives. Unauthorised changes or modifications to the product that are not approved by Radio Systems Corporation may violate EU regulations, could void the user's authority to operate the equipment, and will void the warranty.

The Declaration of Conformity can be found at:
http://www.petsafe.net/customer care/eu_docs.php.

Important Recycling Advice



Please respect the Waste Electrical and Electronic Equipment regulations in your country. This equipment must be recycled. If you no longer require this equipment, do not place it in the normal municipal waste system. Please return it to where it was purchased in order that it can be placed in our recycling system. If this is not possible, please contact the Customer Care Centre for further information.

Terms of Use and Limitation of Liability

1. **Terms of Use**

Use of this Product is subject to your acceptance without modification of the terms, conditions, and notices contained herein. Use of this Product implies acceptance of all such terms, conditions, and notices. If you do not wish to accept these terms, conditions, and notices, do not use this Product.

2. **Proper Use**

If you are unsure whether this is appropriate for your pet, please consult your veterinarian or certified trainer, contact our Customer Care Center, or visit our Web Site at www.petsafe.net. Proper use includes reviewing the entire Operating Guide provided with your product and any specific caution statements.

3. **No Unlawful or Prohibited Use**

This product is designed for use with pets only. This device is not intended to harm, injure, or provoke. Using this Product in a way that is not intended could result in violation of Federal, State, or local laws.

4. **Limitation of Liability**

In no event shall Radio Systems Corporation or any of its associated companies be liable for (i) any indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the misuse of this Product. The Purchaser assumes all risks and liability from the use of this Product to the fullest extent permissible by law.

5. **Modification of Terms and Conditions**

Radio Systems Corporation reserves the right to change the terms, conditions, and notices under which this product is offered.

* Registered in The U.S. Patent and Trademark Office

在下文中，Radio Systems Corporation 以及 Radio Systems Corporation 的其他任何聯屬公司或品牌可統稱為「我們」。

重要安全資訊

本手冊使用的警示文字與符號說明

⚠ 警告

警告：表示危險情況，若不避免，可導致死亡或嚴重傷害。

小心

小心：未配合安全警示符號使用時，表示危險情況，若不避免，可能危及寵物。

注意

注意：用於強調安全的使用方法，與人身傷害無關。

⚠ 警告

使用電子設備時，為避免發生火災、觸電和/或造成人身傷害，請務必遵守下列基本的安全防護措施：

- 在幼童附近使用設備，請密切監管以免受傷。
- 請勿將電源線或插頭放進水裡或其他液體中，以免觸電。
- 僅使用原廠銷售或建議的附屬裝置。
- 請勿用於戶外。僅限室內家居使用。
- 請勿以拉扯方式拔除電源線。握住插頭（而不是電源線）後拔下。
- 電源線或插頭受損，或設備故障或損壞時，請勿使用。請立即聯絡客戶服務中心取得進一步說明。
- 使用可攜式設備時，為避免觸電，請勿將設備存放在可能掉落或掉進盆子或水槽的位置。
- 設備不用時，請一定要先拔下插頭，再拆裝配件或清潔。請勿將電源線插頭從牆上插座硬拉下來。
- 請勿將設備用於非預定用途。
- 設備插頭如受潮，請關閉插座電源，可別試著拔掉插頭。
- 完成安裝後請檢查本設備，如電源線或插頭有水，請勿插電。

小心

- 請勿讓寵物吞咬任一配件，若擔心電源線被咬，請至任一五金行購買導線管（硬塑膠外殼）。
- 飲水器配件不含酚甲烷（BPA），不過有些動物對裝食物和水的塑膠容器敏感。如果寵物對塑膠製品出現過敏性反應，諮詢獸醫之前請暫停使用。

注意

- 飲水器為持續運轉而設計（隨時插著電），只要保持一定水位並定期清潔飲水器即可。由於水可能喝完或蒸發，致使水泵空轉，請務必定期檢查飲水器，以免水泵損壞。
- 請勿嘗試自行修理馬達。
- 電源插座應高於飲水器，以避免插頭或插座受潮。
- 如須使用延長線，應選適合的額定功率。
- 本設備耗電率為 2.5 瓦。
- 請勿將設備用於非預定用途。使用非原廠銷售或建議的附屬裝置可導致不安全的情況。請勿變更設備。
- 不要安裝或存儲設備，它會接觸到天氣或溫度低於4.5℃。
- 請參閱並遵守設備與包裝明列的所有重要事項。

請保存使用說明書備用


感謝您選擇 PetSafe® 品牌。您和您的寵物應享有一種包含難忘時刻和共同理解的友愛關係。我們的產品和訓練工具可增強寵物與其主人之間的關係。若您對於我們的產品或是訓練寵物有任何疑問，請造訪我們的網站 www.petsafe.net，或是撥打電話 +86 (0) 755 2671 5353 連絡我們的客戶服務中心。

為透過產品保固獲得最大的保護，請於 30 天內造訪 www.petsafe.net 註冊您的產品。您透過註冊並保管好您的收據，將享受產品的完整保固，而且如需打電話給客戶服務中心，我們將能夠為您提供更快捷的幫助。最重要的是，您的寶貴資訊決不會披露或出售給任何人。請造訪 www.petsafe.net 線上取得完整保固資訊。

目錄


部件.....	19
特點.....	19
重要定義.....	20
操作說明.....	21
飲水器拆卸與清潔.....	23
水泵日常保養.....	24
飲水器重新組裝.....	26
飲水器與您的環境.....	27
使用時重要提示.....	27
產品保固與客戶服務.....	28
合規性.....	28
重要的回收建議.....	28
使用條款與責任限制.....	29

部件

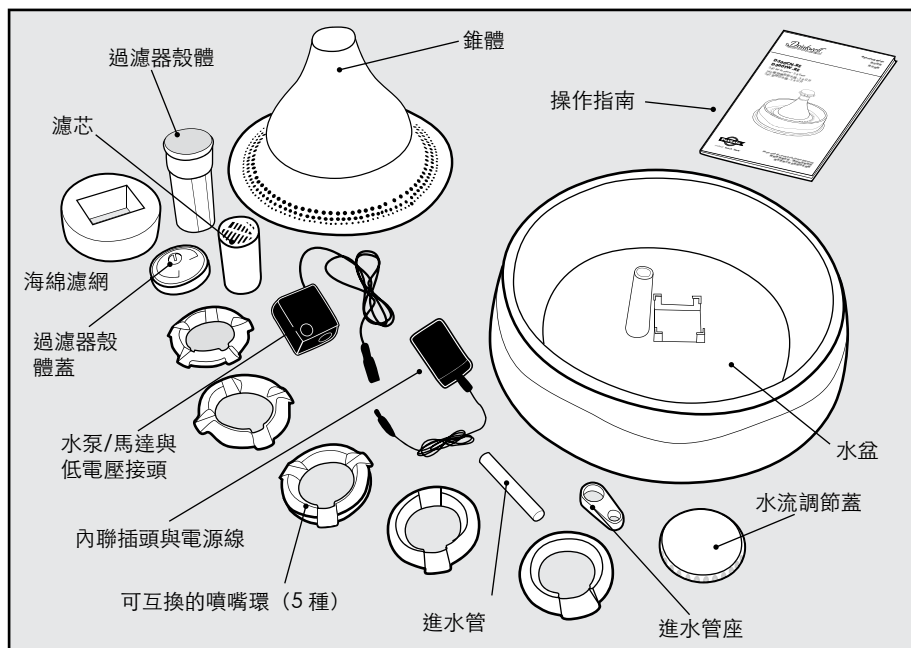

註：您會收到部分組裝好的飲水器，但仍建議您檢查所有的配件，看在運送過程中是否有鬆脫的情形。

特點

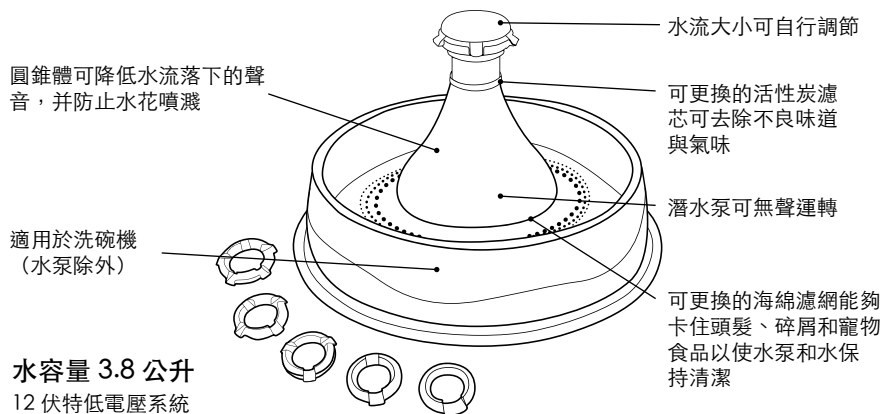

重要定義

水盆：水盆是飲水器的基座。拿著圓形水盆下方的側壁即可端起。另外，水盆底部有「電源線固定扣」，可隱藏電源線。

錐體：錐體是飲水器部件的機體，保護水泵免受好奇寵物接觸。錐體可減少水花噴濺情形並降低落水聲，同時蓄積大部分的水並支撐過濾器殼體與相關配件。

過濾器殼體：過濾器殼體從錐體頂部滑入開口，中間放濾芯，旋轉過濾器殼體四分之一圈即可扣住錐體。

濾芯：圓筒狀的濾芯頂部有拉環，放入過濾器殼體時拉環應朝上，方便更換。

過濾器殼體蓋：過濾器殼體蓋是附在過濾器殼體的旋轉式上蓋，用來固定濾芯，是連在可互換的噴嘴與水流調節蓋的基件。

海綿濾網：海綿濾網能夠卡住頭髮、碎屑和寵物食品以防止它們進入水泵內，從而達到最佳過濾效果。請務必使用海綿濾網，這有助於維持正常的水泵運轉。

噴嘴環：飲水器有五個可互換的噴嘴環，可依寵物的喜好輕鬆調整，提供寵物多的家庭最多 5 處水流。



水流調節蓋：水流調節蓋附在飲水器頂部，左右旋轉蓋子即可輕鬆調節水流。右轉可增強水流量，左轉可降低水流量。

水泵：小型低電壓水族箱用的潛水泵，可拆開清潔。**重要事項：**用洗碗機清洗水泵不安全！清潔前，請先卸下飲水器的水泵。（請參閱「水泵日常保養」）水泵的電源線具備可拆式內聯插頭，方便拆卸。



操作說明

重要事項：飲水器禁止空轉。僅限室內使用。




1. 如同使用任何電器設備，使用前請先檢查電源線有無裂開或損壞。
2. 請確保內聯插頭有接上（不可露出銀色金屬 - 見圖 1）。
3. 以逆時針方向旋轉以解開水盆鎖扣，卸下錐體。拿起來放旁邊（見圖 2）。
4. 請檢查以確保進水管正確插入（壓到底）水泵內部。環繞水泵放置海綿濾網（見圖 3）。
5. 放回錐體，並以順時針方向旋轉固定鎖扣（見圖 4）。

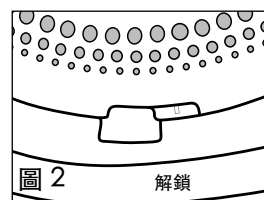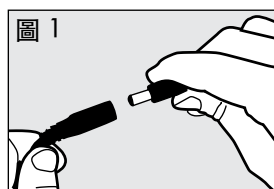

6. 拿著部分組裝的過濾器殼體，輕輕掀起水流調節蓋後取下，請勿以扭轉方式卸除（見圖 5）。輕輕掀起噴嘴環後卸下，以接觸過濾器殼體蓋。

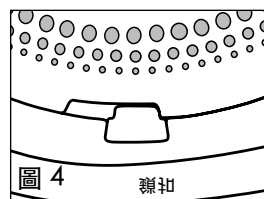
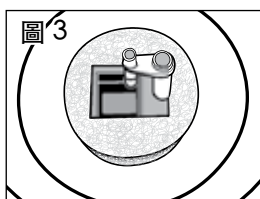


7. 旋開過濾器殼體蓋，把濾芯放入殼體，拉環朝上（見圖 6）。濾芯會輕鬆滑入就位。接著，旋上過濾器殼體蓋（見圖 7）。

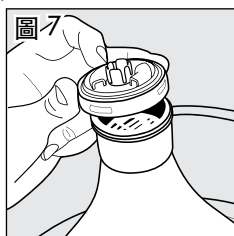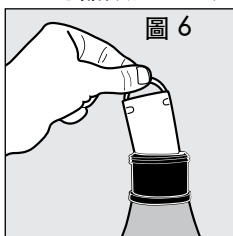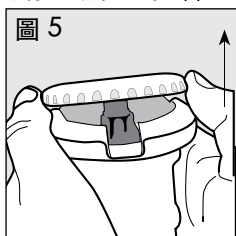

重要事項：將濾芯放入殼體之前，請先用冷水徹底沖淨。此舉會除去所有脫落的活性炭塵，活性炭塵是無害的物質。濾芯的使用期間可能會逐漸釋出少量活性炭塵。這很正常，對寵物無害。濾芯使用兩週就該換新，以維持最佳效能。視使用飲水器的寵物數而定，濾芯可能得更常換新。

8. 將過濾器殼體的側槽對準錐體開口的內凹槽。過濾器殼體應能輕鬆滑入就位。將殼體右轉四分之一圈（順時針方向），直到鎖入到位（圖 8）。
9. 請依您個人或寵物的喜好，從五個可互換的噴嘴中擇一。將選定的噴嘴環放在過濾器殼體蓋上，然後均勻輕壓以固定就位（圖 9）。
10. 在過濾器殼體蓋上，將水流調節蓋對準高起的凹槽（圖 10）。輕壓水流調節蓋即可卡入定位。有了水流調節蓋，就能輕鬆調節水流強度。右轉水流調節蓋可增強水流量，左轉可降低水流量。**重要事項：**如水流變小，且將水流調節蓋轉到最大也無用，就可能是濾芯堵塞或是髒了，和/或需要沖洗和清潔過濾器殼體。請參閱本手冊的「飲水器拆卸與清潔」一節，了解清潔與維護飲水器的詳情。
11. 將飲水器的水盆裝水。請確保水位至少高於 MIN（最低（水位線）），避免水泵空轉。此舉可啟用水泵。裝水請勿滿過飲水器的 MAX（最高（水位線））。
12. 將飲水器放在所需的位置。**重要事項：**千萬別從錐體處拿起整個飲水器。欲正確拿起飲水器，請用雙手握住水盆側壁抬起。建議您隨時鋪著毛巾或擺放護墊，來保護您的地板，避免因寵物使用飲水器而受潮。
13. 飲水器插電前，請確保電源線和您的雙手都是乾的。將飲水器插頭插入標準的牆壁電源插座。
14. 視需要加水，千萬別讓水位低於 MIN（最低（水位線））（盆底上方 25 公釐左右，圖 11），不然水泵可能會壞掉。備用水泵須另購，可傳送電子郵件至 asiacc@petsafe.net 聯絡客戶服務中心。

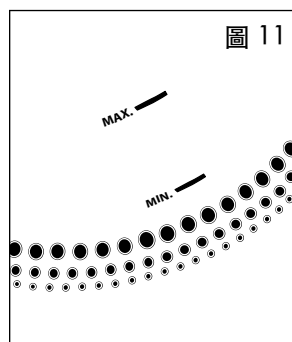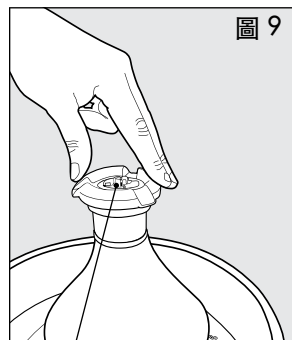

飲水器拆卸與清潔

重要事項：飲水器一定要保持清潔，方可維持正常運作。

過濾系統

寵物噴泉飲水器配備的兩種過濾裝置應當定期更換。活性炭濾芯可去除不良味道與氣味，這有助於保持水的新鮮味道。海綿濾網能夠卡住頭髮、碎屑和寵物食品以防止它們進入水泵內，從而達到最佳過濾效果。這兩種過濾裝置結合使用將能夠使水泵保持潔淨，並可為寵物提供更新鮮的水。




活性炭濾芯：濾芯應當每二至四週更換一次。若寵物噴泉飲水器用於多隻寵物或產生大量唾液的寵物，應當更頻繁地更換濾芯。**重要事項：**使用活性炭濾芯前請一律予以沖洗。使用期間可能會釋出少量活性炭粉；此乃正常現象，不會對寵物造成危害。

海綿濾網：應根據寵物噴泉飲水器的位置，以及使用飲水器的寵物數，每一至兩個月更換海綿濾網。如果清潔時還不想更換濾網，請用乾淨的水徹底沖洗海綿濾網。


濾網是寵物噴泉飲水器的一項附加功能。即使未使用濾網，飲水器仍可正常操作，但若適當使用並定期予以更換，濾網能讓水更潔淨、更新鮮，同時還可延長寵物噴泉飲水器的使用壽命。清潔寵物噴泉飲水器時，可將濾網取出沖洗。**重要事項：**切勿使用肥皂水清洗濾網，因為殘留的肥皂液會滲入濾網，導致無法去除。僅可用水沖洗濾網。

飲水器：每週清潔一次。



1. 拔下飲水器的電源並拔除內聯插頭（見圖 1）。
2. 卸下水流調節蓋與噴嘴環。
3. 以逆時針方向旋轉過濾器殼體至開鎖位置後卸下。拿起放旁邊。
4. 清空飲水器裡面的水。
5. 飲水器清空後，以逆時針方向旋轉錐體解開鎖扣後卸下。拿起放旁邊（請參考圖 2）。
6. 接著，把水盆倒過來，從兩個固定扣中取出電源線（見圖 12）。這樣就能讓電源線穿過水盆的電源線穿線孔（見圖 13）。

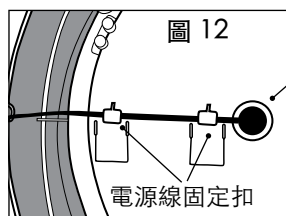

電源線穿線孔

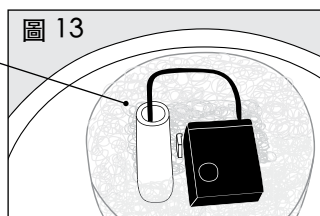


7. 拆下水泵清潔。首先，把進水管座往上提，使進水管與水泵分開，取下進水管（見圖 14 和圖 15）。這樣就可卸下水泵。之後就可從進水管座拉進水管。（請參閱「水泵日常保養」取得馬達/水泵的清潔說明詳情）

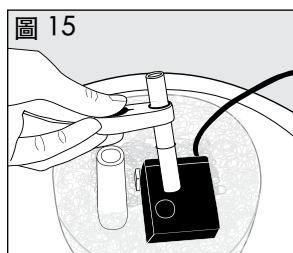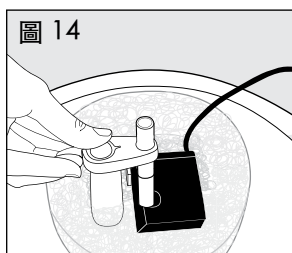


8. 將海綿濾網從水泵取下。清除聚積在水泵面板上的任何毛髮、碎屑或寵物食品（請參閱「水泵日常保養」，瞭解水泵的詳細清潔指示。）
9. 請用溫水和肥皂清潔飲水器的配件。也可把飲水器放在洗碗機的上架。把飲水器放入洗碗機前，請先取下水泵。請勿將水泵放入洗碗機！如果可能的話，建議您將洗碗機內的熱水功能關掉。
10. 有些地方或角落若難以清潔，請試試棉花棒或購買 Drinkwell® 清潔刷套裝（3 件套）。購買清潔套裝，請造訪我們的網站 www.petsafe.net 查詢離您最近的零售商，或取得您所在區域的客戶服務中心電話列表。

水泵日常保養


重要事項：若要飲水器長期耐用並供應潔淨的水，清潔水泵必不可少。請至少兩週清潔一次水泵。未定期清潔水泵，可能使保固失效。

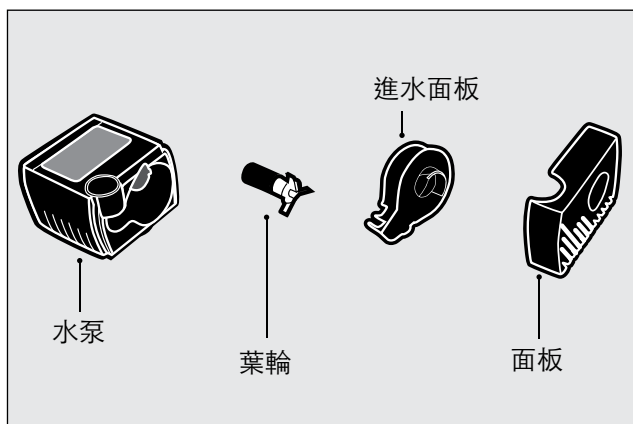

1. 請按照「飲水器拆卸與清潔」一節的說明取下飲水器的水泵（特別是步驟 6 和 7）。
2. 一旦取出寵物噴泉飲水器的水泵後，請用拇指和食指輕壓面板兩側並予以拉出。可能必須將指甲塞入面板的縫隙中，才可撬出。
3. 接下來，您可把指甲塞到淚滴型進水面板狹窄側的小凸緣下方，再向外拉，即可取出進水面板（圖 16）。

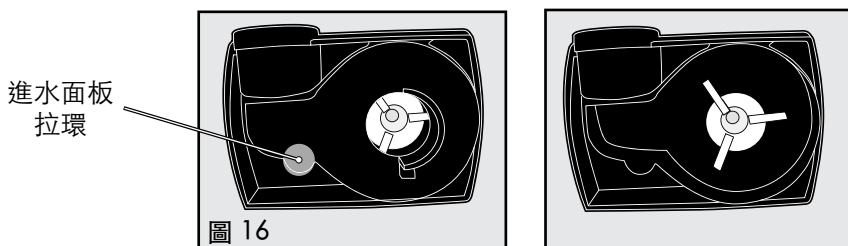


4. 取出進水面板後，您也可取出以磁力固定的葉輪（白色三瓣式葉輪片）。以指甲卡入塑膠瓣片下往外掀開，取下葉輪（圖 17）。

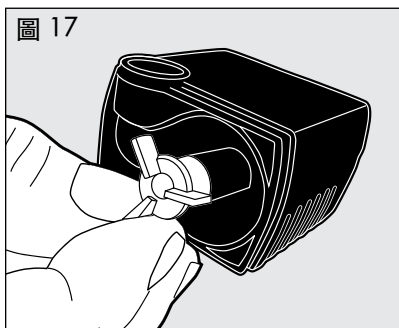

5. 馬達拆開後，即可用溫肥皂水清潔配件。使用棉花棒或 Drinkwell® 清潔套裝的「馬達清洗刷」進入馬達內腔，除去所有堆積物。（圖 18）為了強化消毒並去除硬水，請用 20% 的白醋和 80% 的水製成的溶液清潔馬達。一定要用清水徹底沖乾淨。

6. 洗淨配件後，即可重新組裝水泵來使用。

- a) 更換葉輪。
- b) 將進水面板放回原處。
- c) 把面板放回原處。

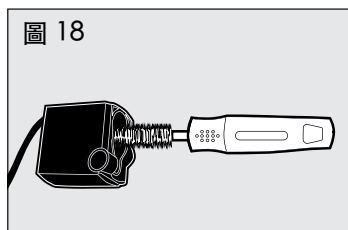

飲水器重新組裝

1. 環繞水泵放置海綿濾網。確認電源線是繞過海綿濾網的頂端，而非從其下方繞過，如此可使海綿濾網固定於定位。
2. 一邊使海綿濾網穩固地環繞著水泵，一邊將水泵放回原位，使其介於水盆中央四個 12.5 公釐的柱桿之間。請確實使水泵頂端的孔洞位於水盆內電源線穿線孔旁。往下輕壓與吸盤接合。
3. 將進水管放回進水管座內，然後將進水管座放回電源線穿線孔柱桿上，將柱桿的引線對準進水管座的凹槽。對準進水管時要小心，才能裝入水泵頂部的孔洞。
4. 將內聯插頭穿過水泵旁的開口。在水盆底部，使用「電源線固定扣」固定電源線（圖 12）。接著，透過電源線穿線孔，將電源線直接穿出飲水器（圖 12 和圖 13）。使用此電源線穿線孔可使電源線不外露。
5. 將錐體周圍的三個凹槽對準水盆內相應的鎖扣。接著，將錐體右轉（順時針），將鎖扣固定就位（圖 2 和圖 4）。
6. 建議在清潔飲水器後更換濾芯。
7. 將過濾器殼體蓋旋緊後，將過濾器殼體滑入錐體頂部的孔洞中。將過濾器殼體右轉（順時針）四分之一圈固定鎖扣。
8. 選擇您喜歡的噴嘴環（1-5 個噴嘴），放在過濾器殼體蓋頂部，輕壓到位。請確保下壓力道都很平均。
9. 對準過濾器殼體的凹槽，將水流調節蓋放回，輕壓固定。
10. 將飲水器的水盆裝水。請確保水位至少高於 MIN（最低（水位線）），避免水泵空轉。此舉可啟用水泵。裝水請勿滿過飲水器的 MAX（最高（水位線））。
11. 將飲水器放在所需的位置。**重要事項：**千萬別從錐體處拿起整個飲水器。欲正確拿起飲水器，請用雙手握住水盆側壁抬起。建議您隨時鋪著毛巾或擺放護墊，來保護您的地板，避免因寵物使用飲水器而受潮。
12. 飲水器插電前，請確保電源線和您的雙手都是乾的。將飲水器插頭插入標準的牆壁電源插座。

飲水器與您的環境

若您居住的環境較為潮濕，易於滋生霉菌與苔蘚，請於清洗寵物噴泉飲水器後，將其浸泡於稀釋後的醋酸溶液 (20% 醋與 80% 水的比例) 中十分鐘。並且用其清洗馬達內腔。

如果您使用硬水清洗，水泵內外可能會有有些許的白色的礦物質。日後這可能會造成葉輪無法正常運作。為避免水泵損壞，可採取以下措施：

1. 經常清洗水泵。
2. 每週清洗時請使用稀釋過的醋酸溶液清洗水泵。
3. 請避免使用自來水清洗，改用蒸餾水清洗。

使用時重要提示

- 您的寵物剛開始用飲水器時，可能會對這個新奇的物品小心翼翼。飲水器開始運轉後，任由寵物依其步調適應。有些寵物可能需要數天或更長時間才會開始使用，有些馬上就喝起來了。
- 您的寵物可能喜歡飲水器離平時的餵食區遠一點。設法將飲水器放在別處，例如廚房另一區、浴室或雜物間。
- 加冰塊到水盆裡讓流水更加冰鎮、爽口！

產品保固與客戶服務

本產品享有製造商提供的一 (1) 年有限保固。該保固不適用於因意外、誤用或濫用行為所致的損害。它還在法律允許之範圍內明確地排除了偶發性或後果性損害。因未進行清潔、碎片或硬水的礦化作用所致的功能喪失不在本保固範圍之內（請參閱清潔指示和環境說明）。

如需取得關於適用本產品之保固及其條款的詳細資訊，可造訪 www.petsafe.net 及/或傳送電子郵件至 asiacc@petsafe.net。

請聯絡當地的客戶服務中心以解決您所遇到的任何安裝或技術難題，以及在必要時獲得協助來更換產品。如需取得您所在地區的客戶服務中心清單，請造訪我們的網站 www.petsafe.net。

合規性




本設備符合 EMC 與低電壓指令。未經 Radio Systems Corporation 授權核准之產品變更或修改可能違反歐盟規定，可讓使用者失去設備操作權力，並使保固無效。

查閱符合性之宣告：

http://www.petsafe.net/customer care/eu_docs.php。

重要的回收建議

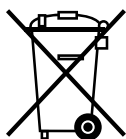

請尊重所在國的廢電子電機設備規定。本設備必須回收。若不再需要此設備，請勿將其置於一般的城市廢物處理系統中。麻煩帶回原銷售地點，以便透過我們的回收系統回收。如無法做到，請聯絡客戶服務中心取得進一步的資訊。

使用條款與責任限制

1. 使用條款

若要使用本產品，應當接受本文所載之條款、條件和通知，而不對其作出修改。使用本產品即意味著您接受所有此等條款、條件和通知。若您不願接受這些條款、條件和通知，請勿使用本產品。

2. 正確使用

若您不確定本產品是否適合您的寵物，請諮詢獸醫或持有證書的馴獸師，或是連絡我們的客戶服務中心，或造訪我們的網站 www.petsafe.net。正確使用包括仔細閱讀產品隨附之「操作指南」的全文以及所有特定的警告聲明。

3. 不得用於非法或禁止的用途

本產品專門設計用於寵物。本裝置不可用於危害、傷害或激怒寵物。以非預期方式使用本產品可能會違反聯邦、州或當地法律

4. 責任限制

在任何情況下，Radio Systems Corporation 或其任何一間聯屬公司皆不對以下損害或損失承擔責任：(i) 任何間接性、懲罰性、偶發性、特殊性或後果性損害，及/或 (ii) 因誤用本產品所致或與之相關的任何損失或損害。購買者將在法律所允許之最大範圍內承擔與使用本產品有關的所有風險和責任。

5. 條款和條件之修改

Radio Systems Corporation 保留變更提供本產品時應遵循之條款、條件和通知的權利。

* 已在美國專利暨商標局註冊

在下文中，Radio Systems Corporation 和任何其它附属公司或 Radio Systems Corporation 品牌都将统称为“我们”。

重要安全信息

本指南中使用的警示语和符号说明

⚠ 警告

“警告”表示一种危险处境，如果不避免，会导致人员死亡或严重受伤。

小心

“小心”在未与安全警告符号同时使用时，表示一种危险处境，如果不避免，可能会导致您的宠物受到伤害。

注意

“注意”用于指示不会导致人员受伤的安全使用做法。

⚠ 警告

在使用电器时，一定要遵守基本的安全注意事项，以降低火灾、电击和/或人员受伤等风险，包括以下内容：

- 为降低伤害风险，在儿童使用电器或在儿童附近使用电器时，应密切监督。
- 为防止电击，切勿将电源线或插头放入水中或其它液体中。
- 只能使用制造商建议或销售的附件。
- 切勿在室外使用。仅供室内家庭使用。
- 切勿拉动电源线拔出插头。若要拔出插头，请抓住插头，而不要抓住电源线。
- 如果任何电器的电源线或插头损坏，或电器出现故障或已经损坏，切勿使用之。请立即致电客服中心寻求进一步指示。
- 对于便携式电器 – 为了降低电击风险，切勿将电器置于或储存在可能跌落或可能被拉入浴盆或水池的地方。
- 一定要在电器不使用时、安装或拆卸零件之前以及在清洁之前拔下插头。决不可拉动电源线从墙体插座上拔下插头。
- 切勿将电器用于其用途之外的任何目的。
- 如果本装置的插头受潮变湿，请关闭连接其插座的电源。切勿尝试拔下插头。
- 在安装后检查本电器。如果电源线或插头上有水，切勿插入插头。

小心

- 切勿让宠物咀嚼或吞咽任何零件。如果您担心电源线，请在任何五金商店购买电线护套（一种硬质塑料保护套）。
- 饮水器零件不含 BPA（双酚基丙烷）。但是已知有些动物对塑料食物和水容器过敏。如果您的动物出现对塑料过敏反应迹象，请停止使用，并咨询您的兽医。

注意

- 只要保持水位并且定期清洁饮水器，该饮水器（一直插入电源）会一直喷水。要确保定期检查饮水器，以防止水泵损坏，因为水可能被消耗或蒸发，造成水泵空转。
- 切勿尝试自己修理马达。
- 为避免插头或插座变湿，插座一定要高于饮水器的高度。
- 如果必须使用延长线，应使用具有正确等级的延长线。
- 本电器的功率为 2.5 瓦。
- 切勿将电器用于其用途之外的任何目的。使用非制造商建议或销售的附件可能会造成不安全状况。切勿修改本装置。
- 不要安裝或存儲設備，它會接觸到天氣或溫度低於4.5°C。
- 阅读并遵守本电器上或包装上所列的所有重要注意事项。

请保存这些说明以备用


感谢您选择 PetSafe® 品牌。您和您的宠物值得拥有互相陪伴的难忘时刻和包容共识。我们的产品和训练工具将增进宠物和主人之间的关系。如果您对我们的产品和训练工具有任何问题，请查询我们的网站：www.petsafe.net，或致电我们的客服中心：+86 (0) 755 2671 5353。

为了充分利用您的保修期，请于 30 日内在 www.petsafe.net 注册您的产品。通过注册和保留你的收据，您将享受本产品的全部免费保修。如您致电客服中心，我们会更加及时地帮助您。最重要的是，我们绝不会将您的宝贵信息透露或出售给任何人。在 www.petsafe.net 您可以找到完整的保修信息。

目录


组件.....	33
特点.....	33
重要定义.....	34
使用说明.....	35
饮水器拆卸与清洁.....	37
水泵日常维护.....	38
饮水器重新组装.....	40
宠物喷泉饮水器与您的环境.....	41
使用时重要提示.....	41
保修与客服.....	42
合规性.....	42
重要的回收利用建议.....	42
使用条款及责任限制.....	43

组件

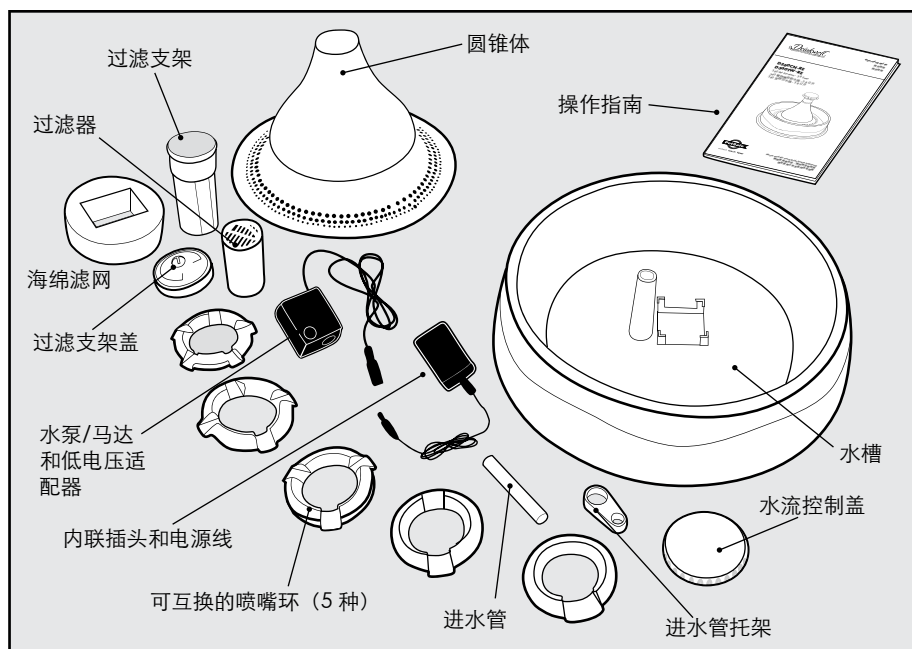

注：您的饮水器发货时已部分组装，但最好要检查确保饮水器的零件在运输过程中没有松脱。

特点

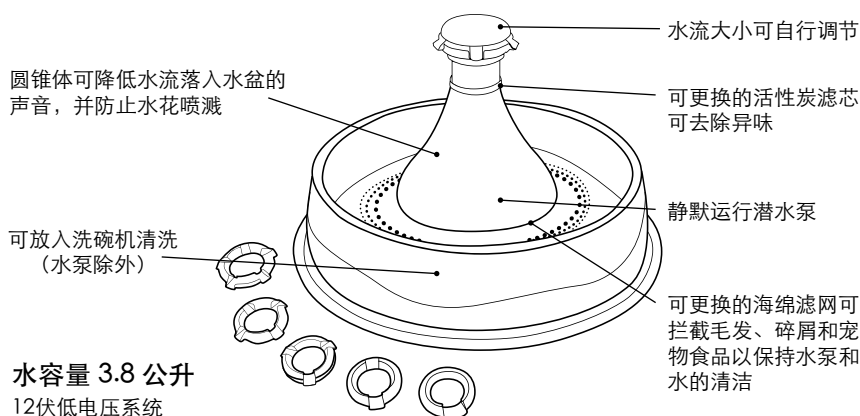

重要定义

水槽：水槽是饮水器的基础。只需抓住该圆形水槽件侧壁的下面，即可将其拿走。此外，水槽底部具有“电线夹”，用于隐藏电源线。

圆锥体：该圆锥体是饮水器组件的壳体，其中保护的是宠物颇感兴趣的水泵。该圆锥体的作用是减少喷溅及落水声音。它还盛装大部分的水并容纳过滤支架和其中的零件。

过滤支架：该过滤支架从圆锥体顶部的开口处滑入。它容纳过滤器，通过旋转整个过滤支架四分之一圈，将过滤器锁入圆锥体。

过滤器：圆筒形过滤器特点是在顶部有一个拉环，在将其放入过滤支架时，该拉环应向上，以便取放。

过滤支架盖：。过滤支架盖是连接到过滤支架上的带螺丝的盖子，将过滤器固定到位。它作为基座件连接可互换的喷嘴和水流控制盖。

海绵滤网：海绵滤网可挡住毛发、碎屑和宠物食品，防止其进入水泵，从而提供最佳过滤功能。使用海绵滤网是很重要的，因其有助于保持适当的水泵功能。

喷嘴环：该饮水器具有五个可互换的喷嘴环，可根据您宠物的喜好方便地更换，而且最多可提供 5 股水流，供家庭中的多个宠物使用。


水流控制盖：水流控制盖连接到饮水器顶部，只需向左或向右旋转水流控制盖来调节水流。向右旋转增加水流。向左旋转减小水流。

水泵：这是一种可拆卸清洁的小型低压潜水泵。**重要：**此水泵不可放入洗碗机清洗！在清洁前从饮水器上拆下水泵。（请参见“水泵日常维护”）水泵电缆配有可拆卸内联插头，便于拆下。


使用说明

重要：切勿让饮水器空转 – 仅适于室内使用。

1. 与任何电气装置一样，在使用之前请检查电源线是否有磨损或损坏。
2. 确保内联插头已连接（未显示银色 – 参见图 1）。

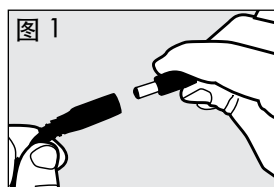


3. 逆时针旋转，将其从水槽上解锁，以此拆下圆锥体。将该件提起，放在一旁（参见图 2）。

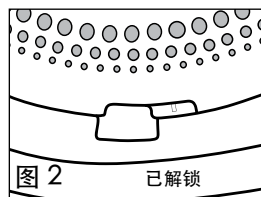


4. 检查确保进水管（一直向下推）已插入水泵。将海绵滤网绕在水泵上（参见图 3）。




5. 重新放好圆锥体并顺时针旋转将拉片锁定入位（参见图 4）。

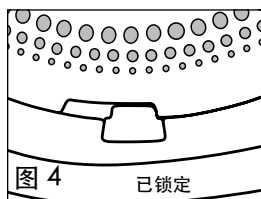

6. 取出部分组装好的过滤支架，轻轻向上提起，取下水流控制盖 – 取下时切勿扭转（参见图 5）。轻轻向上提起喷嘴环来接触过滤支架盖。



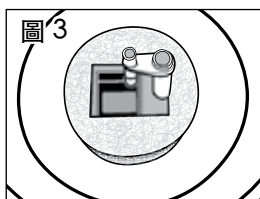


7. 旋开过滤支架盖，将过滤器插入到过滤支架中，使拉环向上（参见图 6）。过滤器将很容易滑动就位。下一步，旋转盖上过滤支架盖（参见图 7）。

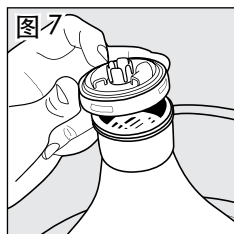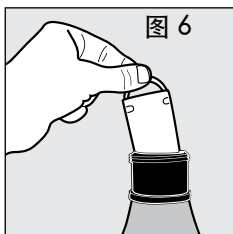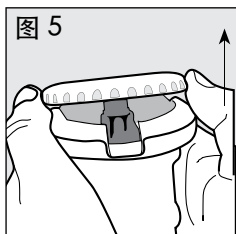

重要说明：在将过滤器放入支架中之前，在冷水下彻底冲洗过滤器。这将去除无害的任何脱落的木炭粉。在过滤器寿命期中会逐渐释放少量的木炭粉。这是正常的，对宠物无害。应每两周更换一次过滤器，以实现最佳性能。根据使用饮水器的宠物的数量，可能需要更频繁地更换过滤器。

8. 将过滤支架的侧槽与圆锥体开口的内槽对齐。过滤支架应很容易滑动就位。向右（顺时针）旋转支架四分之一圈，直至其锁定入位（图 8）。
9. 根据您个人或宠物的喜好，在五个可互换喷嘴环中选择一个。将选定的喷嘴环放在过滤支架盖上面，然后轻轻均匀压下固定到位（图 9）。
10. 将水流控制盖与过滤支架上的凸起槽对齐（图 10）。轻轻压下后，控制盖将卡紧入位。利用水流控制盖，您将能够方便地调节水流强度。向右旋转控制盖增加水流，向左旋转减小水流。**重要说明：**如果您注意到水流减少，而将水流控制盖旋转到最大也无法改变水流，这可能表示过滤器堵塞和变脏，需要冲洗和清洁过滤支架。请查阅本手册的“饮水器拆卸与清洁”一节，了解清洁和维护饮水器的详情。
11. 给饮水器水槽注水。确保水位至少达到 MIN（最低（水位线））以便使水泵不会空转。这将给水泵注水以备用。切勿给饮水器注水超过 MAX（最高（水位线））。
12. 将饮水器放在所需位置。**重要：**绝不能抓住中央圆锥体件拿起满水的饮水器。若要正确拿起饮水器，用双手抓住饮水器水槽侧壁底部提起。为了保护地板，一定要使用保护垫，比如毛巾或餐垫。这样将有助于避免宠物使用饮水器时喷溅出的水影响地板。
13. 在将饮水器连接到电源之前，确保电源线和您的手干燥。将饮水器连接到标准墙体插座。
14. 按需加水。绝不能让水位低于 MIN（最低（水位线））（大约高出水槽底部 25 毫米，图 11），否则水泵将出现故障。替换水泵另行购买，具体可通过 asiacc@petsafe.net 联系客服中心。

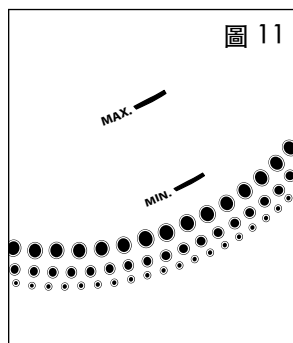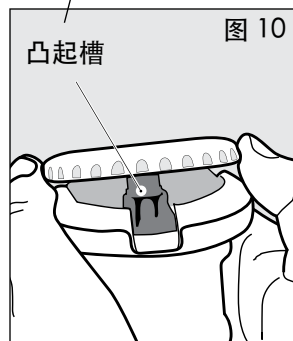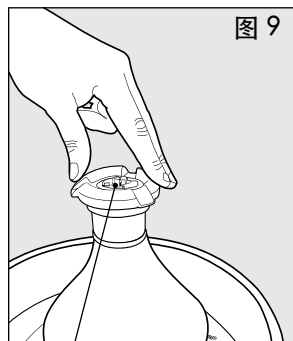

饮水器拆卸与清洁

重要：必须清洁饮水器才能使其继续正常工作。

过滤器系统

宠物饮水器配备两种类型的过滤器，这些过滤器应定期更换。活性炭滤芯可消除不良味道和气味，使饮水保持新鲜。海绵滤网可挡住毛发、碎屑和宠物食品，防止其进入水泵，从而提供最佳过滤功能。这些过滤器共同发挥作用，保持水泵清洁，为您的宠物提供更加新鲜的饮水。



活性炭滤芯：过滤器应每二到四周更换一次。当宠物饮水器用于多个宠物或宠物唾液非常多时，应增加更换过滤器的频率。

重要：使用前务必清洗活性炭滤芯。过滤器使用寿命期间可能会释放少量活性炭粉末，这是正常现象，不会对您的宠物造成伤害。



海绵滤网：每一两个月更换一次海绵滤网，具体取决于宠物饮水器的位置以及使用饮水机的宠物的数量。如果在清洁时不想更换过滤器，请用淡水彻底清洗海绵滤网。

过滤器是宠物饮水器的新增特点。使用过滤器并非正常运行的必要条件。不过，若使用得当且定期更换，过滤器有助于保持饮水清洁、干净，同时延长宠物饮水器的使用寿命。在清洁宠物饮水器时，可冲洗过滤器。**重要：**请勿用肥皂水洗涤过滤器，因为肥皂沉淀物会渗入过滤器并无法清除。务必用清水冲洗过滤器。

饮水器：每周清洁一次。

1. 将饮水器插头从电源上拔下，断开内联插头（参见图 1）。
2. 拆下水流控制盖和喷嘴环。
3. 逆时针旋转过滤支架至解锁位置，以此拆下过滤支架。直接提起，放在一旁。
4. 清空饮水器中的水。
5. 一旦饮水器被清空，逆时针旋转，解锁拉片，以此拆下圆锥体件。将该件提起，放在一旁（参阅图 2）。
6. 下一步，将水槽向下翻转并从两个电线夹上松开电源线（参见图 12）。这样可使您将电源线拉过水槽中的电源穿线口（参见图 13）。

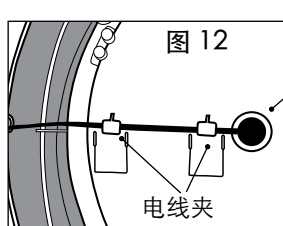


图 12

穿线口



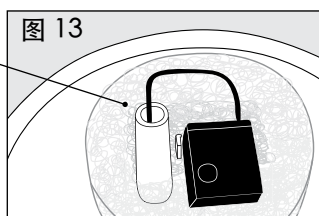


图 13


7. 拆下水泵准备清洁。首先提起进水管托架，将进水管从水泵上脱开，拆下进水管（参见图 14 和 15）。这样您就可以拆下水泵。然后可从进水管托架上拉下进水管。（参见“水泵日常维护”，了解马达/水泵的详细清洁说明）

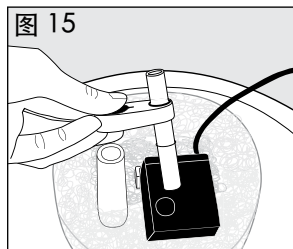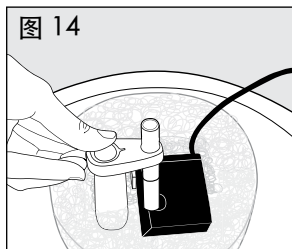


8. 从水泵卸下海绵滤网。清除水泵面板上可能聚积的任何毛发、碎屑或宠物食物（请参阅“水泵日常维护”中详细的水泵清洁说明）。
9. 用温水和肥皂清洁饮水器零件。您也可以将饮水器放在洗碗机最上面的架子中。在将饮水器放入洗碗机之前，拆下水泵。切勿将水泵放入洗碗机！如果可能，建议您将洗碗机中的水温调低。
10. 如果很难够到某些点或难以接触的角落，可尝试使用棉签或购买 Drinkwell® 清洁套件，即清洁刷三件套。若要购买清洁套件，请访问我们的网站 www.petsafe.net 查找在您附近的零售商，或查找您所在地区的客服中心电话号码列表。

水泵日常维护


重要：清洁水泵对于饮水器寿命以及水的清洁至关重要。至少每两周清洁一次水泵。如果未能定期清洁水泵，保修可能失效。

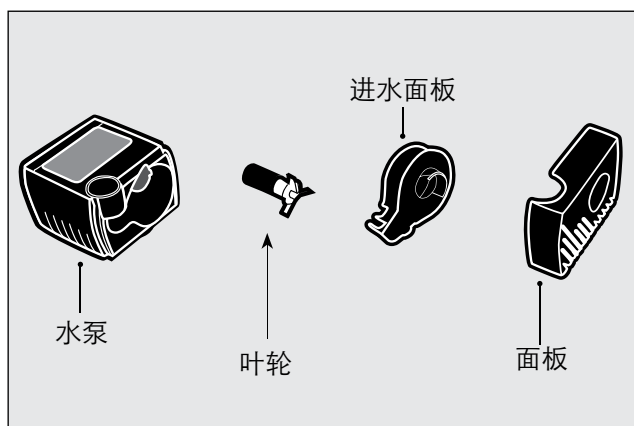


1. 按照“饮水器拆卸与清洁”一节（具体为第6和第7步）的解释，从饮水器上拆下水泵。
2. 取出水泵后，用拇指和食指捏住面板任一端，然后拉出。可能需要指甲入面板的隙中以将其分离。
3. 接下来，将指甲放在泪珠状进水面板窄端上的小唇片下并向外拉，拆下进水面板，并将其拉出。（图16）。

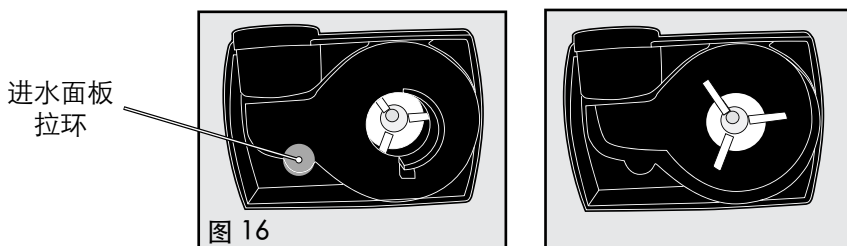

4. 取出进水面板后，您还可以拆下叶轮（白色，3个叶轮片），叶轮靠磁性保持在原位。若要拆下叶轮，使用指甲插入塑料叶片下面并提起（图17）。

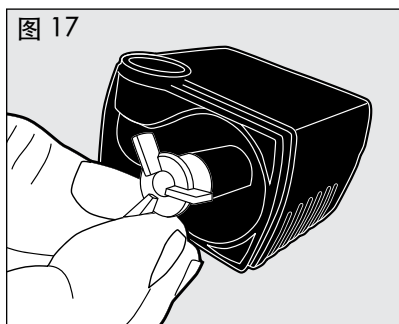

5. 一旦马达拆卸完毕，您可以使用温肥皂水清洁零件。使用棉签或Drinkwell® 清洁套件中的“马达清洗刷”进入马达内腔，清除任何积聚物(图18)。为了提高消毒和硬水去除效果，请使用20%白醋和80%水溶液清洁马达。要确保用清水彻底冲洗。
6. 一旦零件清洁后，您可以重新组装水泵以备备用。

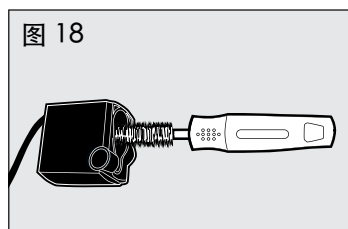

- a) 重新装好叶轮。
- b) 重新装好进水面板。
- c) 重新装好面板。

饮水机重新组装

1. 将海绵滤网绕在水泵上。确保电源线从海绵滤网的顶部而不是底下绕过，因为这样能使海绵滤网保持固定。
2. 将海绵滤网紧紧绕在水泵上后，将水泵重新放入水槽中心四个 12.5 毫米柱子之间。请确保将水泵顶部上孔的位置定位在水槽中电源线穿线口旁边。轻轻压下，使其连接到吸盘上。
3. 将进水管重新放入进水管托架，然后将进水管托架放回到电源线穿线口柱上，将柱子上的导引线 with 进水管托架上的槽口对齐。要小心对齐进水管，使其装入水泵顶部上的孔中。
4. 将内联插头穿过水泵旁边的开口。在水槽底部，使用“电线夹”将导线夹紧入位（图 12）。下一步，将电源线穿过穿线口从饮水器上直接穿出（图 12 和 13）。利用该穿线口隐藏电源线。
5. 将圆锥体周围的三个槽口与水槽中的相应拉片对齐。下一步，向右（顺时针）旋转圆锥体，将拉片锁定入位（图 2 和 4）。
6. 在清洁了饮水机之后，此时应该重新放置过滤器。
7. 拧上过滤支架盖并将过滤支架滑动到圆锥体顶部的孔中。向右（顺时针）旋转过滤支架四分之一圈，将其锁定入位。
8. 选择您偏好的喷嘴环（1 个喷嘴，最多 5 个喷嘴），将其放在过滤支架盖顶部，轻轻将其压下就位。要确保四周均匀压下。
9. 将水流控制盖与过滤支架盖上的槽口对齐，重新放好水流控制盖，并轻轻下压。
10. 给饮水机水槽注水。确保水位至少达到 MIN（最低（水位线））以便使水泵不会空转。这将给水泵注水以备用。切勿给饮水机注水超过 MAX（最高（水位线））。
11. 将饮水机放在所需位置。**重要：**绝不能抓住中央圆锥体件拿起满水的饮水机。若要正确拿起饮水机，用双手抓住饮水机水槽侧壁底部提起。为了保护地板，一定要使用保护垫，比如毛巾或餐垫。这样将有助于避免宠物使用饮水机时飞溅出的水影响地板。
12. 在将饮水机连接到电源之前，确保电源线和您的手干燥。将饮水机连接到标准墙体插座。

宠物喷泉饮水器与您的环境

如果您的居住环境湿度大，存在霉菌和水藻等问题，则在正常清洁后将所有宠物喷泉饮水器部件浸泡在稀释的醋溶液（20% 的白醋和 80% 的水）中约 10 分钟。并且也要将稀释的醋溶液倒入马达内腔。

如果您用的是“硬水”，水泵上面或内侧可能开始出现少量白色矿物沉淀。这最终会影响叶轮的正常旋转。为了避免更换或损坏水泵，请采取下列预防措施：

1. 更频率地清洁水泵。
2. 使用稀释的醋溶液每周清洁水泵。
3. 使用瓶装水而非自来水

使用时重要提示

- 在给宠物使用饮水器时，您的宠物可能对这种新型非常规物体敬而远之。在开始使用饮水器后，只需让宠物按自己的节奏适应即可。有些宠物需要几天甚至更长时间才开始使用，而有些宠物会马上使用。
- 您的宠物可能更喜欢将饮水器远离其正常的进食区。尝试将其放在另外的地方，比如厨房的不同区域或放在卫生间或杂物间。
- 在水槽中添加冰块，已获得新鲜冰镇的流水！

保修与客服

本产品享受 1（一）年的有限厂家保修。该保修范围不包括意外、误用或滥用引起的损坏。它还特别排除了法律规定的连带或间接损坏。缺乏清洁以及“硬水”造成的碎屑或矿化引起的功能丧失不在保修范围内（参阅清洁说明和环保注意事项）。

本产品适用的保修详情及其条款可从 www.petsafe.net 上获取，和/或发送电子邮件至 asiacc@petsafe.net 索取。

如有任何安装或技术问题，请联系当地的客服中心，并根据需要，更换产品。如需获得您所在地区客服中心的清单，请浏览我们的网站 www.petsafe.net。

合规性




本设备符合电磁兼容性（EMC）和低电压指令。未经 Radio Systems Corporation 授权对本产品进行改动或修改可能会违反欧盟法规，会导致用户失去操作本设备的资格，并会使保修失效。

符合性声明可访问：

http://www.petsafe.net/customer care/eu_docs.php

重要的回收利用建议

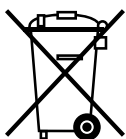

请遵守贵国的废弃电气和电子设备规定。此设备必须回收处理。如果您不再需要此装置，请勿将其随意丢弃。请将其送回您购买此产品的商店，以便于将其投入我们的回收系统。如果无法做到这点，请联系客服中心以获取更多信息。

使用条款及责任限制

1. 使用条款

使用本产品您便已经无异议地接受了此处列举的使用条款和注意事项。使用本产品意味着接受了所有这些使用条款和注意事项。如果您不想接受这些使用条款和注意事项，请勿使用本产品。

2. 使用方式

如果您不确定本产品是否适用于您的宠物，请咨询您的兽医或有执照的训练师，与我们的客服中心联系或访问我们的网站：www.petsafe.net。使用方式包含查阅随您的产品附带的完整操作指南以及任何具体的注意事项声明。

3. 禁止非法或不当使用

本产品是专为宠物使用而设计的。本设备不得用于伤害、致伤或挑衅。以非预期方式使用本产品可能会导致违反联邦、州或当地法律。

4. 责任范围

在任何情况下 Radio Systems Corporation 或其任何关联公司对如下事项不承担法律责任。(i) 任何间接的、惩罚性的、偶然的、特殊或间接损失；和 / 或 (ii) 由于误用本产品所导致的相应的任何损失或损害。购买者应在法律允许的最大范围内承担因使用本产品而带来的全部风险和责任。

5. 使用条款的修改

Radio Systems Corporation 保留更改使用条款以及本产品所提供之注意事项的权利。

* 品牌已在美国专利商标局注册



protect. **teach.** **love.***

Radio Systems Corporation
10427 PetSafe Way
Knoxville, TN 37932
(865) 777-5404
www.petsafe.net

400-1675-43/1

©2016 Radio Systems Corporation