




Operating Guide

사용 설명서

PAGODA-RD-KA-41

Stoneware Pagoda Pet Fountain - 2 Liters

스톤웨어 파고다 애완동물 분수대 - 2 리터

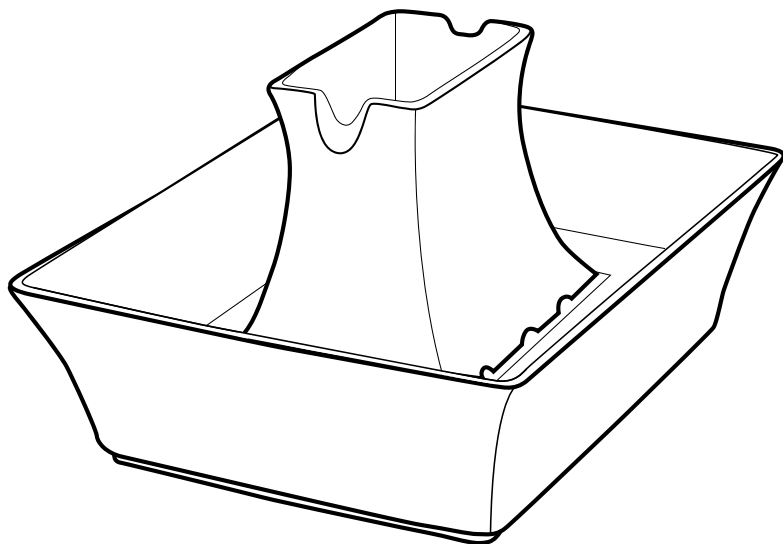

protect. teach. love:

Please read this entire guide before beginning
전에 설명서 전체 내용을 잘 읽어 보십시오

Hereinafter Radio Systems Corporation and any other affiliate or Brand of Radio Systems Corporation may be referred to collectively as "We" or "Us".

IMPORTANT SAFETY INFORMATION

Explanation of Attention Words and Symbols used in this guide

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

NOTICE

NOTICE is used to address safe use practices not related to personal injury.

⚠ WARNING

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- To reduce the risk of injury, close supervision is necessary when an appliance is used by or near children.
- To protect against electric shock, do not place electrical power cord or plug in water or other liquids.
- Only use attachments recommended or sold by the manufacturer.
- Do not use outdoors. **FOR INDOOR HOUSEHOLD USE ONLY.**
- Do not unplug by pulling on electrical power cord. To unplug, grasp the plug, not the electrical power cord.
- Do not operate any appliance if it has a damaged electrical power cord or plug, or if it is malfunctioning or has been damaged. Call Customer Care Centre immediately for further instructions.
- For a portable appliance - To reduce the risk of electrical shock, do not place or store an appliance where it can fall or be pulled into a tub or sink.
- Always unplug any appliance when not in use, before putting on or taking off parts and before cleaning. Never pull on the electrical power cord to remove the plug from the wall outlet.
- Do not use an appliance for anything other than its intended use.
- If the plug of this device gets wet, turn off the electricity to that wall outlet. Do not attempt to unplug.
- Examine this appliance after installation. Do not plug in if there is water on the electrical power cord or plug.

CAUTION

- Do not allow pets to chew on or swallow any parts. If you are concerned about the electrical power cord, purchase a cord conduit (a hard plastic protector) at any hardware store to protect the electrical power cord.
- The plastic Pet Fountain parts are BPA-FREE. However, some animals have been known to be sensitive to plastic food and water containers. If your animal shows signs of an allergic reaction to the plastic, please discontinue use until you have consulted with your veterinarian.

NOTICE

- The Pet Fountain is intended to run continuously (always plugged into electricity), as long as the water level is maintained and the Pet Fountain is cleaned regularly. Be sure to check the Pet Fountain regularly to help prevent damage to the Pump, as the water may get consumed or evaporate causing the Pump to run dry. Never plug in the Pet Fountain without water filled to the appropriate level.
- Do not attempt repairs on the Pump motor yourself.
- To avoid the possibility of the plug or wall outlet getting wet, the wall outlet should always be above the level of the Pet Fountain.
- If an extension cord is necessary, an extension cord with a proper rating should be used.
- The electrical use of this appliance is 2.5 watts.
- Do not use appliance for anything other than intended use. The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the appliance.
- Do not install or store appliance where it will be exposed to weather or temperatures below 4.5°C.
- Read and observe all important notices listed on the appliance and in the packaging.

SAVE THESE INSTRUCTIONS


Thank you for choosing the PetSafe® Brand. You and your pet deserve a companionship that includes memorable moments and a shared understanding together. Our products and training tools enhance the relationship between pets and their owners. **If you have any questions about our products or training your pet, please visit our website at www.petsafe.net or contact our Customer Care Center at +86 (0) 755 2671 5353.**

To get the most protection out of your warranty, please register your product within 30 days at www.petsafe.net. By registering and keeping your receipt, you will enjoy the product's full warranty and should you ever need to call the Customer Care Center, we will be able to help you faster. Most importantly, your valuable information will never be given or sold to anyone. Complete warranty information is available online at www.petsafe.net.


Table of Contents

Components	5
Features	5
Key Definitions	6
Operating Instructions	7
Pet Fountain Disassembly and Cleaning	9
Pump Maintenance	11
Pet Fountain Reassembly	12
The Pet Fountain and Your Environment	14
General Tips	14
Warranty and Customer Care	15
Compliance	15
Important Recycling Advice	15
Terms of Use and Limitation of Liability	16

Components

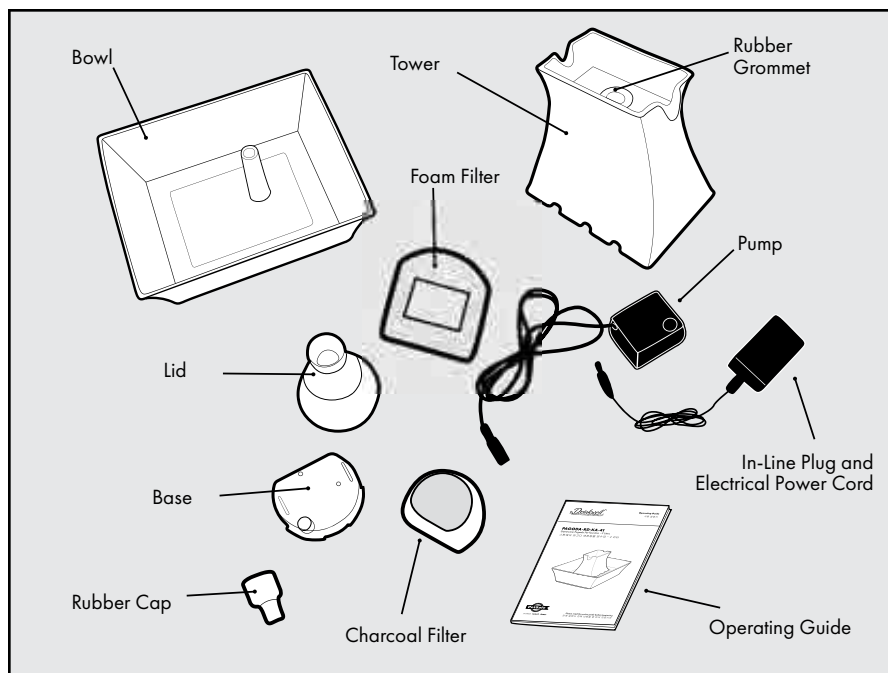

Features

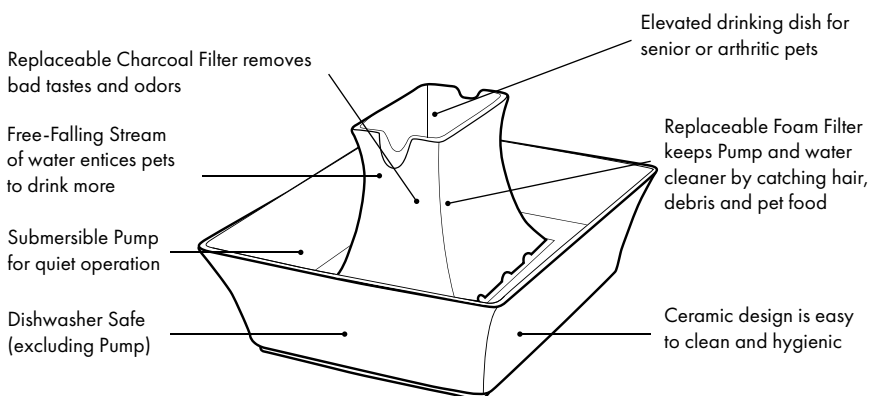

2 L Water Capacity

Low-Voltage (12V) System

The Pet Fountain shown in this Operating Guide is for the white Pet Fountain.

Key Definitions

Bowl: The Bowl is the foundation of the Pet Fountain. The base of the Bowl features a notch to hide the electrical power cord from view.

Tower: Water is pumped up through the Tower to cycle through the Charcoal Filter and out the spouts to create a waterfall into the Bowl. The Rubber Grommet in the top of the Tower forms a seal between the Filter Housing and the Tower.

Filter Housing: The Filter Housing consists of a Lid and Base and holds the Charcoal Filter.

Charcoal Filter: The Charcoal Filter is made with granulated carbon derived from coconut shells. The Charcoal Filter absorbs bad tastes and odours as the water passes through and helps keep the water tasting fresh and more appealing to pets.

Foam Filter: The Foam Filter collects hair, debris and pet food before they reach the Pump. It is important to use the Foam Filter as it helps maintain proper Pump function.






Pump: The small submersible aquarium Pump can be dismantled for cleaning. THE PUMP IS NOT DISHWASHER SAFE! Remove Pump from Pet Fountain before cleaning (See "Pump Maintenance" section for more detailed information). The Pump also features an In-Line Plug for easy attachment and removal.

Rubber Cap: This rubber seal secures the electrical power cord to the inside the Bowl and prevents leaking.

Operating Instructions


Important: DO NOT RUN DRY - FOR INDOOR USE ONLY.

1. Carefully remove all the Pet Fountain components from the packaging and set aside prior to assembly.
2. As with any electrical device, check the electrical power cord for any tears or damage before use.
3. Place the Foam Filter around the Pump by inserting the Pump into the Foam Filter from the top, make sure the electrical power cord rests on top of the Foam Filter (**Fig. 1**).
4. Take the Bowl and place the Pump inside the square indentation. With the Bowl positioned so the raised post is at the top right corner of the square, make sure the Pump is positioned so that the Pump Outflow, the circular opening on the top of the Pump, is positioned in the bottom left corner of the square (**Fig. 2**).
5. Press down on the Pump to engage the suction cups. Once the Pump is securely in place, feed the In-Line Plug of the electrical power cord over and through the raised post and out the notch in the base of the Bowl (**Fig. 3**).
6. Remove the extra slack from the electrical power cord and insert the Rubber Cap into the raised post. Make sure the cord channel on the Rubber Cap is aligned with the electrical power cord, then insert your finger into the Rubber Cap and push all the way down (**Fig. 4**).
7. Fold the top of the Rubber Cap over the raised post to seal off the Bowl (**Fig. 5**).

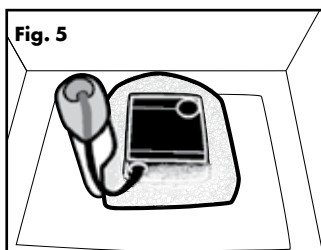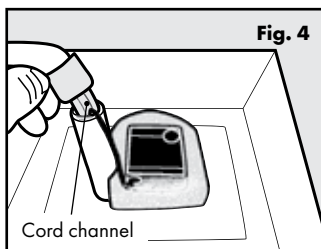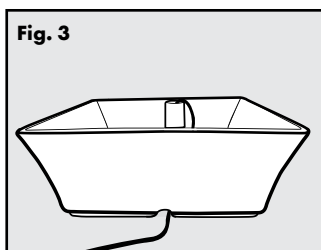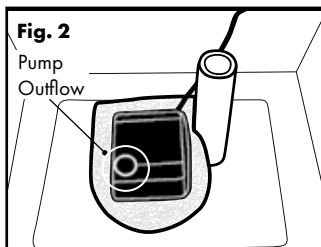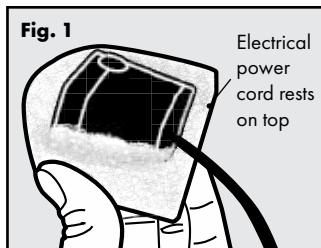


Important: Rinse the Charcoal Filter thoroughly under cool water before placing into the Filter Housing. This will remove any loose charcoal dust, which is harmless. A small amount of charcoal dust may be released for the life of the Charcoal Filter. This is normal and is not harmful to your pet.

8. Once the Charcoal Filter is rinsed off, place inside the Base of the Filter Housing with the larger side facing down (**Fig. 6**). The Charcoal Filter will only fit inside the Filter Housing Base one way. If it does not fit, flip it over.

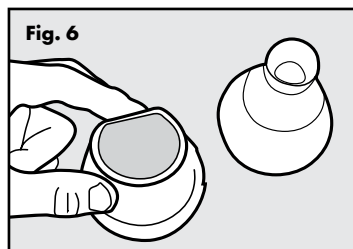


9. Attach the Lid to the Filter Housing, press down until you hear it snap in place.
10. Attach the Filter Housing to the Pump by inserting the round notch into the circular opening on top of the Pump (**Fig. 7**). The opening on top of the Filter Housing should be right next to the sealed raised post (**Fig. 8**).

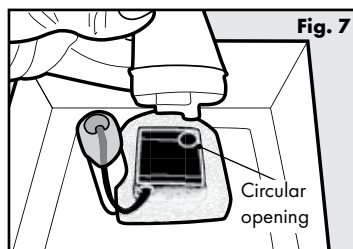

11. Fill the Pet Fountain by pouring water directly into the Bowl. Leave at least 1.27 cm of space between the water level and the rim of the Bowl to help control spills and splashing.

12. Align the Tower with the rectangular indentation inside the Bowl and carefully lower it until it rests flat. The Rubber Grommet will create a seal between the Filter Housing and the Tower.

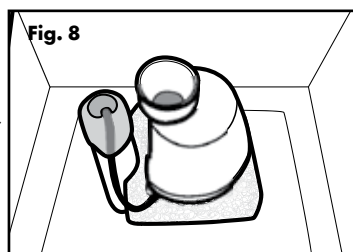

13. Place the Pet Fountain in desired location. Do not pick up a full Pet Fountain by the Tower piece. To properly pick up the Pet Fountain, use both hands and grip the sidewalls of the Bowl and lift. **Important:** To protect your floor always use a protective mat, such as a towel or water-resistant placemat. This will help protect your floor from splashing or spills caused by your pet.

14. Before you plug in the Pet Fountain, make sure the electrical power cord, the adaptor and your hands are completely dry. Connect the In-Line Plug and make sure no silver is showing, then plug the adaptor into a standard electrical wall outlet.

15. Add water to the Bowl as needed. Do not let the water level fall below 2.54 cm from the base of the Bowl or you may risk Pump failure. Replacement Pumps are sold separately by contacting the Customer Care Centre at asiacc@petsafe.net.

Pet Fountain Disassembly and Cleaning

FILTER SYSTEM

The Pet Fountain is equipped with two types of filters that should be replaced on a regular basis. The Charcoal Filter removes bad tastes and odours, keeping water fresh. The Foam Filter collects hair, debris and pet food and prevents them from reaching the Pump, providing optimal filtration. The filters together will keep the Pump cleaner and provide fresher water to your pet.



CHARCOAL FILTER: Filters should be changed every two to four weeks. Replace filters more frequently when using the Pet Fountain for multiple pets or pets that produce a lot of saliva. **Important:** Always rinse the Charcoal Filter with water prior to use. A small amount of charcoal dust may be released for the life of the filter, this is normal and is not harmful to your pet.



FOAM FILTER: Replace the Foam Filter every one to two months, depending on the location of the Pet Fountain and the number of pets using it. If you do not intend to replace the filter at the time of cleaning, rinse the Foam Filter thoroughly with fresh water.



Filters are an added feature of the Pet Fountain. Using the filters is not required for normal operation. However, when used properly and changed regularly, the filters help keep the water cleaner and fresher, while extending the life of your Pet Fountain. Filters may be rinsed out when the Pet Fountain is cleaned. **Important:** Never wash the filters with soapy water, as the soap residue will seep into the filters and cannot be removed. Only rinse the filters with water.

PET FOUNTAIN


Important: Clean Pet Fountain once a week.

The Pet Fountain must be cleaned on a regular basis to continue working normally.


1. Unplug the Pet Fountain and disconnect the In-Line Plug from the Pump (**Fig. 9**).
2. Carefully lift the Tower and allow the water to slowly pour back into the Bowl. Once all the water has been emptied into the Bowl, set the Tower aside for cleaning (**Fig. 10**).
3. Take the Tower and turn upside down to remove the Rubber Grommet. Grab the Rubber Grommet from inside and pull straight down, set aside for cleaning.

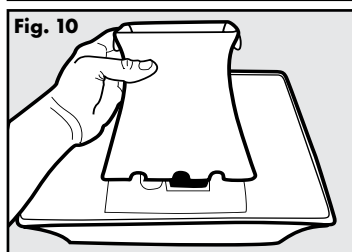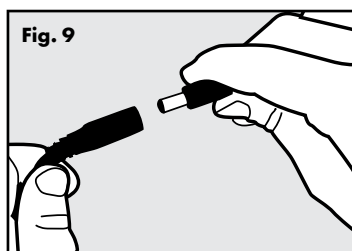

4. Remove the Filter Housing from the Pump by lifting straight up (**Fig. 11**).
5. Open the Filter Housing and remove the Charcoal Filter from inside. Set the Filter Housing aside for cleaning.
6. Remove the Rubber Cap affixed to the raised post by inserting a finger under the lip and pull straight up to remove (**Fig. 12**).

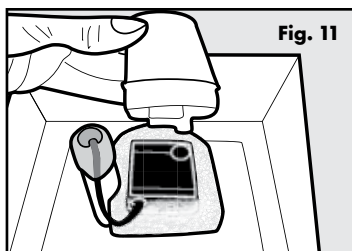


7. While securely holding the electrical power cord and the bottom of the Bowl with both hands, pour out the remaining water inside the Bowl into a sink.
8. With the In-Line Plug disconnected and water removed, grab the Pump and lift straight up to disengage the suction cups. Continue pulling the Pump's electrical power cord up and out through the raised post in the centre of the Bowl. Once the Pump is completely removed from the Bowl, separate the Foam Filter and set aside for proper cleaning.
9. Once the Pet Fountain is completely disassembled, you will have: the Bowl and Tower, two rubber pieces, the Filter Housing, a Charcoal Filter, Foam Filter and the Pump.

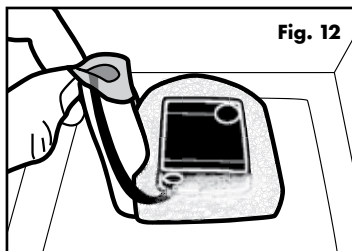




10. Rinse the filters with water only, or replace them.
11. See the Pump Maintenance section of this Operating Guide for detailed instructions on how to properly clean your Pump. **DO NOT PLACE PUMP IN DISHWASHER!**
12. Hand wash all other Pet Fountain parts with warm water and soap. You can also put the Pet Fountain in the top rack of the dishwasher. If possible, it is recommended that you turn down the heat of the water inside the dishwasher.
13. If you have trouble reaching certain spots or hard-to-reach corners, try using a cotton swab or purchase the Drinkwell® Cleaning Kit, a 3-Piece Brush kit. To purchase a Cleaning Kit, visit our website at www.petsafe.net to locate a retailer near you or contact the Customer Care Centre at asiacc@petsafe.net.

Pump Maintenance


Important: Cleaning the Pump is essential to the longevity of the Pet Fountain as well as the cleanliness of the water. Clean the Pump at least every two weeks. Warranty may be voided if the Pump is not cleaned regularly.

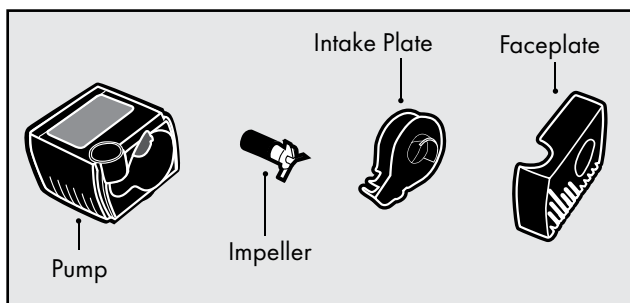

1. Remove the Pump from the Pet Fountain as explained in the "Pet Fountain Disassembly and Cleaning" section.
2. Remove the Faceplate by using your thumb and forefinger to gently squeeze on both sides of the Faceplate and pull off. It may be necessary to insert a fingernail into the seam of the Faceplate to pry it off (**Fig. 13**).
3. Next, remove the Intake Plate by placing your fingernail underneath the small lip located on the narrow side of teardrop-shaped Intake Plate (**Fig. 14**) and pull out to remove.
4. Once the Intake Plate is removed, remove the Impeller (white, 3-bladed propeller). The Impeller is held in place by a magnet, simply insert a fingernail underneath a plastic blade and lift out (**Fig. 15**).

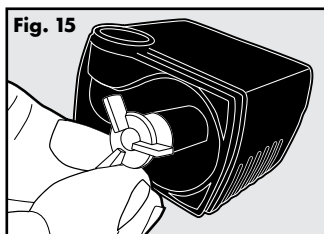
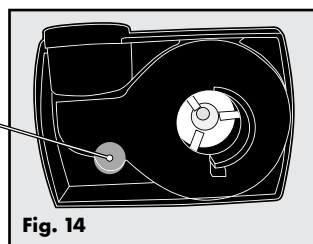
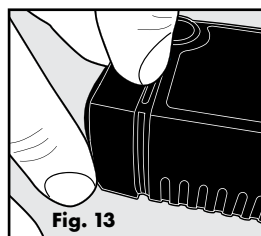


5. Once the Pump is completely disassembled, you can clean the parts with warm water and soap. Use a cotton swab or the “motor brush” from the Drinkwell® Cleaning Kit to clean inside the Pump’s motor cavity and remove any build-up (**Fig. 16**). For added disinfecting and hard water removal, clean the Pump’s motor with a diluted white vinegar solution (20% white vinegar and 80% water). **Important:** Be sure to rinse thoroughly with fresh water.
6. Once the parts are clean and well rinsed, you can reassemble the Pump for use.
 - a) Replace the Impeller.
 - b) Replace the Intake Plate.
 - c) Replace the Faceplate.





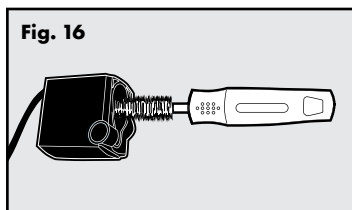


Pet Fountain Reassembly

1. Place the Foam Filter around the Pump (**Fig. 17**). Take the Bowl and place Pump inside the square indentation. With the Bowl positioned so the raised post is at the top right corner of the square, make sure the Pump is positioned so that the Pump Outflow is positioned in the bottom left corner of the square (**Fig. 18**).
2. Press down on the Pump to engage the suction cups. Once the Pump is securely in place, feed the In-Line Plug of the electrical power cord over and through the raised post and out the notch in the base of the Bowl (**Fig. 19**).

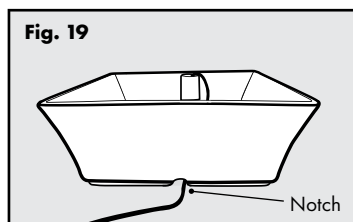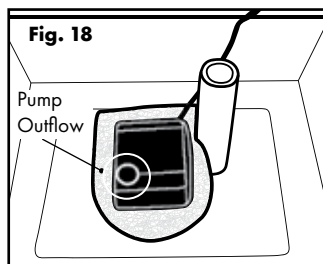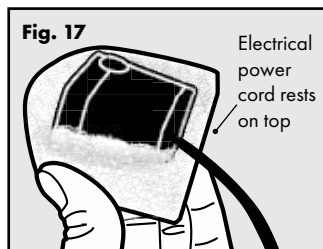

3. Remove the extra slack from the electrical power cord and insert the Rubber Cap into the raised post. Make sure the cord channel on the Rubber Cap is aligned with the electrical power cord, then insert your finger into the Rubber Cap and push all the way down (**Fig. 20**).
4. Fold the top of the Rubber Cap over the raised post to seal off the Bowl (**Fig. 21**).
5. Rinse a new Charcoal Filter thoroughly in cold water to help remove any excess and loose charcoal dust.
6. Once the Charcoal Filter is rinsed off, place inside the Base of the Filter Housing with the larger side facing down. The Charcoal Filter will only fit inside the Filter Housing Base one way, if it does not fit, flip it over. Attach the Lid to the Filter Housing, press down until you hear it snap in place.
7. Attach the Filter Housing to the Pump by inserting the raised round notch inside the circular opening on top of the Pump (**Fig. 22**). The opening on top of the Filter Housing should be right next to the sealed raised post.
8. Reinsert the Rubber Grommet into the hole at the top of the Tower. Gently work the Rubber Grommet into the hole so that the top edge rests flat inside the dish (**Fig. 23**).
9. Align the Tower with the rectangular indentation inside the Bowl and carefully lower it until it rests flat (**Fig. 24**). The Rubber Grommet will create a seal between the Filter Housing and the Tower.
10. Place the Pet Fountain in desired location. Do not pick up a full Pet Fountain by the Tower piece. To properly pick up the Pet Fountain, use both hands and grip the sidewalls of the Bowl and lift. **Important:** To protect your floor always use a protective mat, such as a towel or water-resistant placemat. This will help protect your floor from splashing or spills caused by your pet.
11. Fill the Pet Fountain by pouring water directly into the Bowl. Leave at least a 1.27 cm of space between the water level and the rim of the Bowl to help control spills and splashing.

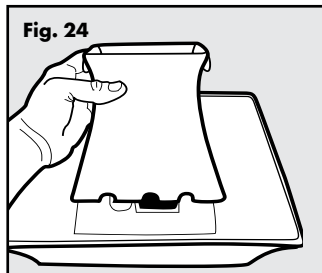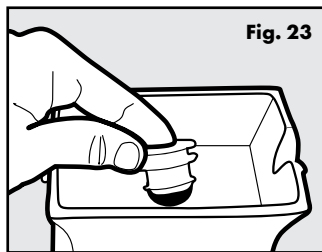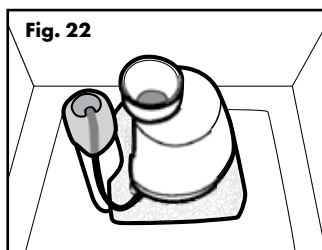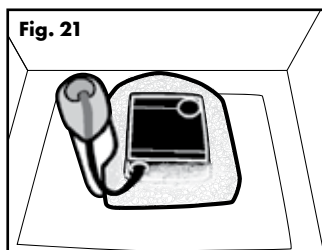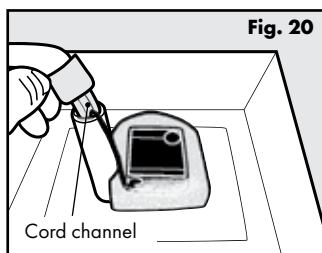

12. Before you plug in the Pet Fountain, make sure the electrical power cord, the adaptor and your hands are completely dry. Connect the In-Line Plug and make sure no silver is showing, then plug the adaptor into a standard electrical wall outlet.
-

The Pet Fountain and Your Environment

If you live in a humid environment and have problems with mold or algae, soak all fountain parts in a diluted vinegar solution (20% White Vinegar and 80% Water) for 10 minutes after regular cleaning. Also, pour the diluted vinegar solution into the Pump's motor cavity.

If you have hard water, small white mineral deposits may form on or inside the Pump. This can eventually prevent the Impeller from turning properly. To avoid replacement or damage to the Pump, please take the following precautions:

1. Clean the Pump more frequently.
 2. Clean the Pump with a diluted vinegar solution weekly.
 3. Use bottled water instead of tap water.
-

General Tips

- When being introduced to the Pet Fountain, your pet may be cautious of this new and unusual object. After beginning operation of your Pet Fountain, simply allow your pet to adjust at his or her own pace. Some pets may take several days or longer to begin use, while others will start using the Pet Fountain very quickly.
- Your pet may prefer that the Pet Fountain be placed away from their normal feeding area.
- Add ice cubes to the bowl for refreshing, ice-cold running water.

Warranty and Customer Care

This product has the benefit of a 1 (one) year limited manufacturer's warranty. This warranty does not cover damage from accidents, misuse or abuse. It also specifically excludes incidental or consequential damages as allowed by law. Loss of function as a result of lack of cleaning, debris or mineralization from "hard water" does not qualify under this warranty (Refer to cleaning instructions and environmental notes).

Details of the warranty applicable to this product and its terms can be found at www.petsafe.net and/or are available by sending an email to: asiacc@petsafe.net.

Please contact your local Customer Care Centre with any set-up or technical difficulties you experience, and if necessary to assist in the replacement of your product. For a listing of Customer Care Centres in your area, visit our website at www.petsafe.net.

Compliance



This equipment complies with the EMC and Low Voltage Directives. Unauthorized changes or modifications to the product that are not approved by Radio Systems Corporation may violate EU regulations, could void the user's authority to operate the equipment, and will void the warranty.

The Declaration of Conformity can be found at:
http://www.petsafe.net/customer care/eu_docs.php.

Important Recycling Advice



Please respect the Waste Electrical and Electronic Equipment regulations in your country. This equipment must be recycled. If you no longer require this equipment, do not place it in the normal municipal waste system. Please return it to where it was purchased in order that it can be placed in our recycling system. If this is not possible, please contact the Customer Care Centre for further information.

Terms of Use and Limitation of Liability

1. **Terms of Use**

Use of this Product is subject to your acceptance without modification of the terms, conditions, and notices contained herein. Use of this Product implies acceptance of all such terms, conditions, and notices. If you do not wish to accept these terms, conditions, and notices, do not use this Product.

2. **Proper Use**

If you are unsure whether this is appropriate for your pet, please consult your veterinarian or certified trainer, contact our Customer Care Center, or visit our Web Site at www.petsafe.net. Proper use includes reviewing the entire Operating Guide provided with your product and any specific caution statements.

3. **No Unlawful or Prohibited Use**

This product is designed for use with pets only. This device is not intended to harm, injure, or provoke. Using this Product in a way that is not intended could result in violation of Federal, State, or local laws.

4. **Limitation of Liability**

In no event shall Radio Systems Corporation or any of its associated companies be liable for (i) any indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the misuse of this Product. The Purchaser assumes all risks and liability from the use of this Product to the fullest extent permissible by law.

5. **Modification of Terms and Conditions**

Radio Systems Corporation reserves the right to change the terms, conditions, and notices under which this product is offered.

* Registered in The U.S. Patent and Trademark Office

중요 안전 정보

본 설명서에서 사용하는 주의 용어 및 기호 설명

⚠ 경고

경고는 피하지 않을 경우 사망 또는 심각한 상해로 이어질 수 있는 위험한 상황을 나타냅니다.

⚠ 주의

주의는 안전 경보 기호 없이 사용되는 경우 피하지 않으면 애완동물에 해를 입힐 수 있는 위험한 상황을 나타냅니다.

안내

안내는 신체 상해와 관련되지 않은 안전 사용 방식을 다루는데 사용됩니다.

⚠ 경고

전기 기구 사용 시 화재, 감전 및/또는 신체 상해의 위험을 줄이기 위해 다음 사항을 비롯한 기본 안전 수칙을 항상 따라야 합니다:

- 기구를 어린이 옆에서 또는 주변에서 사용하는 경우 부상 위험을 줄이기 위해 철저히 지켜야 합니다.
- 감전 방지를 위해 전기 코드나 플러그를 물이나 기타 액체 안에 넣지 마십시오.
- 제조업체가 권장하거나 판매하는 부속 장치만 사용하십시오.
- 옥외에서 사용하지 마십시오. 가정 실내 전용.
- 플러그를 뽑을 때 전기 코드를 잡아당기지 마십시오. 플러그를 뽑을 때 전기 코드가 아니라 플러그를 잡으십시오.
- 기구의 전기 코드나 플러그가 손상되거나 기구가 고장나거나 손상된 경우 기구를 작동하지 마십시오. 즉시 고객 지원 센터에 연락하여 자세한 지침을 받으십시오.
- 휴대용 기구의 경우 - 감전 위험을 줄이기 위해 떨어지거나 욕조나 싱크에 끌려들어갈 수 있는 곳에 기구를 놓거나 보관하지 마십시오.
- 사용하지 않을 때, 부품을 탈착하기 전에 그리고 청소하기 전에는 항상 기구의 전원 플러그를 빼십시오. 절대로 전기 코드를 당겨서 플러그를 벽 콘센트로부터 빼내지 마십시오.
- 원래 용도 이외의 용도로 기구를 사용하지 마십시오.
- 본 기구의 플러그가 젖은 경우, 그 벽 콘센트에 공급되는 전기를 끄십시오. 플러그를 빼려고 하지 마십시오.
- 본 기구를 설치한 후에 검사하십시오. 전기 코드나 플러그에 물이 있으면 플러그를 꽂지 말아야 합니다.

⚠ 주의

- 애완동물이 부품을 씹거나 삼키지 못하게 하십시오. 전기 코드에 대해 염려가 될 경우 전기상에서 전기 코드 보호용 전선관(단단한 플라스틱 보호관)을 구입하십시오.
- 플라스틱 애완동물 분수대 부품에는 BPA가 없습니다. 그러나 어떤 동물들은 플라스틱 식기 및 물 그릇에 민감한 것으로 알려져 있습니다. 애완동물이 플라스틱에 대해 알레르기 반응의 징후를 보이는 경우 수의사와 상의하기 전까지는 기구 사용을 중단하십시오.

안내

- 애완동물 분수대는 수위가 유지되고 애완동물 분수대를 정기적으로 청소하는 한 계속 작동하도록 설계되었습니다 (항상 플러그를 전원에 꽂아둡니다). 물이 다 소비되거나 증발되어 펌프가 물 없는 상태에서 작동될 수 있으므로 애완동물 분수대를 정기적으로 점검하여 펌프에 손상이 발생하지 않도록 해야 합니다. 물을 적절한 수위까지 채우지 않은 상태에서는 절대로 애완동물 분수대를 전원에 연결하지 마십시오.
- 펌프 모터를 직접 수리하려고 시도하지 마십시오.
- 플러그나 벽 콘센트가 젖을 가능성을 피하기 위해 벽 콘센트는 항상 애완동물 분수대보다 더 높은 위치에 있어야 합니다.
- 연장 코드가 필요한 경우 적절한 등급의 연장 코드를 사용해야 합니다.
- 본 기구의 전기 사용량은 2.5 와트입니다.
- 원래 용도 이외의 용도로 기구를 사용하지 마십시오. 제조업체가 권장하거나 판매하지 않는 부속 장치를 사용할 경우 위험한 상태가 초래될 수 있습니다. 기구를 개조하지 마십시오.
- 외부 기후나 4.5°C 이하의 온도에 노출되는 곳에 기구를 설치하거나 보관하지 마십시오.
- 기구와 포장에 표시된 모든 중요 고지사항을 읽고 준수하십시오.

이 설명서를 보관하십시오


PetSafe* 브랜드를 선택해 주셔서 감사합니다. 귀하와 귀하의 애완동물은 기억할만한 순간들과 상호 이해를 포함하는 우정을 누릴 자격이 있습니다. 저희 제품과 훈련 도구들은 애완동물과 주인 간의 관계를 향상시킵니다. **제품 또는 애완동물 훈련에 대해 문의사항이 있을 경우 당사 웹사이트 www.petsafe.net을 방문하거나 고객 관리 센터 +86 (0) 755 2671 5353으로 문의하십시오.**

보증에서 제공하는 최대의 보호를 받으려면 30일 내에 www.petsafe.net에서 제품을 등록하십시오. 등록하고 영수증을 보관함으로써 제품이 보장하는 최대 보증을 누리고, 고객 관리 센터에 문의가 필요할 경우 더 빨리 도움을 받으실 수 있습니다. 귀하의 소중한 개인 정보는 절대 누구에게도 전달되거나 판매되지 않습니다. 전체 보증 정보는 www.petsafe.net에서 온라인으로 확인할 수 있습니다.

목차

구성품	20
특징	20
중요기능	21
작동 설명	22
애완동물 분수대 분해 및 청소	24
펌프 유지보수	26
애완동물 분수대 조립	27
애완동물 분수대와 환경	29
유용한 정보	29
품질보증 및 고객 서비스	30
준수	30
중요한 재활용 정보	30
사용 조건과 배상 책임의 한계	31

구성품

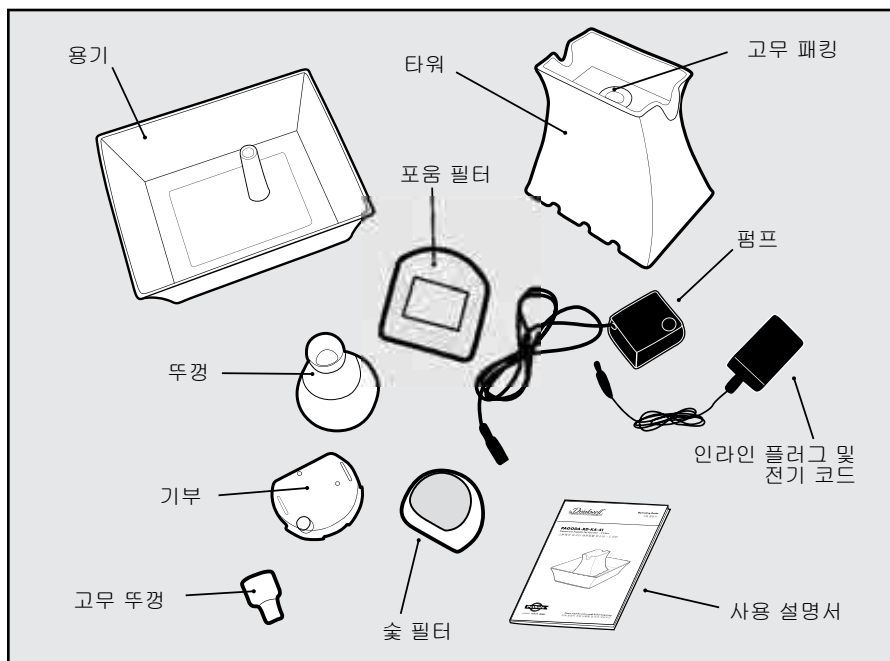

특징

교체 가능한 숯 필터는 나쁜 맛과 악취를 제거합니다

자유 낙하 물 흐름은 애완동물들이 물을 더 많이 마시도록 유도합니다
조용히 작동되는 수중 펌프

식기세척기로 세척 가능 (펌프 제외)

2L 물 용량
저전압(12V) 시스템

나이가 많거나 관절염이 있는 애완동물을 위한 높은 물 접시

교체 가능 폼 필터는 털, 오물 및 애완동물 사료를 걸러내므로 펌프와 물을 깨끗하게 유지합니다.

도자기로 만들어 닦기가 쉽고 위생적입니다

본 사용 설명서에 제시된 애완동물 분수대는 백색 애완동물 분수대를 위한 것입니다.

중요기능

용기: 용기는 애완동물 분수대의 토대입니다. 용기의 바닥에는 전기 코드를 보이지 않게 하는 홈이 있습니다.

타워: 물은 타워를 통하여 위로 올라가도록 펌프되어 슛 필터를 순환한 후에 주둥이로 흘러나와 용기에 떨어집니다. 타워의 상단에 있는 고무 패킹은 필터 하우징과 타워 간에 밀폐가 이루어지게 합니다.

필터 하우징: 필터 하우징은 뚜껑과 기부로 구성되며 슛 필터가 설치됩니다.

스� 필터: 슛 필터는 코코넛 껍질에서 비롯된 입상 탄소로 만듭니다. 슛 필터는 물이 통과할 때 나쁜 맛과 악취를 흡수하며 물의 맛이 신선하고 애완동물이 더 좋아하도록 하는데 도움이 됩니다.

포움 필터: 포움 필터는 털, 오물 및 애완동물 사료를 걸러서 펌프로 가지 않게 합니다. 포움 필터는 펌프의 정상적 작동을 유지하는데 도움이 되므로 반드시 사용해야 합니다.





펌프: 소형 잠수형 어항 펌프로서 청소를 위해 분해할 수 있습니다. 이 펌프는 식기세척기에서 세척하면 손상될 수 있습니다! 청소 전에 애완동물 분수대에서 펌프를 빼내십시오 (자세한 내용은 "펌프 유지보수" 항 참조). 또한 펌프에는 부착 및 분리가 용이하도록 인라인 플러그가 갖추어져 있습니다.

고무 뚜껑: 이 고무 시일은 전기 코드를 용기 내에 고정하여 누출을 방지합니다.

작동 설명


중요: 건조 상태에서 작동하지 마십시오 - 실내 전용.

1. 모든 애완동물 분수대 부품들을 포장에서 조심스럽게 꺼내어 조립을 위해 옆에 정돈해두십시오.
2. 모든 전기 기구와 마찬가지로 사용 전에 전기 코드가 갈라지거나 손상되지 않았는지 점검하십시오.
3. 펌프를 위로부터 포움 필터에 삽입하여 포움 필터가 펌프를 둘러싸게 하고 전기 코드가 포움 필터의 위에 얹혀지게 해야 합니다 (그림 1).
4. 펌프를 용기 안의 움푹 들어간 사각형 자리에 놓으십시오. 올라간 기둥이 정사각형의 상단 오른쪽 모서리에 있도록 보울을 위치시킨 채로, 펌프 상단의 원형 개구인 펌프 출구가 정사각형의 하단 왼쪽 모서리에 놓이도록 펌프를 배치해야 합니다 (그림 2).
5. 펌프를 내리눌러 흡입 컵들이 맞물리게 하십시오. 일단 펌프가 제자리에 고정되면 전기 코드의 인라인 플러그를 돌기된 기둥 위로 집어넣어 통과하게 하여 용기의 바닥에 있는 홈으로 빼냅니다 (그림 3).
6. 전기 코드를 당겨서 너무 느슨하지 않게 하고 돌기된 기둥 안에 고무 뚜껑을 삽입하십시오. 고무 뚜껑 상의 코드 통로가 전기 코드와 정렬이 되게 한 다음 손가락을 고무 뚜껑 안으로 집어넣어 아래로 끝까지 내리누르십시오 (그림 4).
7. 고무 뚜껑의 윗부분을 접어서 돌기된 기둥을 덮게 하여 보울을 밀봉하십시오 (그림 5).

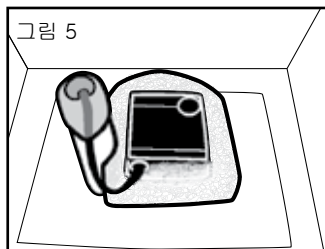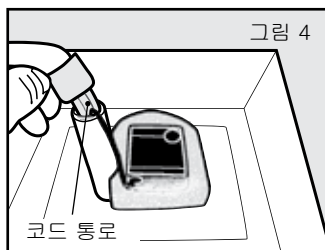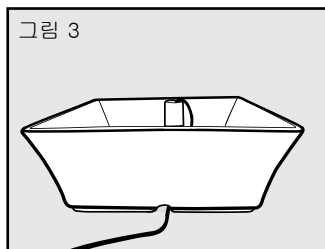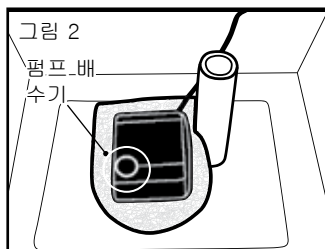


중요: 숯 필터를 필터 하우스에 설치하기 전에 찬 물로 완전히 헹구십시오. 그러면 해롭지는 않지만 곁에 묻은 숯 먼지가 제거됩니다. 숯 필터를 사용하는 동안 소량의 숯 먼지가 서서히 떨어져나올 수 있습니다. 이것은 정상이며 애완동물에 해가 되지 않습니다.

8. 숯 필터를 행군 다음 큰 쪽이 아래를 향하게 하여 필터 하우스의 바닥 안에 설치 합니다 (그림 6). 숯 필터는 한쪽으로만 필터 하우스 기부 안에 맞습니다. 맞지 않으면 거꾸로 돌리십시오.

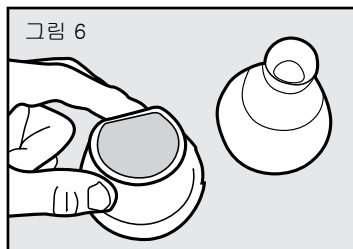


9. 뚜껑을 필터 하우스에 부착하고 제자리에 찰칵 맞아들어갈 때까지 내리 누르십시오.

10. 둥근 돌기 부분을 펌프 윗면의 둥근 구멍에 삽입하여 필터 하우스를 펌프에 부착하십시오 (그림 7). 필터 하우스 상단의 구멍이 밀봉된 돌기 기둥 바로 옆에 있어야 합니다 (그림 8).

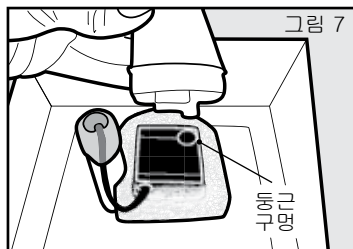

11. 물을 용기에 직접 부어서 애완동물 분수대를 채우십시오. 물이 넘치거나 튀는 것을 방지하기 위해 수위와 용기의 테두리 사이에 최소한 1.27 cm의 공간이 형성되게 하십시오.

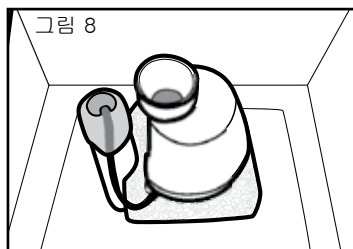

12. 타워는 보울 안쪽에 직사각형 모양의 오목한 부위에 맞춰 평평하게 놓이도록 주의하여 내려 놓습니다. 고무 패킹은 필터 하우스와 타워 간에 밀폐가 이루어지게 합니다.

13. 애완동물 분수대를 원하는 위치에 놓으십시오. 전체 애완동물 분수대를 타워를 잡아서 들어올리지 마십시오. 애완동물 분수대를 올바르게 들어올리기 위해 두 손을 사용해서 분수대 용기의 측벽을 잡아서 올리십시오. 중요: 바닥을 보호하기 위해 항상 타월이나 방수성 매트와 같은 보호 매트를 사용하십시오. 그러면 애완동물이 물을 튀기거나 흘려도 바닥이 보호됩니다.

14. 애완동물 분수대의 전기 플러그를 꽂기 전에 전기 코드, 어댑터 및 손이 찌지 않았는지 확인하십시오. 인라인 플러그를 연결하고 은 부분이 보이지 않게 되었는지 확인한 다음 어댑터를 일반 벽 콘센트에 꽂으십시오.

15. 필요한 만큼 물을 용기에 추가하십시오. 수위가 용기의 바닥으로부터 2.54 cm 미만으로 떨어지지 않게 해야 하며, 그렇지 않으면 펌프가 고장날 위험이 있습니다. 교체용 펌프는 asiacc@petsafe.net의 고객 지원 센터로 연락하여 별도로 구입하실 수 있습니다.

애완동물 분수대 분해 및 청소

필터 시스템

애완동물 분수대에는 정기적으로 교체해야 하는 두 종류의 필터가 구비되어 있습니다. 숯 필터는 나쁜 맛과 악취를 제거하여 물을 신선하게 유지합니다. 포움 필터는 털, 오물 및 애완동물 사료를 걸러서 펌프로 가지 않게 하는 적합한 여과 기능을 제공합니다. 이 필터들은 함께 펌프를 깨끗하게 유지하고 애완동물에게 더욱 신선한 물을 제공하는 역할을 합니다.



숯 필터: 필터들은 2-4 주마다 교체해야 합니다. 애완동물 분수대를 여러 애완동물이 사용하거나 침을 많이 분비하는 애완동물들이 사용하는 경우 필터를 더 자주 교체하십시오. **중요:** 숯 필터는 항상 물로 행군 후 사용합니다. 필터를 사용하는 동안 소량의 숯 먼지가 서서히 떨어져나올 수 있는데, 이것은 정상이며 애완동물에 해가 되지 않습니다.



포움 필터: 애완동물 분수대의 위치와 그것을 사용하는 애완동물의 수에 따라 포움 필터는 1-2 개월마다 교체해야 합니다. 청소할 때 필터를 교체하지 않는 경우에는 포움 필터를 깨끗한 물로 철저히 행구어야 합니다.

필터는 애완동물 분수대의 추가 기능입니다. 정상적인 작동을 위해 필터 사용이 요구되지는 않습니다. 그러나 필터는 올바르게 사용하고 정기적으로 교체할 경우 물을 더욱 깨끗하고 신선하게 유지하며 애완동물 분수대의 수명을 연장하는데 도움이 됩니다. 애완동물 분수대를 청소할 때 필터를 물에 행굴 수 있습니다. **중요:** 비누 잔류물은 필터에 스며들어 제거할 수 없게 될 수 있으므로 절대로 필터를 비눗물로 씻지 마십시오. 필터는 물로만 행구십시오.

애완동물 분수대

중요: 매주 한 번씩 애완동물 분수대를 청소하십시오.

애완동물 분수대는 정기적으로 청소를 해야 계속 정상적으로 작동합니다.

1. 애완동물 분수대의 전기 코드를 빼고 인라인 플러그를 펌프에서 분리하십시오 (그림 9).
2. 타워를 조심스럽게 들어올려 물이 서서히 용기 안으로 쏟아지게 하십시오. 물이 모두 용기 안에 쏟아지면 타워를 청소를 위해 옆에 놔두십시오 (그림 10).
3. 타워를 잡고 거꾸로 돌려서 고무 패키지를 제거하십시오. 안쪽으로부터 고무 패키지를 잡아서 곧바로 아래로 당겨서 빼어 청소를 위해 옆에 놔두십시오.

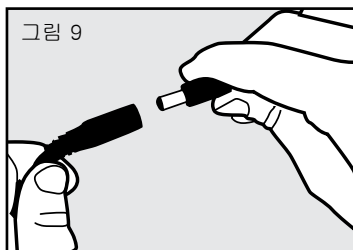


그림 9


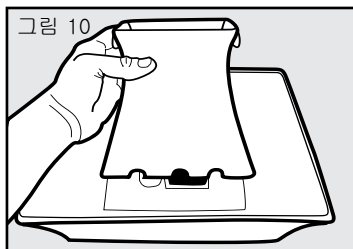



그림 10

4. 필터 하우징을 똑바로 들어올려서 펌프와 분리하십시오 (그림 11).

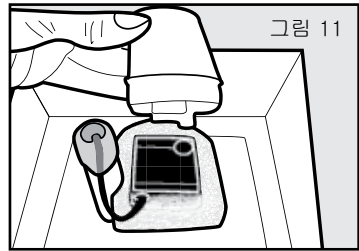

5. 필터 하우징을 열고 슛 필터를 안에서 꺼내십시오. 필터 하우징을 청소를 위해 옆에 놔두십시오.

6. 한 손가락을 고무 뚜껑 가장자리 아래로 집어넣고 위로 똑바로 당겨서 돌기 기둥에 설치된 고무 뚜껑을 빼내십시오 (그림 12).

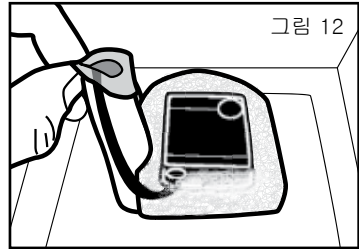

7. 두 손으로 전기 코드와 용기의 아랫 부분을 단단히 잡은 상태에서 용기 안에 남은 물을 싱크대에 쏟으십시오.

8. 인라인 플러그가 분리되고 물이 제거된 상태에서 펌프를 잡고 위로 들어올려서 흡입 컵들이 떨어지게 하십시오.

펌프의 전기 코드를 계속 위로 당겨서 용기의 중앙에 있는 돌기 기둥을 통해서 나오게 하십시오. 일단 펌프가 용기에서 완전히 제거되면 포움 필터를 분리하여 청소를 위해 옆에 놔두십시오.

9. 완전히 분해된 애완동물 분수대는 다음과 같이 구성됩니다: 보울과 타워, 2개의 고무 부품, 필터 하우징, 슛 필터, 포움 필터 및 펌프.

10. 필터는 물로만 행구고, 그렇지 않으면 교체합니다.


11. 펌프를 올바르게 청소하는 방법에 대한 자세한 지침에 대해서는 본 사용 설명서의 펌프 유지 관리 섹션을 참조하십시오. 펌프는 식기세척기에 넣지 마십시오!

12. 다른 모든 펫 파운틴 부품은 따뜻한 물과 비누로 손세척합니다. 또한 애완동물 분수대를 식기세척기의 맨위 선반에 놓아도 됩니다. 가능하면 식기세척기 내의 수온을 낮추도록 권장합니다.




13. 어떤 부분이나 비좁은 귀퉁이에 손이 미치는데 어려움이 있는 경우, 면봉을 사용해보거나 Drinkwell® 청소 키트(브러시 3개 키트)를 구입하십시오. 청소 키트를 구입하시려면 저희 웹사이트 www.petsafe.net를 방문하여서 인근 소매상을 찾으시거나 asiacc@petsafe.net로 저희 고객 지원 센터에 문의하십시오.

펌프 유지보수


중요: 펌프 청소는 물의 청결뿐만 아니라 애완동물 분수대의 장기사용을 위해 필수적입니다. 펌프를 최소한 두주마다 청소하십시오. 펌프를 정기적으로 청소하지 않으면 품질보증이 무효화될 수 있습니다.

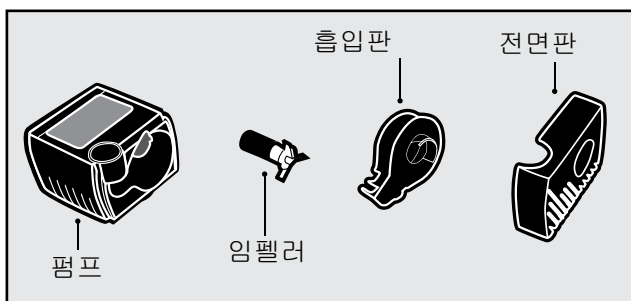

1. "애완동물 분수대 분해 및 청소" 항에 설명된 대로 애완동물 분수대에서 펌프를 빼내십시오.
2. 엄지손가락과 집게손가락을 사용하여 전면판의 양 옆을 가볍게 누른 채로 당겨서 전면판을 빼내십시오. 전면판의 틈새에 손가락을 집어넣고 벌려야 할 수도 있습니다 (그림 13).
3. 다음은 눈물 모양의 흡입판(그림 14)의 좁은 쪽에 위치한 작은 입술 부분 아래에 손가락을 넣고 끌어내어 흡입판을 제거하십시오.
4. 일단 흡입판이 제거되면, 임펠러를 제거하십시오(백색, 3익 프로펠러). 임펠러는 자석에 의해 제자리에 고정되어 있으며 손톱을 플라스틱 날 아래에 집어넣고 올려서 빼내면 됩니다 (그림 15).

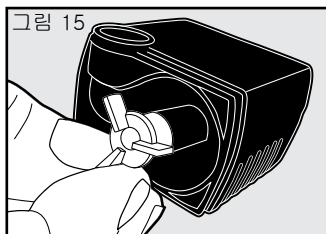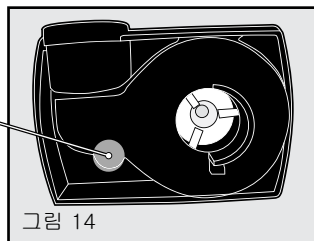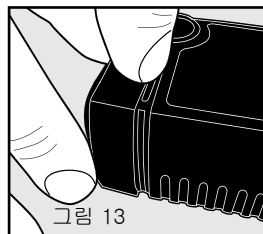



5. 일단 펌프가 완전히 분해되면 부품들을 따뜻한 비눗물로 씻으시면 됩니다. 면봉이나 Drinkwell® 청소 키트의 "모터 브러시"를 사용하여 펌프의 모터 설치 공간 안을 닦고 침적물을 제거합니다 (그림 16). 추가로 소독하고 경수 물때를 제거하려면 희석한 백식초 용액(백식초 20% 및 물 80%)으로 펌프의 모터를 닦으십시오. 중요: 맹물로 철저히 행구어야 합니다.

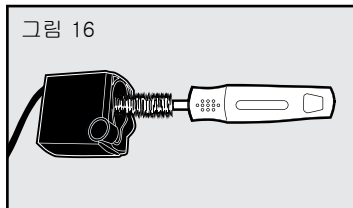





6. 부품들이 깨끗해지고 잘 행구어졌으면, 사용을 위해 펌프를 다시 조립할 수 있습니다.
- 임펠러를 설치합니다.
 - 흡입판을 다시 설치하십시오.
 - 전면판을 설치합니다.

애완동물 분수대 조립

1. 포움 필터가 펌프를 둘러싸게 하십시오 (그림 17). 펌프를 용기 안의 움푹 들어간 사각형 자리에 놓으십시오. 올라간 기둥이 정사각형의 상단 오른쪽 모서리에 있도록 보울을 위치시킨 채로, 펌프 출구가 정사각형의 하단 왼쪽 모서리에 놓이도록 펌프를 배치해야 합니다 (그림 18).
2. 펌프를 내리눌러 흡입 컵들이 맞물리게 하십시오. 일단 펌프가 제자리에 고정되면 전기 코드의 인라인 플러그를 돌기된 기둥 위로 집어넣어 통과하게 하여 용기의 바닥에 있는 홈으로 빼냅니다 (그림 19).

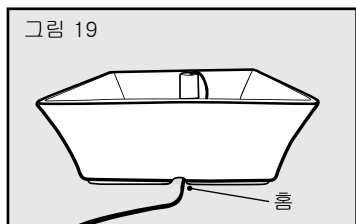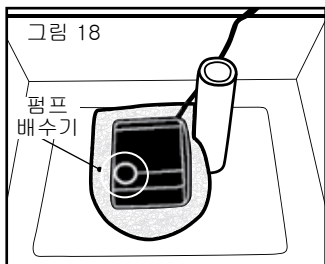

3. 전기 코드를 당겨서 너무 느슨하지 않게 하고 돌기된 기둥 안에 고무 뚜껑을 삽입하십시오. 고무 뚜껑 상의 코드 통로가 전기 코드와 정렬이 되게 한 다음 손가락을 고무 뚜껑 안으로 집어넣어 아래로 끝까지 내리누르십시오 (그림 20).
4. 고무 뚜껑의 윗부분을 접어서 돌기된 기둥을 덮게 하여 보울을 밀봉하십시오 (그림 21).
5. 새 숯 필터를 찬 물에 철저하게 헹구어서 겉에 묻은 숯 먼지가 제거되게 하십시오.
6. 숯 필터를 행군 다음 큰 쪽이 아래를 향하게 하여 필터 하우징의 바닥 안에 설치 합니다. 숯 필터는 한쪽으로만 필터 하우징 기둥 안에 맞으므로 맞지 않으면 거꾸로 돌리십시오. 뚜껑을 필터 하우징에 부착하고 제자리에 찰칵 맞아들어갈 때까지 내리 누르십시오.
7. 둥근 돌기 부분을 펌프 윗면의 둥근 구멍 안으로 삽입하여 필터 하우징을 펌프에 부착하십시오 (그림 22). 필터 하우징 상단의 구멍이 밀봉된 돌기 기둥 바로 옆에 있어야 합니다.
8. 고무 패킹을 타워 윗면의 구멍 안으로 다시 집어넣으십시오. 고무 패킹을 구멍 안으로 잘 조절해서 집어넣어 맨 위 가장자리가 접시 내부에 평평하게 자리잡게 하십시오 (그림 23).
9. 타워는 보울 안쪽에 직사각형 모양의 오목한 부위에 맞춰 평평하게 놓이도록 주의하여 내려 놓습니다 (그림 24). 고무 패킹은 필터 하우징과 타워 간에 밀폐가 이루어지게 합니다.
10. 애완동물 분수대를 원하는 위치에 놓으십시오. 전체 애완동물 분수대를 타워를 잡아서 들어올리지 마십시오. 애완동물 분수대를 올바르게 들어올리기 위해 두 손을 사용해서 분수대 용기의 측면을 잡아서 올리십시오. 중요: 바닥을 보호하기 위해 항상 타월이나 방수성 매트와 같은 보호 매트를 사용하십시오. 그러면 애완동물이 물을 튀기거나 흘려도 바닥이 보호됩니다.
11. 물을 용기에 직접 부어서 애완동물 분수대를 채우십시오. 물이 넘치거나 튀는 것을 방지하기 위해 수위와 용기의 테두리 사이에 최소한 1.27 cm의 공간이 형성되게 하십시오.

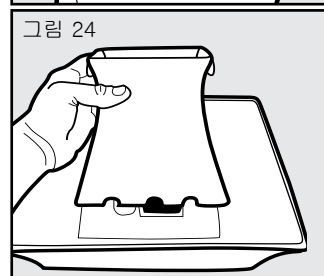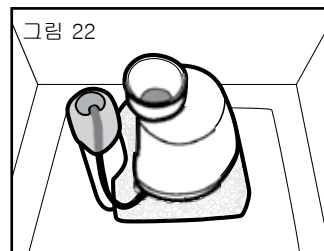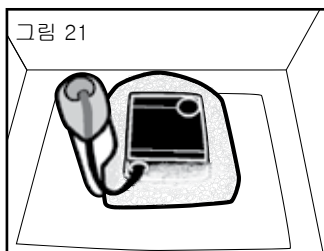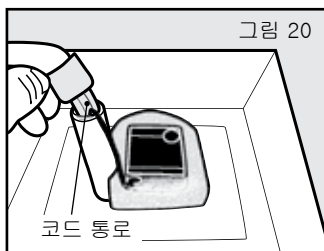

12. 애완동물 분수대의 전기 플러그를 꽂기 전에 전기 코드, 어댑터 및 손이 젖지 않았는지 확인하십시오. 인라인 플러그를 연결하고 은 부분이 보이지 않게 되었는지 확인한 다음 어댑터를 일반 벽 콘센트에 꽂으십시오.

애완동물 분수대와 환경

습한 환경에 거주하며 곰팡이나 조류 문제가 있는 경우, 정기적인 세척 후 모든 애완동물 분수대 부품들을 희석한 식초 용액(백식초 20% 및 물 80%)에 10분 정도 담그십시오. 또한 식초 희석액을 펌프의 모터 공간이 붓습니다.

사용하는 물이 "경수"인 경우 펌프 내외에 소량의 흰색 광물 침전물이 생길 수 있습니다. 이로 인해 결국에는 임펠러가 올바르게 회전되지 못할 수 있습니다. 펌프 교체 및 손상을 방지하려면 다음 예방책을 숙지하십시오.

1. 펌프를 더 자주 청소합니다.
2. 매주 희석한 식초 표백제로 펌프를 세척합니다.
3. 수돗물 대신에 병입수를 사용합니다.

유용한 정보

- 애완동물 분수대를 처음 접할 때 애완동물은 새롭고 전에 보지 못한 이 물체를 경계할 수 있습니다. 분수대를 사용하기 시작한 후에 애완동물이 스스로 자신의 페이스에 따라 적응하게 하십시오. 어떤 애완동물들은 며칠이 지난 후에야 사용하기 시작할 수도 있고, 어떤 애완동물들은 애완동물 분수대를 즉시 사용하기 시작할 수도 있습니다.
- 애완동물은 애완동물 분수대가 그들의 정상적인 식사 공간에서 멀리 떨어져 있기를 원할 수도 있습니다.
- 산뜻하고 차가운 물을 공급하기 위해서는 용기에 얼음을 넣으십시오.

품질보증 및 고객 서비스

본 제품은 제조업체로부터 1년 동안 제한적인 보증이 제공됩니다. 본 품질보증은 사고, 오용 및 남용으로 인한 손상을 보상하지 않습니다. 법적으로 허용되는 대로 부수적 또는 결과적 피해도 명시적으로 제외합니다. 청소 부실, 오물 또는 “경수”로 인한 광물질 침전의 결과로 발생하는 기능 상실은 본 보증의 대상이 되지 않습니다 (청소 지침 및 환경 유의사항을 참조하십시오).

본 제품의 보증 및 사용 약관에 대한 상세한 안내는 www.petsafe.net 에서 보시거나 다음 주소로 이메일을 보내어 제공받으실 수 있습니다:
asiacc@petsafe.net.

설치 및 기술적인 문제가 있거나 필요한 경우 제품 교환을 위한 도움을 받기 위해서는 해당 지역 고객 서비스 센터에 문의하십시오. 해당 지역의 고객 관리 센터 목록은 당사 웹사이트 www.petsafe.net 에 나와 있습니다.

준수



본 기기는 EMC 및 저전압 지침을 준수합니다. Radio Systems Corporation에서 승인하지 않은 본 제품에 대한 무단 변경이나 개조는 유럽연합 규정의 위반에 해당되고 기기 작동에 대한 사용자의 권한 및 보증을 무효화할 수 있습니다.

적합성 선언은 다음 사이트에서 보실 수 있습니다:

http://www.petsafe.net/customer care/eu_docs.php.

중요한 재활용 정보



해당 국가의 폐가전 제품 규정을 준수하십시오. 이 기기는 재활용해야 합니다. 이 기기가 더 이상 필요하지 않아 폐기할 경우 일반 생활 폐기물로 폐기해서는 안 됩니다. 당사의 재활용 시스템을 이용하려면 구입한 곳으로 반환해 주십시오. 반환이 어려운 경우에는 고객 관리 센터에 문의하여 자세한 정보를 얻으십시오.

사용 조건과 배상 책임의 한계

1. 사용 조건

본 제품을 사용함으로써 사용자는 본 설명서에 포함된 조건, 상태 및 정보를 수정 없이 그대로 수락합니다. 본 제품을 사용하는 것은 그러한 모든 조건, 상태 및 정보를 수락하는 것을 의미합니다. 이 조건, 상태 및 정보를 수락하지 않을 경우 본 제품을 사용하지 마십시오.

2. 적절한 사용

애완동물에 적합한지 판단할 수 없는 경우 수의사 또는 자격을 갖춘 트레이너에게 문의하거나 당사의 고객 관리 센터에 연락하거나 웹사이트 www.petsafe.net을 방문하십시오. 적절한 사용에는 제품과 함께 제공된 사용 설명서 및 특정 주의사항 안내문을 검토하는 것도 포함됩니다.

3. 불법 또는 금지된 사용 금지

본 제품은 애완동물 전용으로 제작되었습니다. 본 장치는 가해, 상해 또는 자극할 목적으로 제작되지 않았습니다. 의도와 달리 본 제품을 사용할 경우연방, 주 또는 지역 법률을 위반할 수 있습니다.

4. 배상 책임의 한계

어떤 경우에도 Radio Systems Corporation 또는 그 관련 회사는 본 제품의 오용으로 인하거나 오용과 관련된 (i) 어떠한 간접, 처벌적, 사고, 특수 또는 결과적 손상 및/또는 (ii) 어떠한 손실 또는 손상에도 책임을 지지 않습니다. 구입자는 법에서 허용하는 최대 한도로 본 제품 사용으로 인해 발생하는 모든 위험과 책임을 감수합니다.

5. 사용 조건 수정

Radio Systems Corporation은 언제든지 본 제품의 조건, 상태 및 정보를 변경할 권한을 보유합니다.

* 미국 특허청에 등록



protect. **teach.** **love.***

Radio Systems Corporation
10427 PetSafe Way
Knoxville, TN 37932
(865) 777-5404
www.petsafe.net

©2016 Radio Systems Corporation
400-1905-41/1